



DIE CAST
MACHINERY
LLC

(847) 360-9170

World Leader in Used Die Casting Machinery!

HOME

RECENT
ADDITIONS

INDUSTRY
SERVICES

JOIN OUR
MAILING LIST

SELL US
YOUR MACHINE

If we can be of any assistance or if you have any questions,
please don't hesitate to contact us at (847) 360-9170.

You may also visit our website at
<https://www.diecastmachinery.com>

Thank you!

PRICE \$50.00

USER'S MANUAL

SL-1200 FOR

GENERAL ELECTRIC



S/N: 32287-07
March 16, 2007

Robotic Servo Metal Ladling System

Your "Window to the World"® of Die Casting Automation and Consumable Products

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

ADVANCE



Please refer to the second half of this book for more products available from Advance!



Advance[®]

Features

Technical Specifications

Unpacking and Setup

Programming

Maintenance and Adjustments

Troubleshooting

Technical Documentation

Replacement Parts

Features **Technical Specifications** **Unpacking and Setup** **Programming** **Maintenance and Adjustments** **Troubleshooting** **Technical Documentation** **Replacement Parts**



FEATURES

The Advance Robotic Servo Ladler, **Model SL-1200** is designed to be used with 600-1200-ton diecast machines. It features a control assembly that houses the electronic circuitry and operator station, a remote operator panel that houses the switching and status indicators, a mechanism assembly, and two 30-foot cables with connectors.

The Ladlers use servo motors and gear boxes so that no belts, pulleys, or cams are needed on the internal mechanisms. The drive system uses brushless servo motors with encoders that use closed-loop feedback to assure consistent shot-size repeatability and arm positioning from shot-to-shot, as well as smooth acceleration and deceleration through all speed changes.

The heavy-duty arm assembly uses a double reduction worm-gear reducer that direct-drives the crank arm. The cup assembly uses a heavy-duty worm-gear reducer that drives chain linkage for smooth pouring.

The Ladler can simultaneously rotate the ladle cup while moving the arm. This dual action provides two benefits:

- It ensures that the pouring metal will always accurately flow into the shot-sleeve pour hole (referred to as the “drip move”).
- It allows the operator to program the cup to rotate to the horizontal position while the arm is returning home after pouring, thus reducing the overall cycle time.

Advance Products “quick-change” ladle cups need no tools to install. Simply slide the cup onto the pivot shaft, and secure it with a steel pin.

The Ladler is controlled by a Mitsubishi PLC that is standard on all Advance products. The operator station uses an easy-to-read LCD (liquid-crystal display) with the MVA PC or a 1/4 VGA touch screen. Each program is easy to set up, and is menu-prompted, so that no previous programming experience is necessary. The unit can store up to five hundred programs for touch screens and two hundred programs for the MVA PC.

The remote operator panel features rotary switches to operate the ladler. The controls will:

- Select an automatic or manual operation.
- Control forward or backward arm movement.
- Adjust the shot-size during manual and automatic cycles with “on the fly” changes.

Pushbuttons are used to start an “auto cycle” and a “homing” sequence. An array of status indicators light to show the operator when:

- There is no metal in the pot.
- The metal in the pot is low.
- An automatic cycle is in progress.
- An automatic cycle has been aborted.
- The 2nd metal probe is in use, or the probes are defective.

There are also indicators that light to show the positions of the ladler arm and the ladle cup.


The Advance Robotic Servo Ladler uses state-of-the-art technology, and is designed for safe, reliable service. It is the ideal product for those who want to achieve top performance from a ladler.

SYSTEM TECHNICAL SPECIFICATIONS


ADVANCE ROBOTIC SERVO LADLER - MODEL 1200

Shot-Size Repeatability	99+%
Mechanical Stroke	72 inches
Pouring Capacity (excludes cup)	25 pounds
Programmable Speed	40 inches-per-second.
Positioning Repeatability050 inches.
Maximum Number of Stored Programs	500.
Power Requirements	208-230 VAC, 3-phase 60Hz, 20-ampere feeding a transformer in a standard
Transformer Requirements	3 KVA.
Dimensions:	
Control Box	See page 1-3.
Ladler Dimensions	(See illustrations on pages 1-2).
Weight:	
Mechanism	750 lbs.
Control Assembly	250 lbs.


Advance Products Corporation reserves the right to change specifications at any time without incurring any obligation to incorporate changes in products previously sold.

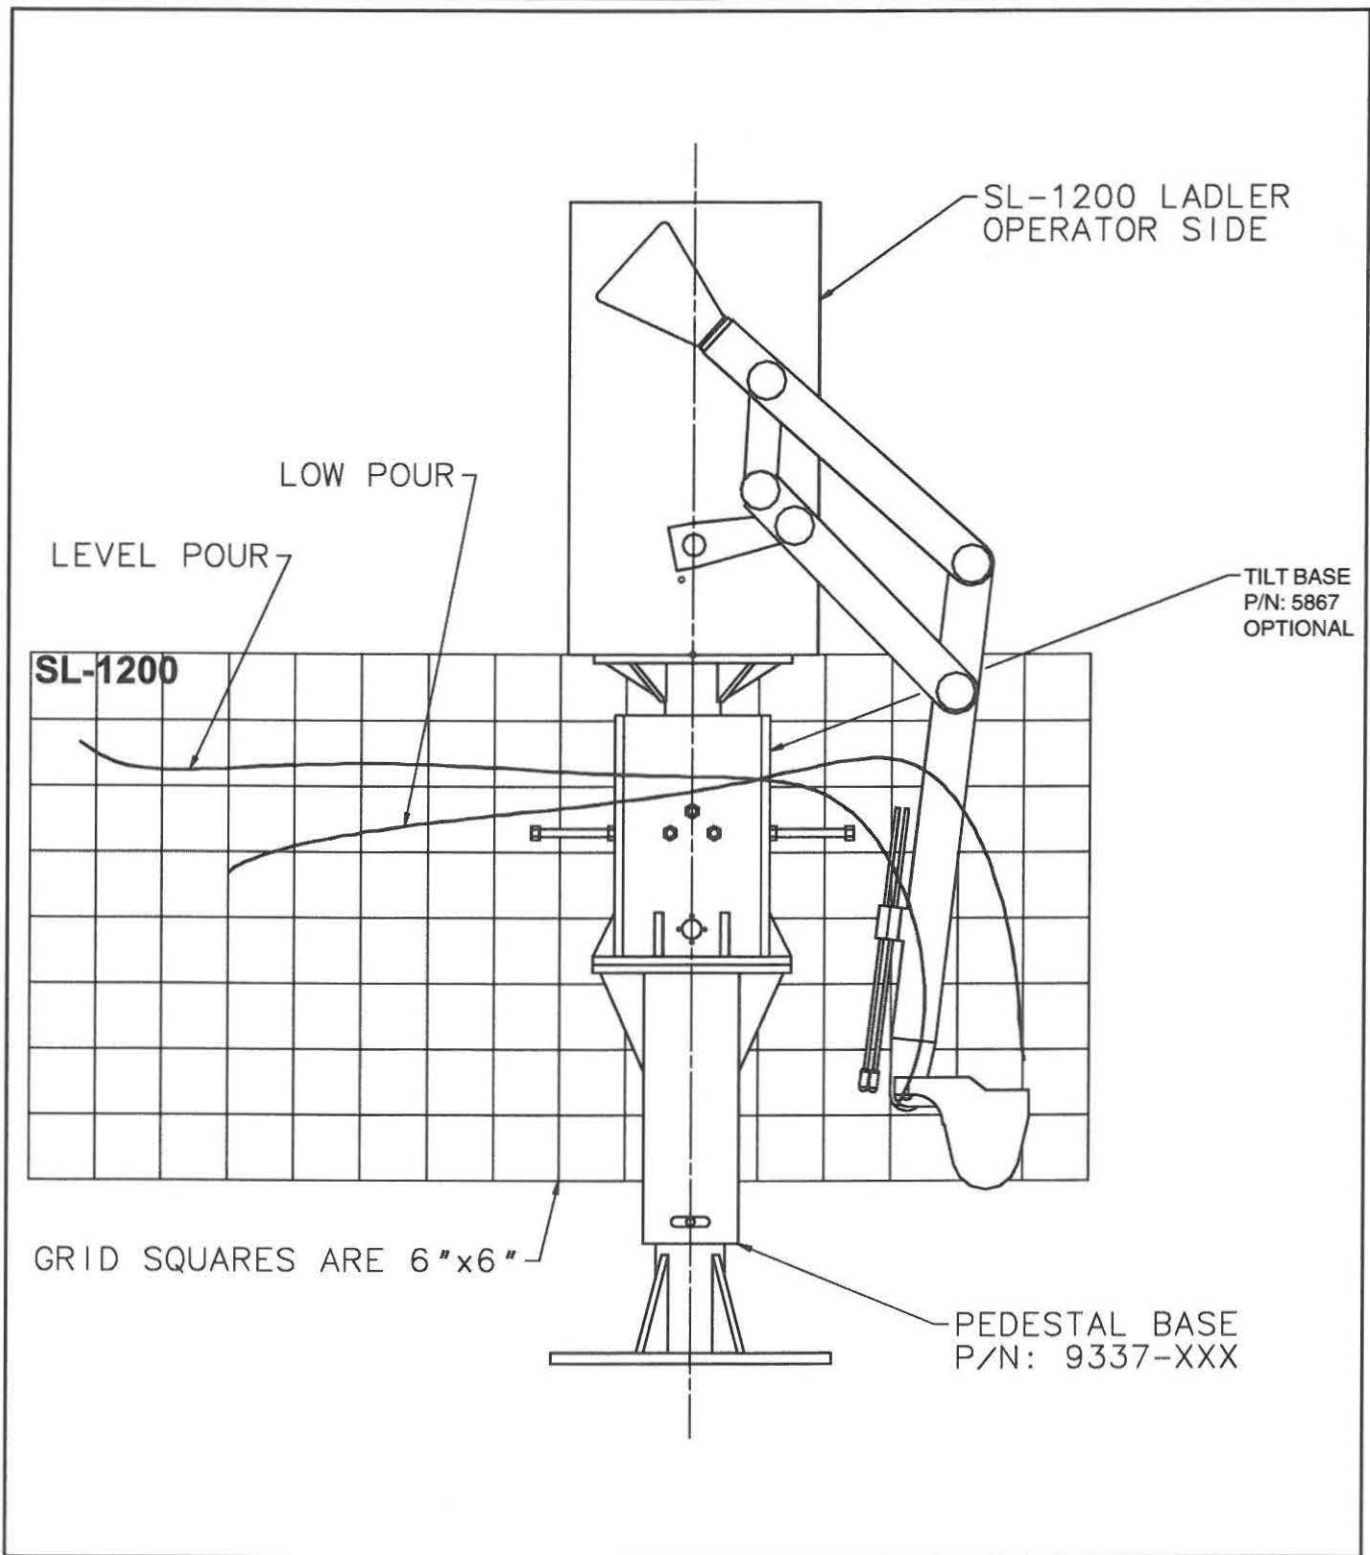

SL-1200

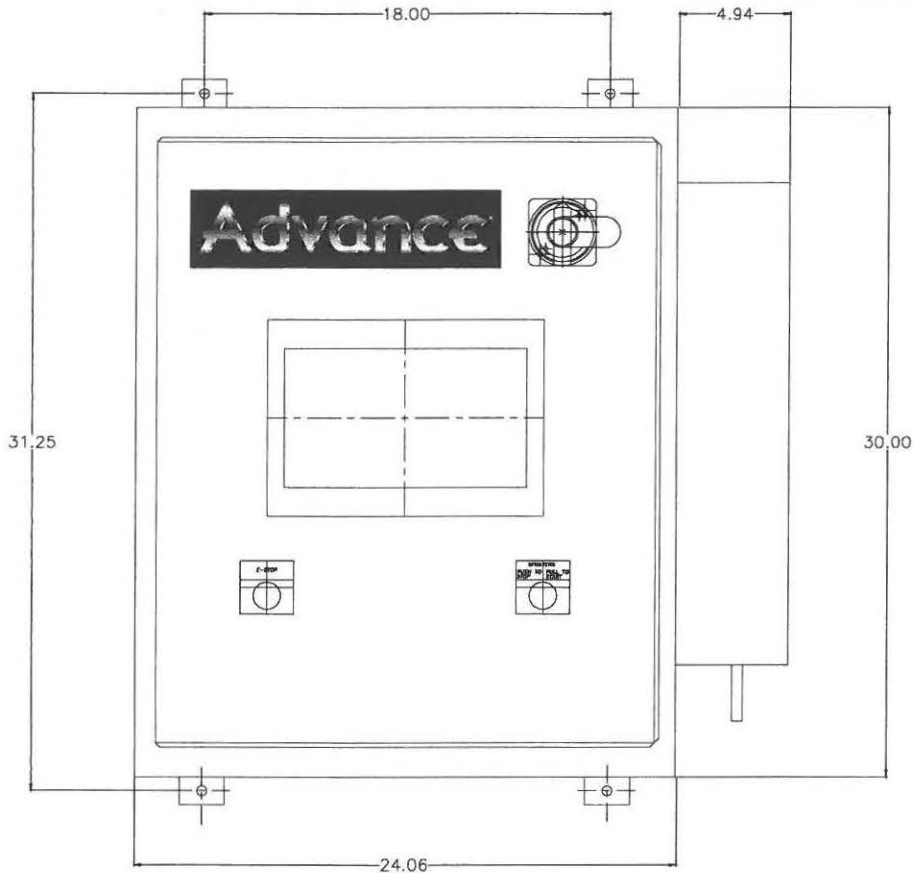

Cabinet Front

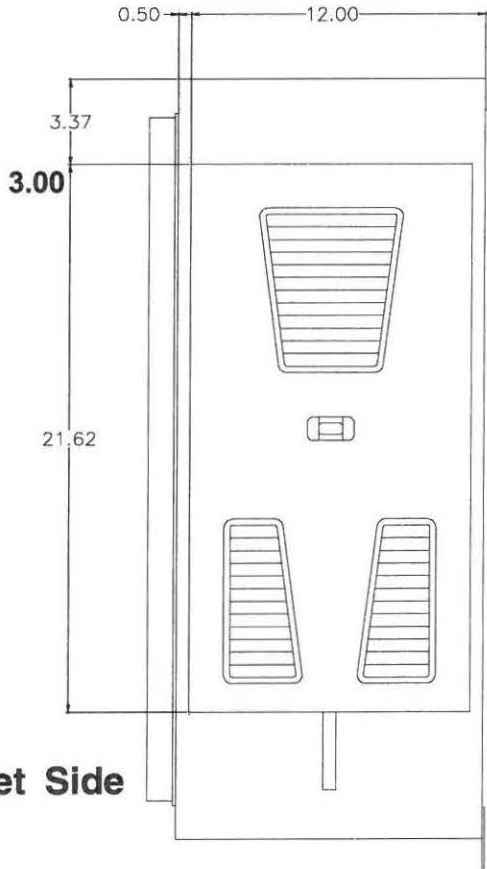

Cabinet Side

SL-1200 Electrical Cabinet

UNPACKING AND SETUP

- 2 -

UNPACKING

The Advance Ladler system consists of:

- The ladler mechanism
- The control box
- The remote operator's panel
- Two 30' cables with connectors
- Technical manual
- Optional pedestal
- Electrical schematic

WARNING: THE LADLE MECHANISM IS VERY TOP HEAVY. MAKE SURE THAT A HOIST IS ATTACHED TO THE EYELETS AT THE TOP OF THE MECHANISM BEFORE REMOVING THE BASE PLATE MOUNTING BOLTS. DO NOT LIFT THE MECHANISM BY THE ARMS OR DAMAGE TO THE GEARBOX WILL OCCUR.

1. Carefully unpack the shipping crates and cardboard boxes and lay the contents out so that you can easily identify and access them.
2. Move the control box to the desired location.
3. Place the remote operator's panel at its desired location. NOTE: You can hang the panel on a wall, or mount it to a stationary support. Use the mounting holes that are provided in the back of the case for this purpose.
4. Set up the pedestal near the metal container. You will anchor the pedestal after you set up the ladler mechanism and position the assembly.
5. Use a hoist and hook a chain through the eyelets provided in the top of the ladler mechanism. Lift the mechanism and set it on the pedestal so the mounting holes align, then secure the mechanism to the pedestal with the appropriate


6. Bolt the pedestal to the floor.

WARNING: DO NOT ALLOW THE MECHANISM AND PEDESTAL ASSEMBLY TO FREE-STAND. IT IS VERY TOP HEAVY. UNTIL THE PEDESTAL IS ANCHORED TO THE FLOOR, USE SOME SORT OF SUPPORT AT THE TOP OF THE MECHANISM TO PREVENT IT FROM FALLING OVER.

MOUNTING THE CONTROL PANEL

CAUTION: The control must be free standing. Do not mount it on the die casting machine where vibrations could damage its components.

If you intend to leave the control panel free-standing, we suggest that you use an ADVANCE floor stand, shown below, which is made especially for the control panel. **Locate control and bolt stand to the floor.**

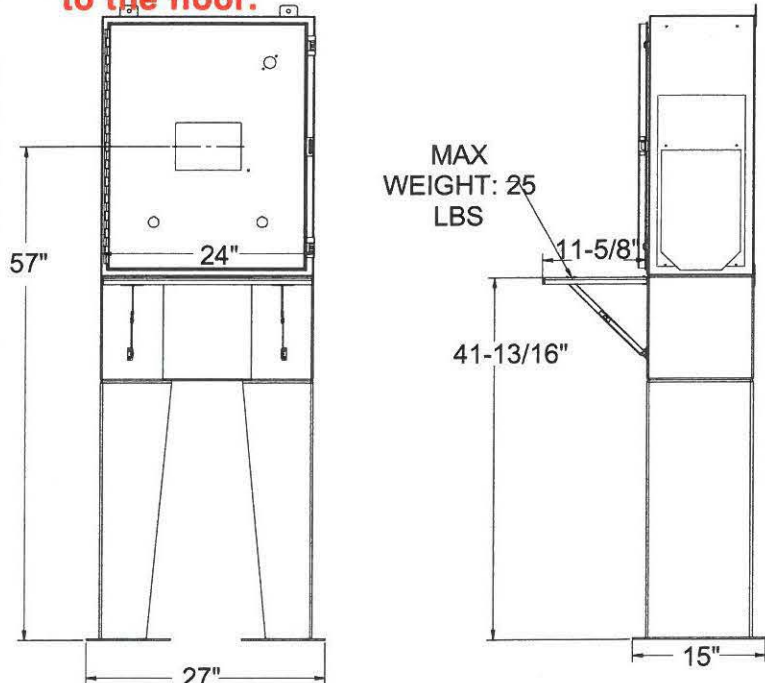


CONNECTING THE CABLES

Refer to Figure 2-1 for the following steps.

1. On the control box, raise the locking arms on the remote cable connector. Insert the male end of the remote cable into the connector as far as possible.
2. Similarly connect the male end of the mechanism cables to the other control box connector.
3. Connect the free end of the mechanism cables to the ladler.

Lower the locking arms to secure the connectors.

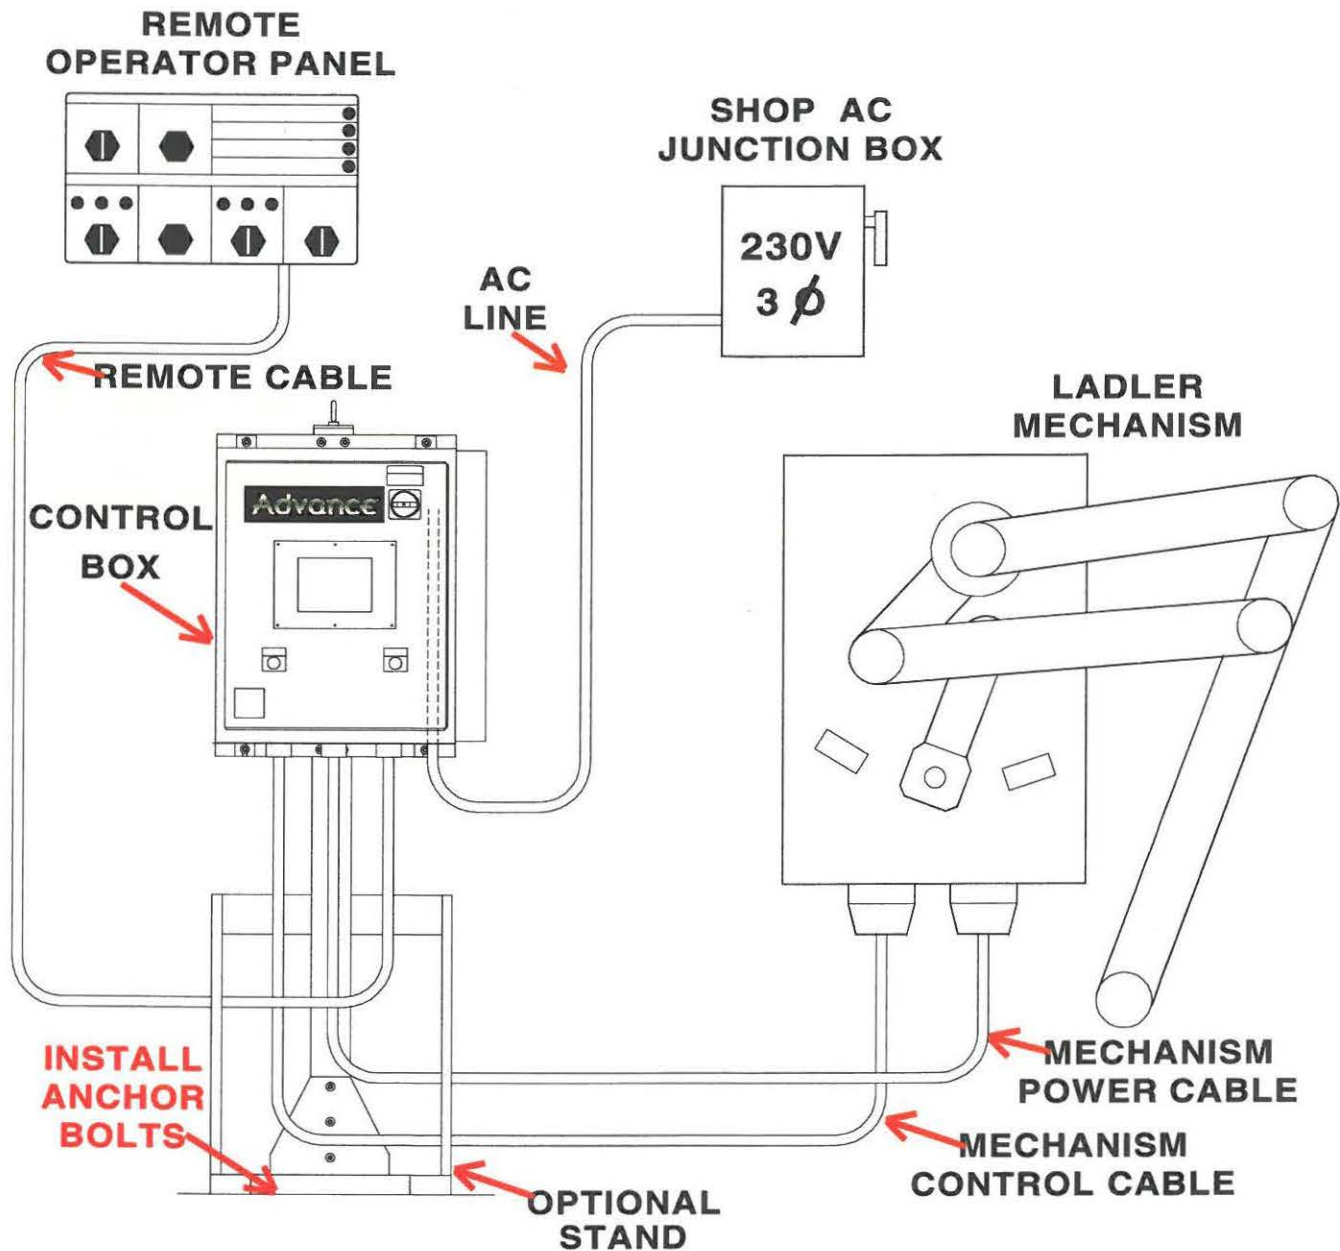

Connecting The Cables
FIGURE 2-1

CONNECTING THE AC POWER


WARNING: BEFORE WIRING THE LADLER'S CONTROL BOX, TURN OFF AC POWER AT THE THE SHOP'S JUNCTION BOX. FAILURE TO DO THIS COULD RESULT IN ELECTRICAL SHOCK, OR EQUIPMENT, OR SHOP DAMAGE.

1. Refer to Figure 2-2 and connect the wires from a power cable coming from the shop's junction box to the screw terminals of the ac disconnect terminal block inside the control box, as shown.

NOTE: The control panel is factory wired for 208-230 VAC, 3-phase standard. Optional transformers for 480 VAC -(US). 380/415 VAC (CE), 600 VAC (CAN) are available upon request.

If the red LED on the phase monitor is not on, reverse L1 & L2 or L2 & L3 to correct the incoming phase.

**208 TO 230 VAC
3 PHASE ONLY!!!!**

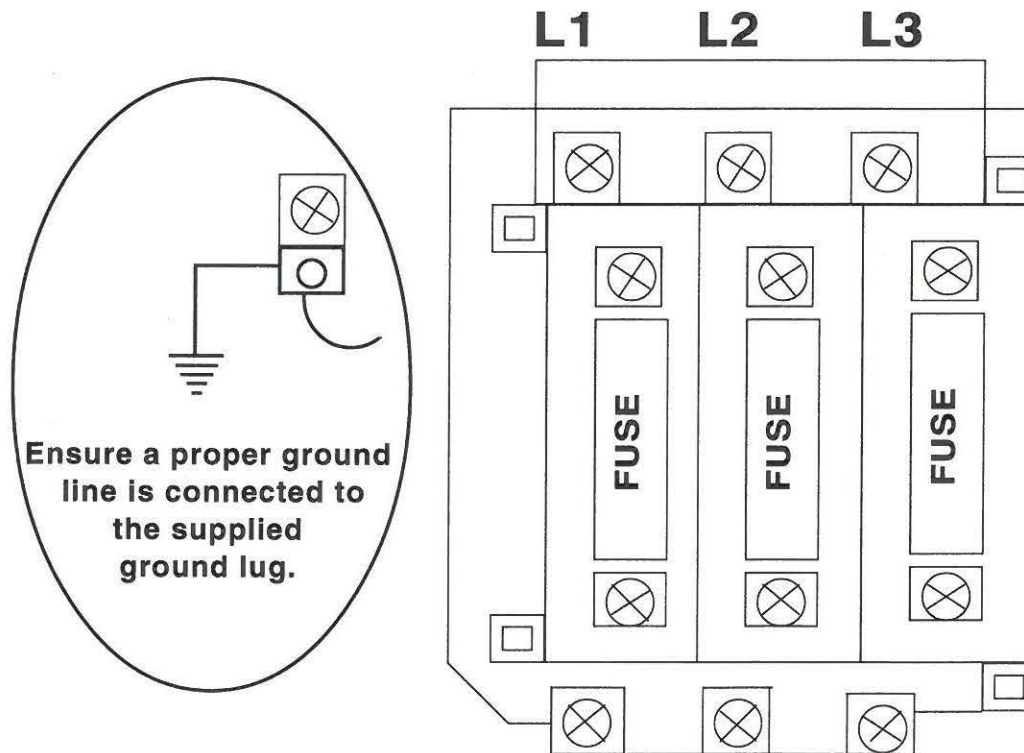

**POWER
WIRING**

Connecting The Power Cable
FIGURE 2-2

CONNECTING THE ELECTRICAL INTERFACE

The electrical interface is shown in the "Technical Documentation" section.

The terminal block interface points for these relays are located in the lower left section of the control box.

The factory-standard coil voltage for isolation relays is 120VAC. The actual relays that are installed may be different, if requested by the customer. Before making connections to interface terminals, verify the voltage of the installed relays.

The following terminals are used in the electrical interface. A description of each terminal is also included.

1341 - COMMON

This is the common side of the coils of the isolation relays. The neutral side of the source should be connected here.

1340 - DIE CLOSED

This is an input from the die cast machine indicating that the die is closed and locked. It must be present to enable the ladle to pour, and also break and remake before the ladle will pour on the next cycle.

1350 - ROD BACK

This is an input from the die cast machine indicating that the shot rod is fully retracted. It must be present to enable the ladle to pour, and also break and remake before the ladle will pour on the next cycle.

1360 - AUTOMATIC ENABLE

This is an input from the die cast machine enabling the ladle to move past the home position during a cycle. Normally, this comes from a ladle on/off switch located on the die cast machine's control panel. However, if the installation requires, this interface signal may be used during each cycle to prevent a collision by keeping the ladle from moving into the shot sleeve area until signaled to do so.

1370 - CYCLE START


This is an input from the die cast machine which may be used to start each cycle of the ladle. Normally, the Cycle Delay timer is used to start each new cycle. If the Cycle Start input is used, this timer should be disabled. If this timer is not disabled, the ladle will start a new cycle before the die cast machine signals it to do so. Refer to page 3-13.

1380 & 1381 - POUR COMPLETE

This is a set of dry contacts that close at the end of the pour sequence. It should be used as the input to the die cast machine to make the shot. The contact closure is delayed from the time the cup reaches the third pour angle by the Pour Drain and Shot Delay timers. The length of time the contacts remain closed is controlled by the Pour Complete Timer.

LADLER CUSTOMER INTERFACE

ISOLATION RELAYS

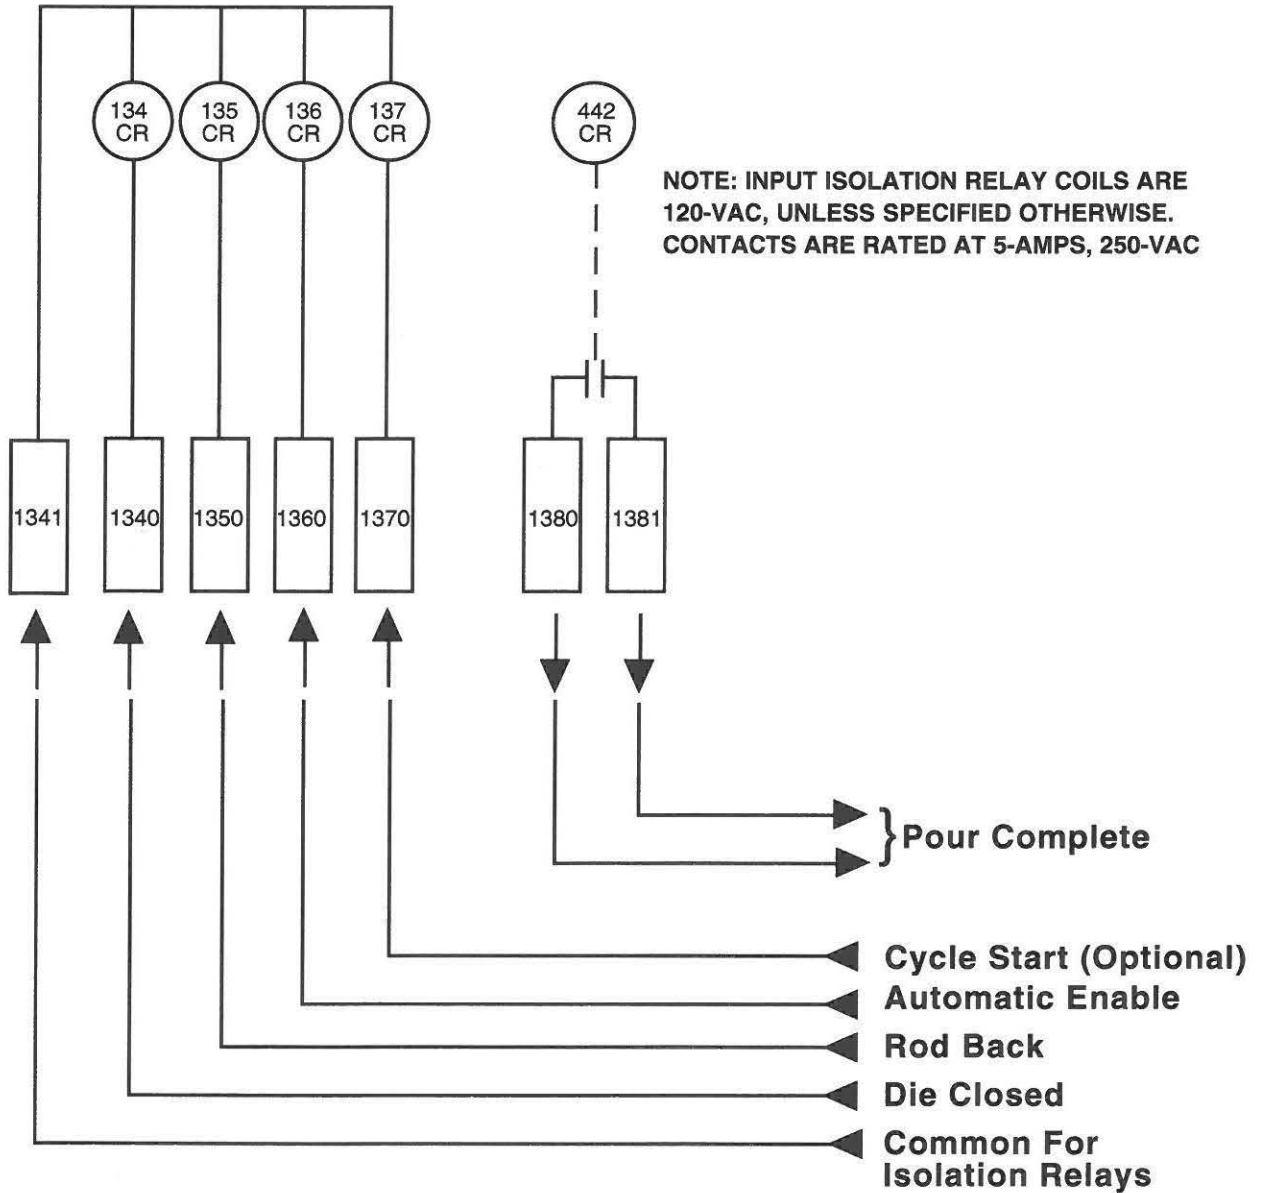


Ladler Customer Interface
FIGURE 2-3

NOTE: See pages 6-5 and 6-6 for optional interface wiring options.

INSTALLING THE LADLE CUP

Slide the ladle cup over the end of the arm shaft and align the mounting holes (see Figure 2-4). Install the pin through the mounting holes to hold the cup in place.

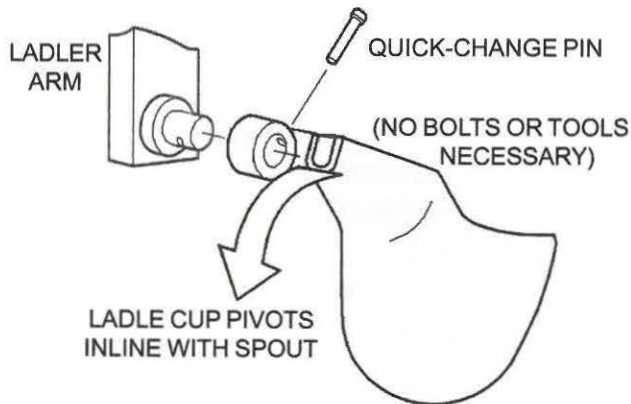

Installing The Ladle Cup
FIGURE 2-4

INITIAL POWER-UP

NOTE: Be sure to perform final inspection before powering up the ladle. During the initial power-up, be prepared to immediately turn off the power in the event the mechanism tries to “run away” due to possible damage during shipment or the connecting of power/interface wiring. Also, be sure that there are no personnel in the path of the ladle arm.

1. At the control box, turn the power disconnect switch to **ON**.
2. Apply power.
3. After power-up, the Mitsubishi touch screen will show the initial power up screen shown on page 3-2.

FINAL INSPECTION

Before powering up the ladler, inspect the following items.

1. Make sure each end of both the remote and mechanism cables are locked to their jacks.
2. Check all cables inside the control box for loose connections that may have occurred during shipping or the connecting of power/interface wiring.
3. Check cable connections inside the cabinet at the bottom for loose strands of wire that may cause shorts between wire terminations.
4. **Make sure ladler is bolted to the floor.**

The software used by the Mitsubishi touch screen in the ladle system is an application oriented program that is used as an operator interface. By using this operator interface, the operator can change several variables, or parameters, involved in the ladle system to modify it's behavior as desired.

The software system uses different menus as options to change the variables or parameters of the ladle. These menus are shown in Figure 3-1 below:

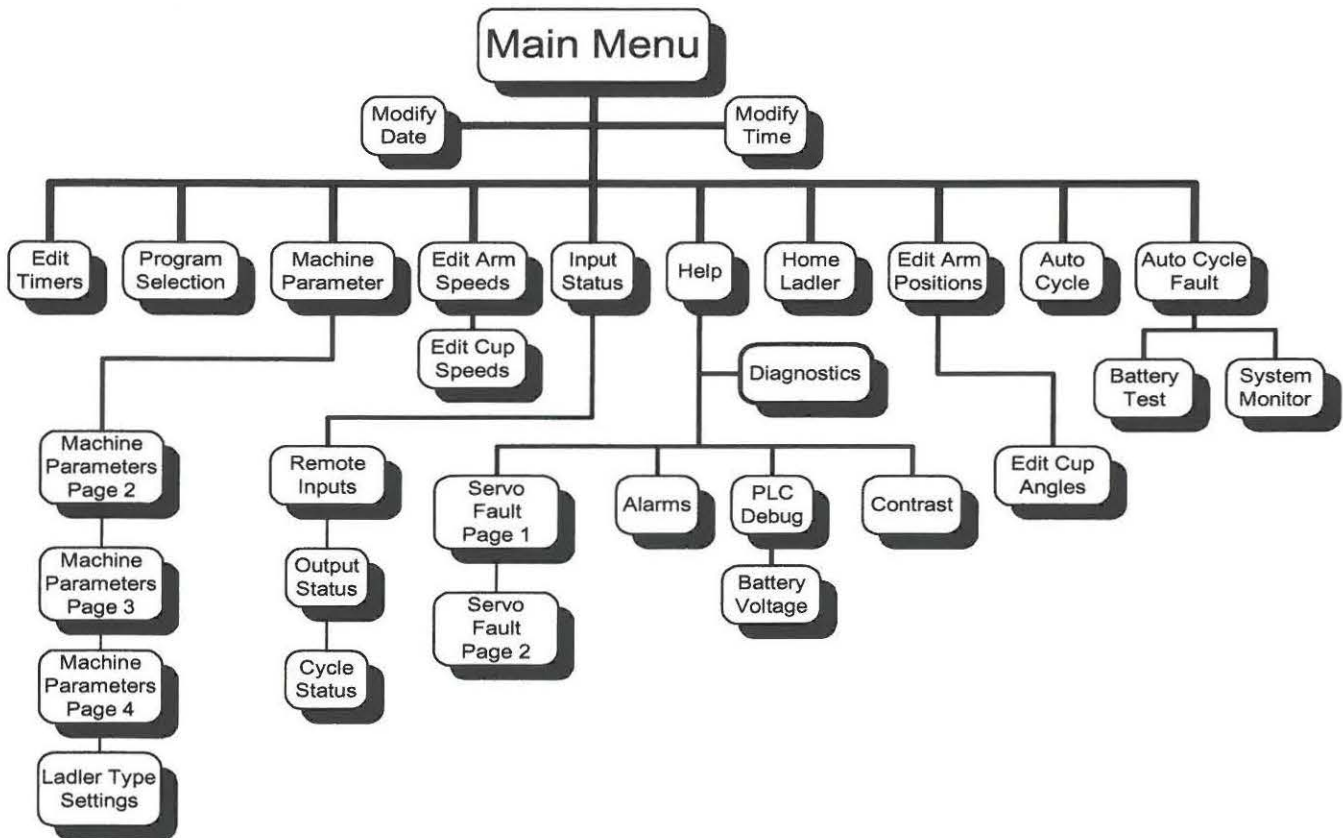


Figure 3-1 APC Ladle software diagram


MAIN MENU

To change any program or machine parameter of the ladler system, use the operator panel and its different sections on the touch screen. A general procedure of how the operator interacts with the ladler system, via the operator panel, will be explained below and before entering the software menus explanation.

To select a menu, touch the desired choice. Once selected, a menu for the corresponding screen will be displayed.

INITIAL AND NORMAL RUNNING MENUS

Apply power. The display on the operator interface screen will show the startup screen shown in Figure 3-2.

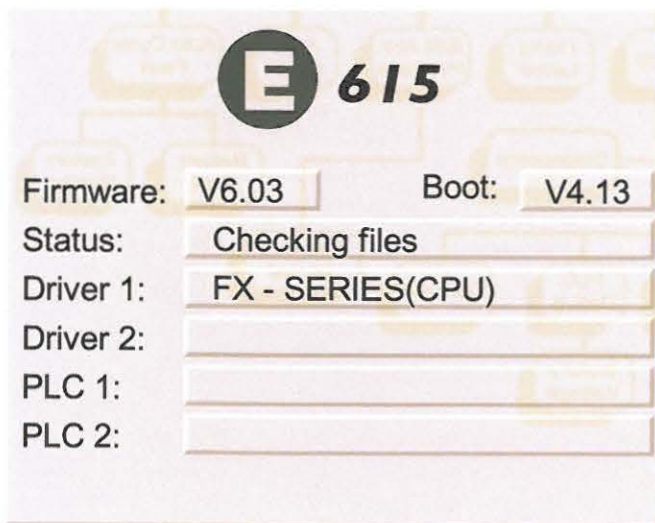

Power-up Screen Figure 3-2

After the power-up screen is displayed, the Main Menu screen is displayed.

This is the first screen as shown in Figure 3-1 on page 3-1. From this screen all other screens may be reached.



Main Menu Figure 3-3


This screen shows the actual ladler program that is loaded into memory. The ladler program is identified by the "Using Program:" on the display, followed by the program name. In the example, the program name used is: AAAAAAAAAA.

The date is displayed in Standard Date Format in the upper left hand corner with the month listed first followed by the day and then the year. In this case, the year is 2023, the month is March and the day is the 7th.

The time is displayed in the upper right hand corner. Either the date or the time may be modified by touching the desired selection. At that time the following menu, Figure 3-4 is displayed. Enter the date or time. If a time entry is being made, then an AM/PM selection screen is displayed for input as shown in Figure 3-5.



Numeric Entry Screen Figure 3-4

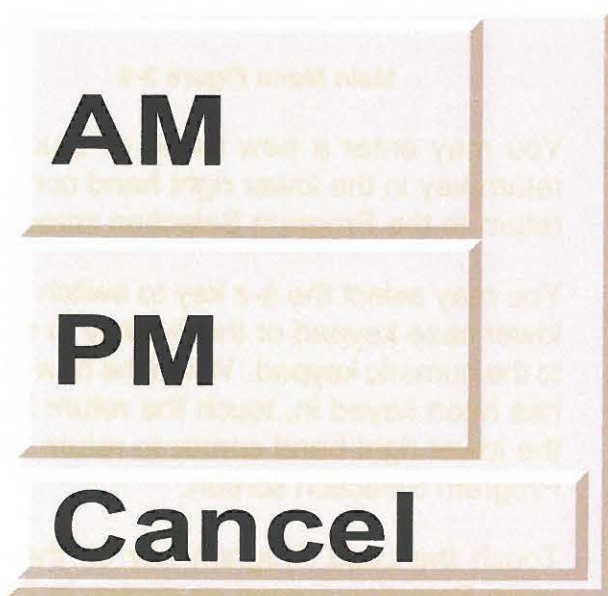

AM/PM Entry Screen Figure 3-5

HOME

Performing a Home Sequence is required after power is applied and before running an auto cycle. This allows setting a zero reference position, relative to a programmed move in a user program. The home key is used to perform a ladler home sequence. After touching the HOME LADLER key on the touch screen, or pushing the PUSH TO "GO HOME" button on the remote operator panel, the following screen appears.

Note: The switch on the Remote Operator Station must be in the MANUAL position to start a homing cycle.



Home Screen Figure 3-6

Once the Start Home Sequence key is touched, the ladler cup will go to its home position then the arm will begin moving back to the home position. During that time, the current cup and arm positions are displayed next to *Current Arm Position* and *Current Cup Position*.

The Stop Move key should be pressed if it is necessary to abort the move.

Press the MAIN key when you are ready to return to the Main Menu.

The NEXT key is inactive at this time.

PROGRAM SELECTION



Main Menu Figure 3-7

Program selection can be initiated by touching either the New Program key or the current program name in the Using Program box on the Main Menu as shown in Figure 3-7. Then the program selection screen, similar to the one in Figure 3-8 is displayed.



Program Selection Screen Figure 3-8

Touch the Save Program key and the program that was being edited is saved with the name listed in the Recipe box. (This is automatic and not really required.) To change the name of the program,

touch the name, then enter a new name on the keypad similar to Figure 3-9.

Touch the Clear Program key and the program that was being edited is erased.

Touch the name in the Recipe box and the screen similar to the one shown in Figure 3-9 is displayed.




Main Menu Figure 3-9

You may enter a new name or touch the return key in the lower right hand corner to return to the Program Selection screen.

You may select the a-z key to switch to the lower case keypad or the 0-9 key to switch to the numeric keypad. When the new name has been keyed in, touch the return key in the lower right hand corner to return to the Program Selection screen.

Touch the Load Program key on the Program Selection screen as shown in Figure 3-8 and a screen similar to the one in Figure 3-10 is displayed. Touch the desired program name or touch the Cancel key. This will bring you back to the Program Selection screen depicted in Figure 3-8.

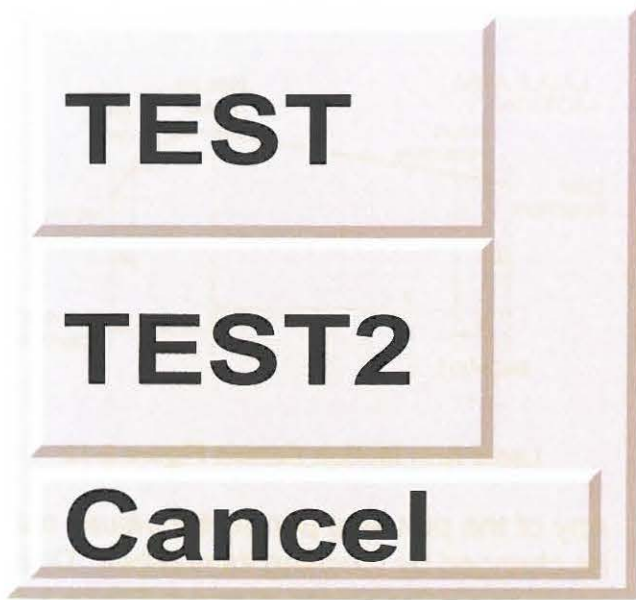

Program List Screen Figure 3-10

EDIT ARM POSITIONS

Editing arm positions may be initiated by pressing the "Edit Positions" key on the Main Menu as shown in Figure 3-7. Then the Edit Arm Positions screen, similar to the one in Figure 3-11, is displayed.

Edit Arm Positions	
Arm Pour Position	00.00
Arm Drip Distance	00.00
Arm Backout Distance	00.00
Arm Max Back Position	00.00
Arm Spill Off Distance	00.00
<hr/>	
Current Arm Position	000.00
<div style="display: flex; justify-content: space-between; width: 100%;"> MAIN PREV NEXT </div>	

Edit Arm Positions Screen Figure 3-11

Refer to Figures 3-11 and 3-12 for the parameter descriptions listed below.


The **Pour Position** is the distance in inches from the home position in which to pour the metal into the sleeve.

The **Drip Distance** is the distance in inches from the pour position to the drip position.

The **Backout Distance** (optional) is the distance in inches for the ladler to move the arm back away from the shot sleeve before the cup levels back to home.

The **Max Back Position** is the distance in negative inches (red) from home that the arm can travel into the pot.

The **Spill Off Distance** is the returning distance in inches that the arm moves from the metal during Fill to spill off excess metal.

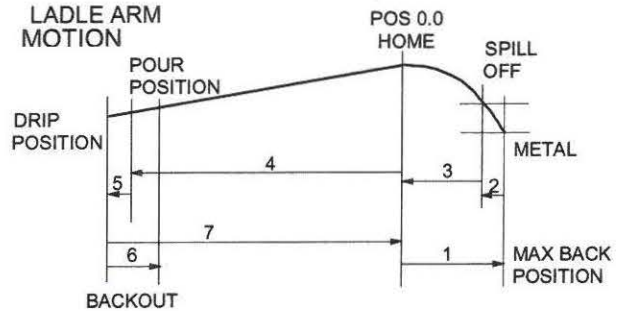

Ladle Arm Motion Screen Figure 3-12

Any of the previous parameter values may be changed by touching its number. Doing so will cause the screen shown in Figure 3-13 to be displayed.



Numeric Keypad Figure 3-13

To change the current value, enter the new number using the numeric keypad, followed

by the <ENTER> key to save the new value.

Refer again to Figure 3-11, Edit Arm Positions screen. Notice the Current Arm Position with its value shown on a yellow field. This value may be changed by jogging the arm using the Remote Operator Panel as described on page 3-26.

Touching the "Next" key will cause the Edit Cup Angles screen to be displayed as shown in Figure 3-14.

EDIT CUP ANGLES SETTINGS

Edit Cup Angles	
Cup Fill Angle	00.00
Cup First Pour Angle	00.00
Cup Second Pour Angle	00.00
Cup Third Pour Angle	00.00
Arm Drip Move Start Angle	00.00
Cup PreFill Angle	00.00
Current Cup Angle	000.00
MAIN	PREV NEXT

Edit Cup Angles Figure 3-14

The **Cup Fill Angle**, as shown in Figure 3-17, is the angle in negative degrees (red) from horizontal that the cup should be filled in the furnace dip well.

To maximize performance in your pouring operation, 3 different pour angles are offered. Note that Figure 3-16 shows the 1st, 2nd and 3rd pour Angles.

The **Cup First Pour Angle** is the angle in degrees from horizontal that the cup should be at to begin the pour. This angle should be slight to prevent spillage of the metal all over the sleeve.

The **Second Pour Angle** is the angle in degrees from horizontal that the cup should be at in the middle of the pour.

The **Third Pour Angle** is the angle in degrees from horizontal that the cup should be at when near the end of the pour. As shown in Figure 3-16, it should be at its greatest angle for this part of the cycle.

The **Arm Drip Move Start Angle** is the angle in degrees from horizontal that the cup is in at the end of the pour and at the beginning of the arm drip move to finish dripping the last of its payload into the sleeve.

The **Cup PreFill Angle** is the angle that the cup is from horizontal as it is moved into the furnace dip well. This angle in negative degrees should be such to reduce the wave action into the molten metal to prevent splashing on the cell equipment and operator.

The current Cup Angle is displayed at the bottom of the screen and can be modified by placing the switch on the Remote Operator Panel to MANUAL and jogging the ladler.

Any of the previous parameter values may be changed by touching its number. Doing so will cause the screen shown in Figure 3-15 to be displayed.




Numeric Keypad Figure 3-15

To change the current value, enter the new number using the numeric keypad, followed by the <ENTER> key to save the new value.


Refer again to Figure 3-14, Edit Cup Angles screen. Notice the Current Cup Angle with its value shown on a yellow field. This value may be changed by jogging the cup using the Remote Operator Panel as described on page 3-26.

Touch the PREV key to return to the Edit Arm Position screen.

Touch the NEXT key go to the Arm Speed Settings screen as shown in Figure 3-18.

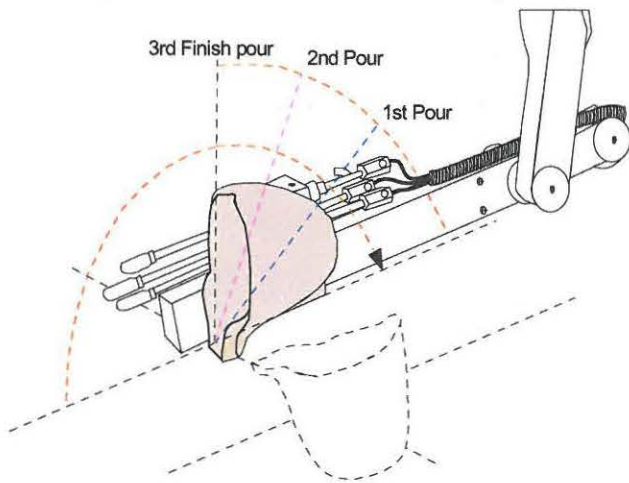

Pour Angles Figure 3-16

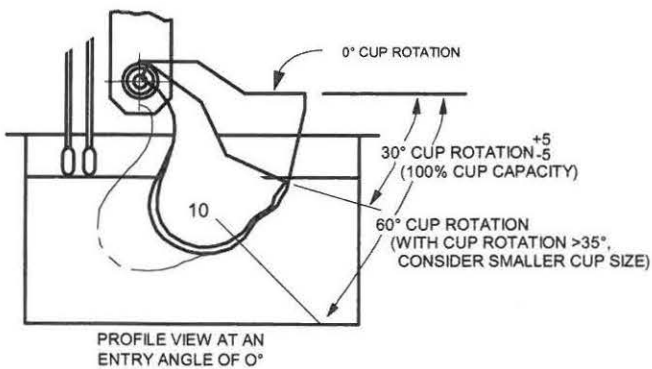

Fill Angle Figure 3-17

SPEED SETTINGS

To enter Arm Speed Setting, touch the Edit Speeds key on the Main Menu as depicted below.



Main Menu Figure 3-18

Arm Speed Settings	
Arm Move To Metal	00.00
Arm Move To Spill Off	00.00
Arm Move To Home/Wait	00.00
Arm Move To Pour Position	00.00
Arm Move To Drip Position	00.00
Arm Move To Backout	00.00
Arm Move Back To Home	00.00

MAIN PREV NEXT

Arm Speed Settings Figure 3-19

All speeds in Figure 3-19 are in inches per second.

Any speed of the ladle cycle can be changed in this menu. This cycle is shown in Figure 3-21.

Refer to Figures 3-19 and 3-21 for the following parameter descriptions.

The **Arm Move To Metal** speed is the speed of the arm during step 1.

The **Arm Move To Spill Off** speed is the speed of the arm during step 2.

The **Arm Move To Home/Wait** speed is the speed of the arm during step 3.

The **Arm Move To Pour Position** speed is the speed of the arm during step 4.

The **Arm Move To Drip Position** speed is the speed of the arm during step 5.

The **Arm Move To Backout** (optional) speed is the speed of the arm during step 6.

The **Arm Move To Back To Home** speed is the speed of the arm during step 7.


Any of the previous parameter values may be changed by touching its number. Doing so will cause the screen shown in Figure 3-20 to be displayed.



Numeric Keypad Figure 3-20

To change the current value, enter the new number using the numeric keypad, followed by the <ENTER> key to save the new value.

After the Enter Key or the ESC key is pressed as shown in Figure 3-20, the Arm Speed Settings screen reappears for further selections.

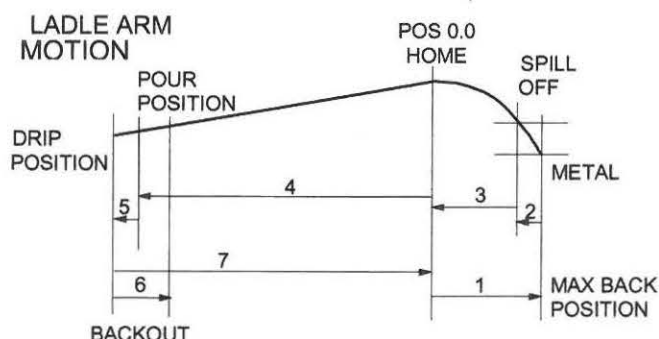

Ladle Arm Motion Figure 3-21

Touch MAIN or PREV to return to the Main Menu.

Touch NEXT to display the Cup Speed Settings as shown in Figure 3-22.

Cup Speed Settings	
Cup Move To PreFill Angle	00.00
Cup Move To Fill Angle	00.00
Cup Move To Home From Fill	00.00
Cup Move To 1st Angle	00.00
Cup Move To 2nd Angle	00.00
Cup Move To 3rd Angle	00.00
Cup Move To Home From Pour	00.00

At the bottom of the screen are three buttons: MAIN, PREV, and NEXT.

Cup Speed Settings Figure 3-22

All speeds in Figure 3-22 are a value from minimum to a maximum of 100%. Due to different gear ratios, this is not in degrees per second.

Refer to Figures 3-21 and 3-22 for cup speed settings descriptions.

The **Cup Move To PreFill Angle** speed is the

speed of the cup rotation during step 1.

The **Cup Move To Fill Angle** speed is the speed of the cup rotation during step 2.

The **Cup Move To Home From Fill** speed is the speed of the cup rotation during step 3.

The **Cup Move To 1st Angle** speed is the speed of the cup rotation during step 4.

The **Cup Move To 2nd Angle** speed is the speed of the cup rotation during step 4.

The **Cup Move To 3rd Angle** speed is the speed of the cup rotation during step 4.

The **Cup Move To Home From Pour** speed is the speed of the cup rotation during step 7.

Any of the previous parameter values may be changed by touching its number. Doing so will cause the screen shown in Figure 3-20 to be displayed.

To change the current value, enter the new number using the numeric keypad, followed by the <ENTER> key to save the new value. After the Enter Key or the ESC key is pressed as shown in Figure 3-20, the Cup Speed Settings screen reappears for further selections.

Touch MAIN in the lower left hand corner of the screen to return to the Main Menu.

Touch PREV to return to the Arm Speed Settings screen as shown in Figure 3-19.

Touch NEXT to display the Edit Timer Settings screen as shown in Figure 3-24.

TIMER SETTINGS

To enter the Timer Setting screen, touch the Edit Timers key on the Main Menu as shown in Figure 3-23.



Main Menu Figure 3-23

Edit Timer Settings	
Cup Soak Time	00.0
Cup Spill Off Time	00.0
Auto Abort Time	00.0
Pour Abort Time	00.0
Cup Drain Time	00.0
Shot Delay Time	00.0
Backout Move Time	00.0
Cycle Delay Time	00.0
Delay After Cycle Start	00.0
MAIN	PREV
	NEXT

Edit Timer Settings Screen Figure 3-24

All times in the Edit Timer Settings Screen are in seconds.

The **Cup Soak Timer** determines how long the cup remains in the metal while it is filling. An excessive value in this timer can cause premature bearing

wear at the arm cup end due to prolonged exposure at high temperatures.

The **Cup Spill Off Timer** determines how long the cup remains above the furnace to spill off excess metal before moving to the next home or pour position.

Auto Abort Timer permits temporary process delays to occur during a cycle. If the timer runs out before the auto enable signal is present, an AUTO ABORT CYCLE sequence occurs. The ladle will recycle to the metal and return to the home position.

This Abort sequence will occur three times by default values. After 3 Abort cycles, the ladle will do a Full Abort and empty the metal back at the furnace and return Home with the cup at the 90 Pouring Angle.

The **Pour Abort Timer** permits a wait time after the ladle has reached the pour position. It will wait for the Rod Back and Die Closed interface signals. If the timer runs out before both signals are present, a POUR ABORT sequence occurs. Excessive values set in this timer may affect the casting quality due to decreased metal temperature.

The **Cup Drain Timer** permits the metal to stop dripping from the cup at the end of a pour sequence before starting the Shot Delay Timer. It is started when the cup reaches the third pour angle.

The **Shot Delay Timer** starts when the Cup Drain Timer runs out. The arm will start its move back to the home position after the Cup Drain Timer elapses. When the Shot Delay Timer ends, the Pour Complete output will energize. This timer will allow the arm to start moving back before sending the Pour Complete.

The **Backout Move Timer** specifies the time in seconds that the arm will wait after the arm has completed a backout move.

The **Cycle Delay Timer** is used to synchronize the operation of the ladle with the normal cycle time of the die cast machine (DCM). This timer determines how long the ladle waits at home after completing a cycle before beginning the next cycle. The best setting would be the value that causes the ladle to reach the pour positions just as the Die Cast Machine is ready to make the next shot.

The Cycle Delay Timer can be disabled (See Machine Parameter List). Each new cycle would then be started by a Cycle Start (CS) input. This would be a single cycle mode of operation. The default setting of the Machine Parameter uses the Delay Timer.

The **Delay After Cycle Start Timer** specifies the total amount of time to wait at the beginning of a cycle start. This may be because of some special function that the operator or other machine must do.

Any of the previous parameter values may be changed by touching its number. Doing so will cause the screen shown in Figure 3-25 to be displayed.



Numeric Keypad Figure 3-25

To change the current value, enter the new number using the numeric keypad, followed by the <ENTER> key to save the new value.

Touch PREV to return to the previous screen.

Touch NEXT to go to the Edit Arm Positions screen as shown in Figure 3-11.


I/O STATUS

These menus can be displayed by choosing the I/O Status key on the Main Menu shown in Figure 3-26.




Main Menu Figure 3-26

The first screen shown is the INPUTS screen as shown in Figure 3-27. This screen shows the status of the digital inputs to the ladler system; for example, prox. switches, push buttons and some incoming signals from the customer. **If the status box is red, this means this input is off. If a green status box is displayed, it means the digital input or output is on.**

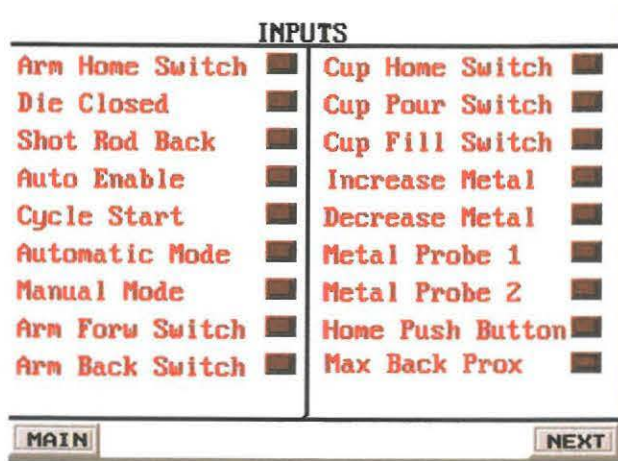


INPUTS Screen Figure 3-27

Touch the NEXT key to display the REMOTE INPUTS screen shown in Figure 3-28.

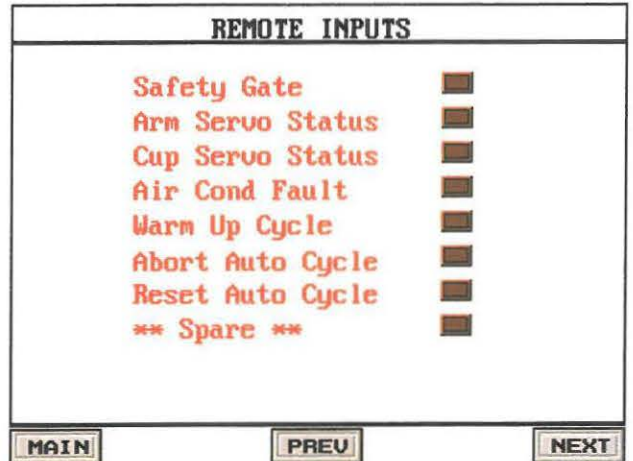

REMOTE INPUTS Screen Figure 3-28

Touch the NEXT key to display the OUTPUTS screen shown in Figure 3-29.

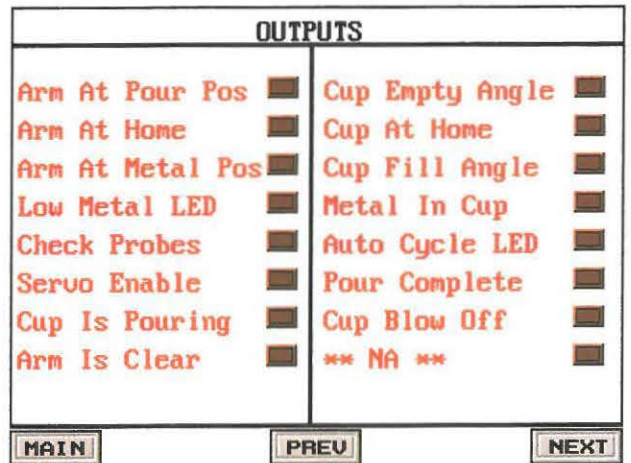

OUTPUTS Screen Figure 3-29

Touch the NEXT key to display the CYCLE STATUS screen shown in Figure 3-30.

CYCLE STATUS	
Auto Cycle OK <input type="checkbox"/>	Arm To Pour Pos. <input type="checkbox"/>
Arm To Metal Pos <input type="checkbox"/>	Cup Pour Metal <input type="checkbox"/>
Cup PreFill Move <input type="checkbox"/>	Arm Drip Move <input type="checkbox"/>
Cup Fill Angle <input type="checkbox"/>	Arm Backout <input type="checkbox"/>
Arm To Spill Off <input type="checkbox"/>	Cup Return Home <input type="checkbox"/>
Cup Move Home <input type="checkbox"/>	Pour Complete <input type="checkbox"/>
Arm To Home/Wait <input type="checkbox"/>	Arm Return Home <input type="checkbox"/>
Auto Cycle Fault <input type="checkbox"/>	<input type="button" value="Check Error"/>
<input type="button" value="MAIN"/>	<input type="button" value="PREV"/> <input type="button" value="NEXT"/>

CYCLE STATUS Screen Figure 3-30

Touch PREV to return to previous screens.

Touch MAIN to return to the Main Menu.

MACHINE PARAMETERS (Caution!)

In this section there are several menus containing the main machine parameters. By changing these parameters you can change the complete behavior of the ladler system. Great care must be taken in changing any of these parameters. ***These parameters should only be modified by qualified technical personnel.***

This section allows the user to change any of the parameters on the ladler system.

IMPORTANT: These parameters are set at the factory and are critical for proper machine operation. Modifying these parameters may cause machine damage and/or injury to personnel operating the ladler. Do not make any changes to these settings without a thorough understanding of each parameter. (See page 3-18.)

Before changing parameters, the Remote Operator Station must be in MANUAL and an authorization code must be entered and recognized by the system. Touch the Machine Parameter key on the Main Menu as depicted in Figure 3-31.



Main Menu Figure 3-31

The following Screen will be displayed for entry of the password.




Password Screen Figure 3-32

Touch the 0-9 key to switch to the numeric keypad.

Touch the 3 key, the 0 key and the 3 key. Touch the enter key in the lower right hand corner. The system returns to the main menu as shown in Figure 3-31 and displays LEVEL 1 OK. The system is now unlocked and Machine Setting modifications are possible. See page 3-18.


Touch the Machine Parameter key again and the first machine parameter screen similar to Figure 3-33 is shown.

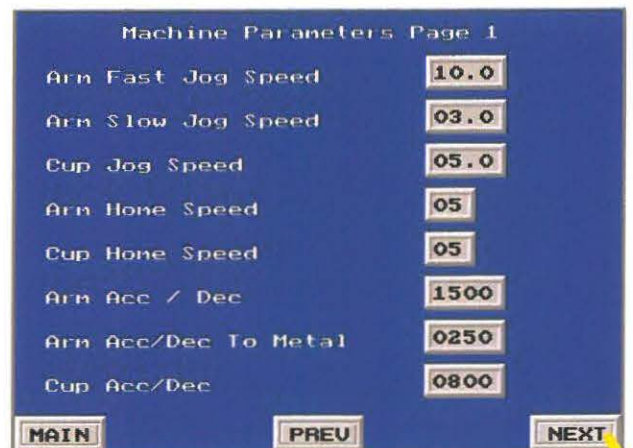

Machine Parameters Page 1 Figure 3-33


Any entry may be changed by touching its gray box, which will display the appropriate alpha or numeric keypad. To change a parameter value, enter a new value and press the <ENTER> key to accept it. If the selected value is out of range when entered, the parameter value will not be changed.

Touch the NEXT key to display the second machine parameters screen as shown below.

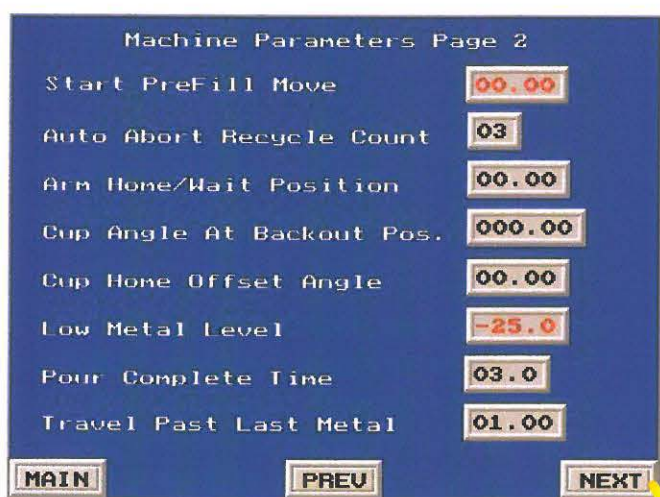

Machine Parameters Page 2 Figure 3-34

Touch the NEXT key to display the third machine parameters page as shown in Figure 3-35.

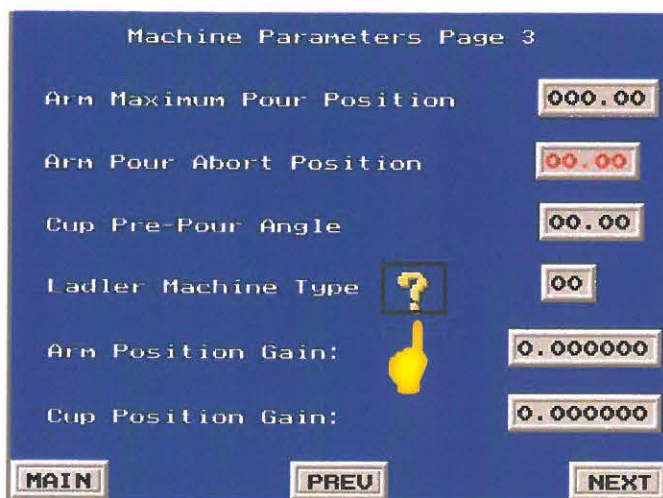

Machine Parameters Page 3 Figure 3-35

Note the big yellow question mark. For the MMI to run the correct program, the ladler type

must be accurate. To see the different ladler types, touch the question mark which will cause the following screen to be shown. Consult Advance Products for access code to change type and gain values. The gain value as shown in Figure 3-36 is used to calculate the position based on the current gear reduction which is based on the ladler model.


Ladler Type Setting : D550		
Arm Gain: D560		Cup Gain: D570
Type	Arm Gain	Cup Gain
1 = SL650	.00053	.002934
2 = SL1200	.00053	.000879
3 = SL1500	.00053	.002934
4 = SL2000	.00053	.0009398
5 = SL3000	.00053	.0009586

Contact Factory for Questions.

Ladler Type Figure 3-36

To select a different ladler type, just touch the appropriate ladler model number.

Machine Parameter Page 4 is accessed from Machine Parameters Page 3 as shown in Figure 3-35. Simply touch the NEXT key to display the fourth machine parameters page as shown in Figure 3-37.

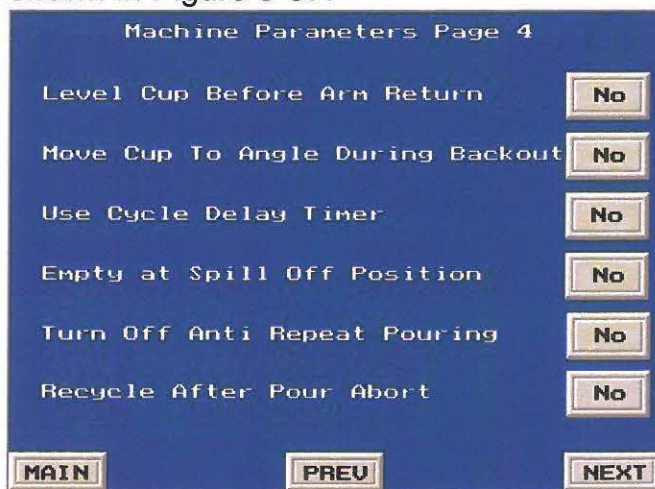

Machine Parameters Page 4 Figure 3-37


(Continued on Page 3-20.)

MACHINE PARAMETER DEFINITIONS

Parameter Description	Parameter Definition	Default Values
Arm Fast Jog Speed	The speed the arm moves when being jogged manually in fast mode.	10.0
Arm Slow Jog Speed	The speed the arm moves when being jogged manually in slow mode.	5.0
Cup Jog Speed	The speed the cup is moved in manual jog.	10.0
Arm Home Speed	The speed at which the arm moves during a home sequence after power up.	5.0
Cup Home Speed	The speed at which the cup moves during a home sequence after power up.	5.0
Arm Acc / Dec	The acceleration value used when the arm moves to all positions except to metal.	1500
Arm Acc / Dec To Metal	The acceleration value used when the arm moves to the metal.	200
Cup Acc / Dec	The acceleration and deceleration speed for the cup during all operations.	200
Start Prefill Move	The distance in inches from home where the cup will start its move to the prefill angle.	-5.0
Auto Abort Recycle Count	The number of times the arm will recycle and refresh the metal if the Auto Enable input is off. After this count occurs the arm will abort the cycle.	3.0
Arm Home / Wait Position	If a value greater than 0 is entered the arm will move to this position instead of the home position from the Spill Off position.	0.0
Cup Angle At Backout Pos.	The angle the cup will move to during the backout distance move unless the Move Cup To Angle During Backout parameter is set to "YES".	0.0
Cup Home Offset Angle	The difference in degrees from horizontal that the cup is in while at the home position.	0.0
Low Metal Level	Indicates how low in inches the arm will travel in the furnace before turning on the "Low Metal" indicator.	-25.0
Pour Complete Time	The time in seconds that the pour complete output will remain energized.	3.0


Arm Pour Abort Position	The ladle will move to this position to empty metal on an aborted cycle.	0
Travel Past Last Metal	This is the maximum travel past the last [point metal was detected that the arm will move in to the furnace.	1.0
Arm Maximum Pour Position	The maximum distance from home to pour position in inches. This is the limit that can be entered in a User Program.	60.00
Cup Pre-Pour Angle	This parameter is not used at this time.	0.0
Ladler Machine Type	The ladler type is set in the Ladler Type Setting screen. For the MMI to run the correct program, the ladler type must be accurate.	2
Arm Position Gain	Manufacturer's use. (Do not change without consulting factory.)	.00053
Cup Position Gain	Manufacturer's use. (Do not change without consulting factory.)	.000879
Level Cup Before Arm Return	The default option is to level the cup before returning to HOME. If this is set to "NO" the cup will level while the arm is moving home from the pour .	NO
Move Cup to Angle During Backout	The cup will remain at the last pour angle during the backout distance move unless this parameter is set to "YES", then it will rotate to "cup Angle at Backout"> See "Cup Angle at Backout".	NO
Use Cycle Delay Timer	This will cause ladler to recycle after the first Cycle Start, after timer has timed out. If off, a cycle start input is required each cycle.	YES
Empty At Spill Off Position	When the ladle aborts an auto cycle the metal will be poured back in the furnace at the last spill off position. If this is set to "NO" the arm will move back to the metal and empty the cup.	NO
Turn Off Anti Repeat Pouring	This is used for testing only. consult factory. If "YES" the Die Closed and Rod Back do not need to toggle on to off for next cycle. Used for dry runs only. This will reset to "OFF" when power is applied each time.	NO
Recycle After Pour Abort	This will cause the ladle to recycle if a pour abort timer times out. The number of times to recycle is the same as Auto Abort Recycle Count.	NO
Allow Manual Jog Before a Home	This will allow Manual Jog Functions for the arm and cup before doing a Home sequence.	NO
Reset All Fault Counters	This will clear all Auto Fault errors from memory. Please consult with APC. Pass code is required.	Reset

Machine Parameter Page 5 is accessed from Machine Parameters Page 4 as shown in Figure 3-37. Simply touch the NEXT key to display the fifth machine parameters page as shown in Figure 3-38.

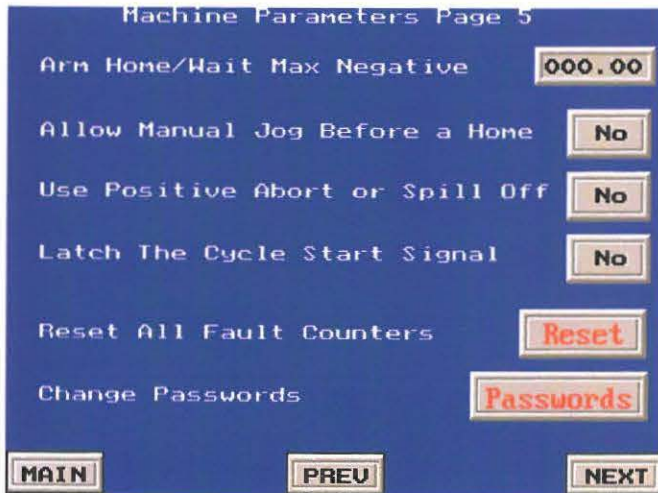

Machine Parameters Page 5 Figure 3-38

Machine Parameter Page 6 is accessed from Machine Parameters Page 5 as shown in Figure 3-38. Simply touch the NEXT key to display the sixth machine parameters page as shown in Figure 3-39.

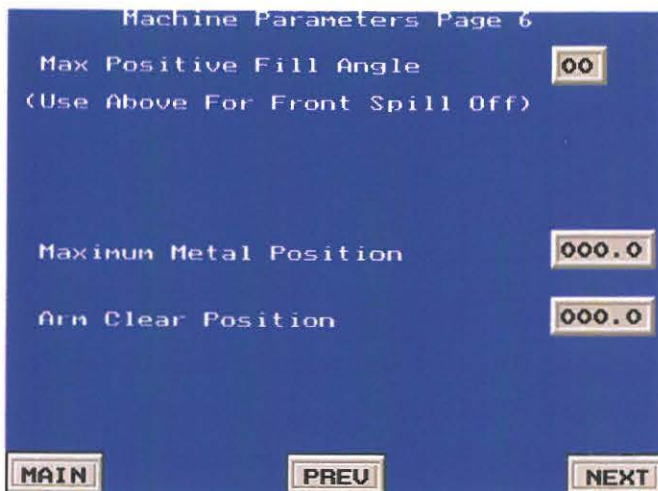

Machine Parameters Page 5 Figure 3-39

HELP

Touch the red Help key, in the upper right hand corner of the MMI shown in Figure 3-40, to display the screen shown in Figure 3-41.



Main Menu Figure 3-40



Help Screen Figure 3-41

To See the Servo Fault Screen as shown in Figure 3-42, touch the Servo Fault List key.

Servo Fault Description	
Fault	Description
AL10	Undervoltage
AL12	Memory Error 1
AL13	Clock Error
AL15	Memory Error 2
AL16	Encoder Error 1
AL17	Board Error 2
AL19	Memory Error 3
AL1A	Motor Combination Error
AL20	Encoder Error 2
AL24	Motor Output Ground Fault
AL25	Absolute Position Erase

MAIN NEXT

Servo Fault Description Screen 1 Figure 3-42

To see the next servo fault description screen displayed in Figure 3-43, touch the NEXT key.

Servo Fault Description	
Fault	Description
AL30	Regenerative Error
AL31	OverSpeed Error
AL32	OverCurrent Error
AL33	OverVoltage Error
AL35	Command Pulse Frequency Error
AL37	Parameter Error
AL45	Main Circuit Device Overheat
AL46	Servo Motor OverHeat
AL50	OverLoad 1
AL51	OverLoad 2
ALE6	Servo Emergency Stop

MAIN PREV NEXT

Servo Fault Description Screen 2 Figure 3-43

You can use the PREV and NEXT keys to switch back and forth between the two Servo Fault Description screens.

Touch the MAIN key to return to the Main Menu as shown in Figure 3-40.

Touching PREV on Servo Fault Description Screen 1 will return you to the Help Screen as shown in Figure 3-41.

To see the PLC Diagnostics Screen as depicted in Figure 3-43, touch the PLC Diagnostics key as shown in Figure 3-41.

M1	Stop Bit to Arm Servo	■
M401	Stop Bit to Cup Servo	■
M8	Start Arm Move	■
M408	Start Cup Move	■
M170	Auto Cycle Fault Bit	■
M22	Arm Home Complete	■
M422	Cup Home Complete	■
M20	Arm Pulse Unit Ready	■
M420	Cup Pulse Unit Ready	■
X20	Safety Gate Status	■
M8005	Battery Low. 2.5 Volts	■

MAIN PREV NEXT

PLC Diagnostic Screen Figure 3-44

The PLC Diagnostic Screen displays the current fault status during a cycle.

Touch the PREV key to return to the Help Screen as shown in Figure 3-40 or touch the NEXT key to display the Auto Cycle Fault screen as shown in Figure 3-45.

Auto Cycle Fault: 00

Flt	Description	Count
01	Pour Position Set To Zero	0000
02	Abs lost- cycle power & rehome	0000
03	Lost Die Closed During Pour	0000
04	Lost Rod Back During Pour	0000
05	Auto Enable Time Out	0000
06	Arm Moved Past Last Metal	0000
07	Arm Moved Past Max Back Pos.	0000
08	Pour Abort Timer Timeout	0000
09	Anti Repeat Pour Abort Timeout	0000
10	Pour Pos + Drip Is Past Max	0000
11	Customer Abort , Input X25	0000
12	Spill Off is Set To Zero	0000
13	Probe Short At Spill Off Pos.	0000
14	Return Move Is At Metal	0000

MAIN PREV NEXT

Auto Cycle Fault Figure 3-45

Touch the PREV key to return to the PLC Diagnostic Screen as shown in Figure 3-44 or touch the NEXT key to display the Misc System Fault screen as shown in Figure 3-46.


Misc System Fault: 00

Flt	Description	Count
15	Cycle Start While In Metal	0000
16	Manual Probe Check Is Required	0000
17	Metal Level Above Max Value	0000
18	Probe Short At Pour Position	0000
19	Spill Off Position is Positive	0000
20	No probe power	0000
21	Air conditioning fault	0000
22	NA	0000
23	NA	0000
24	NA	0000
25	NA	0000

MAIN PREV NEXT

Auto Cycle Fault Figure 3-46

Touch the PREV key to return to the AutoCycle Fault Screen as shown in Figure 3-45 or touch the NEXT key to display the Battery Voltage screen as shown in Figure 3-47.

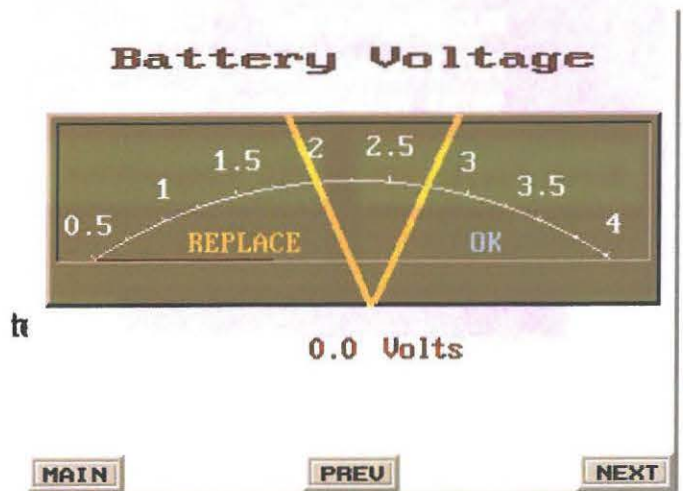

Battery Voltage Screen Figure 3-47

Note the thin red line under the word REPLACE. This line indicates how much voltage is left in the battery. If the red line is on the left hand side, like now, then REPLACE THE BATTERY in the PLC. If it is in the middle section, then the battery is OK but should be monitored. If the red


line is on the right hand side of the dial, then it is still good. Refer to page 6-12 for battery location.

To see the Display Settings screen or the Alarm Status Screen, the Remote Operator Station must be in MANUAL and an authorization code must be entered and recognized by the system. Touch either the Display Settings key or the Alarm Status key as shown on the Help Screen as depicted in Figure 3-48.



Help Screen Figure 3-48

The following Screen will be displayed for entry of the password.

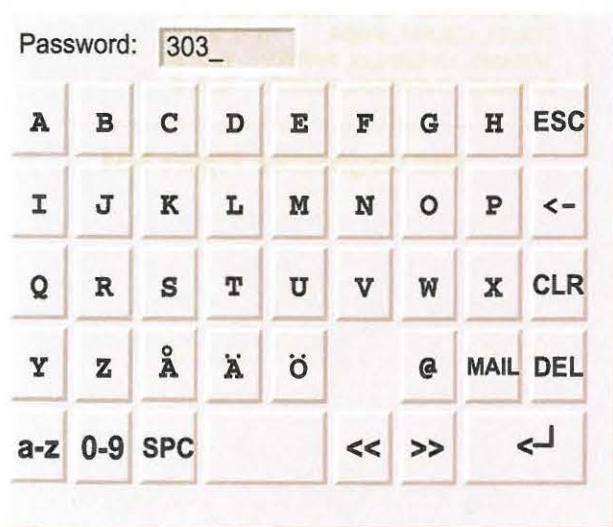

Password Screen Figure 3-49

Touch the 0-9 key to switch to the numeric keypad.

Touch the 3 key, the 0 key and the 3 key. Touch the enter key in the lower right hand corner. The system returns to the help screen as shown in Figure 3-49 and displays LEVEL 1 OK. The system is now unlocked and the Display Settings screen or the Alarm Status Screens may be accessed.


To see the Display Settings Screen as shown in Figure 3-50, touch the Display Settings key on the Help Screen.



Display Settings Screen Figure 3-50


Note: The temperature displayed is the temperature inside the E-Terminal.

To adjust the brightness, touch the light and dark circle keys. Touch the Exit button to return to the Help Screen shown in Figure 3-51.

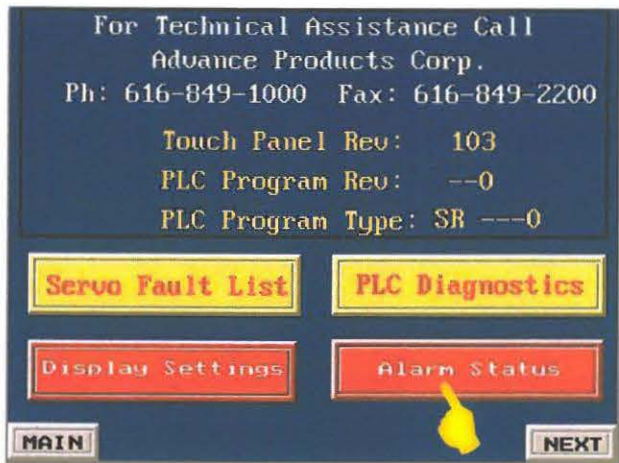

Help Screen Figure 3-51

To see the Alarm Screen as shown in Figure 3-52, touch the Alarm Status key as shown in Figure 3-51.

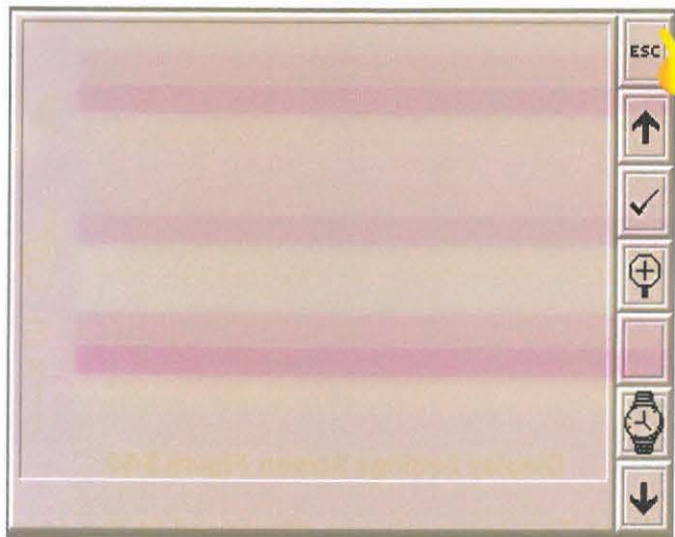

Alarm Status Screen Figure 3-52

Touch the alarm to select it and then the flashing alarm bell. then press the check key to clear the alarm.

The up and down arrow keys are used to scroll up and down the alarm list.

Touch the magnifying glass key to see the alarm messages displayed in a larger font.

Touch the small i key (if displayed) for any other


information.

Touch the ESC key as shown in Figure 3-52 to return to the Help Screen as depicted in Figure 3-53.



Help Screen Figure 3-53


To display the MMI Diagnostics Screen similar to Figure 3-54, touch the NEXT key on the Help Screen as shown in Figure 3-53.

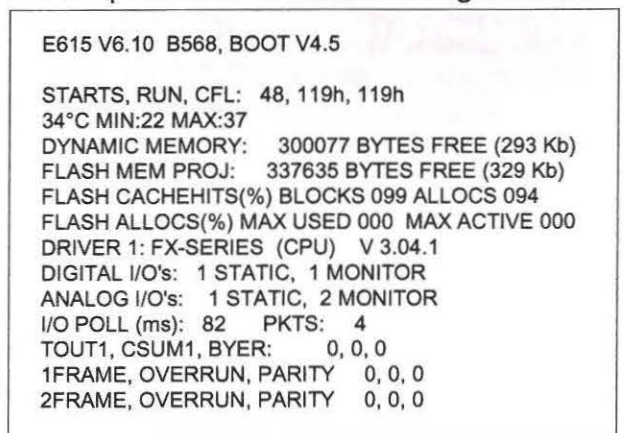

MMI Diagnostics Figure 3-54

AUTO CYCLE

Auto Cycle is started by a customer installed switch. While in Auto Cycle, a screen similar to the one below is displayed.

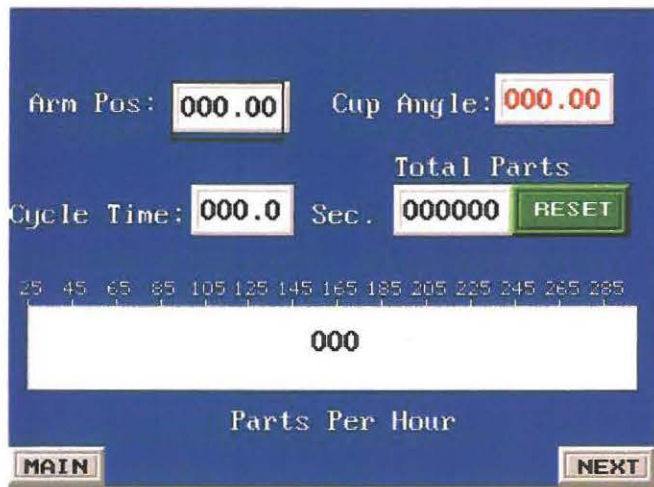

Auto Cycle Figure 3-55

The Auto Cycle screen shows the cycle time, Parts per hour, and total parts.

As the ladler arm and cup move, the current arm position and cup angle of the ladler are updated in the Arm Pos box and the Cup Angle box.

The Auto cycle screen lights the pour complete light at the end of each cycle.

To edit lines in the currently running program, touch the box next to Arm Pos.

Touch Reset to set the counters back to zero.

Touch the MAIN key to return to the Main Menu.

REMOTE OPERATOR PANEL

Refer to figure at the bottom of this page as you read this section.

The remote operator panel is used to:

- Select the mode of operation.
- Start a home sequence.
- Manually move the ladle arm and cup.
- Start an auto cycle.
- Make minor changes to the shot size.
- Show some conditions of the ladle using LEDs.

The remote operator panel switch functions are divided into two sections, “Automatic Functions,” and “Manual Functions.” The switches and their functions are as follows:

SYSTEM FUNCTIONS

OPERATION MODE SWITCH

Manual — Selects the manual mode of operation for the ladler.

Off — Switches the operating mode off and will clear pending faults on the display.

Auto — Selects the automatic mode of operation for the ladler.

These are both arm and cup PLC inputs.

AUTO CYCLE PUSH TO START SWITCH

Starts the automatic ladler cycle. This is an arm PLC input.

SYSTEM FUNCTION INDICATORS

A. LED flashes when there is no metal in the pot. This LED is activated by the “Max Back Travel” proximity switch for this function.

LED is on continuously when the metal in the pot is low. This LED is activated by a parameter for this function.


B. LED flashes when the automatic cycle is aborted with metal in the cup.

LED is on continuously whenever there is metal in the cup while in the “Automatic” or “Manual” mode, and no errors have been detected.

C. LED is on continuously during the automatic cycle.

LED flashes when the automatic cycle is aborted for any reason.

D. LED stays on if the 2nd probe is used. LED flashes if the probes are shorted.

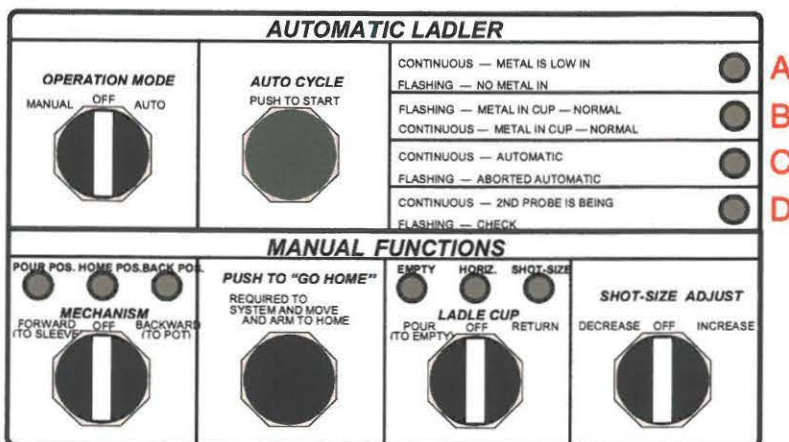

Remote Operator Panel Figure 3-56

Note: Pour Position LED will flash if no pour position has been entered, Cup Horiz LED will flash if no cup angles have been entered after a home sequence.

MANUAL FUNCTIONS

MECHANISM SWITCH (MUST HAVE "OPERATION MODE" SWITCH IN "MANUAL")

The following are arm PLC inputs and outputs.

Forward (to sleeve) — Moves the arm forward. *If the stored pour position for the current program is zero, the arm can be extended to its maximum reach.* If the pour position is not zero, the arm will stop at the stored position, and the "Pour Pos." indicator will light.

Off — Switches the arm manual functions off.

Backward (to pot) — Moves the arm back to the pot. The "Back Pos." indicator will light when metal is detected.

Indicators

Pour Pos. — Lights when arm is at the pour position.

Home Pos. — Lights when the arm is at the home position.

Back Pos. — Lights when the probes sense metal.

LADLE CUP SWITCH (MUST HAVE "OPERATION MODE" SWITCH IN "MANUAL")

The following are cup PLC inputs and outputs.

Pour (to empty) — Pours out the metal from the ladle cup. The "Empty" indicator will light when the cup rotates to the empty position. This switch also rotates the cup from the fill angle and levels it.

Off — Switches off the ladle cup manual functions.

Return — Rotates the cup to the fill angle if the cup is level and the probe is sensing metal. Also rotates the cup from the Empty position and levels it.

Indicators

Empty — Lights when the cup reaches the third pour angle.

Horiz. — Lights when the ladle cup reaches the horizontal position.

Shot-Size — Lights when the ladle cup reaches the fill angle.

PUSH TO "GO HOME" BUTTON (MUST HAVE "OPERATION MODE" SWITCH IN "MANUAL") — Starts a home sequence which levels the cup, then moves the arm to the home position. The ladle cup "Horiz" indicator and the mechanism "Home Pos" indicator will light when the cup reaches horizontal and the arm reaches its home position. This is an arm PLC input.

NOTES:

1. Whenever the AC power has been turned off and back on, this button should be pressed first.
2. In order to prevent a collision from occurring during the initial setup, make sure that there is clearance between the arm/cup, furnace wall, and any other obstacle before starting a home sequence.

SHOT-SIZE ADJUST SWITCH (AUTO OR MANUAL—MAY BE CHANGED WHILE RUNNING AUTO CYCLE)

The following are cup PLC inputs.

Decrease — Decreases the amount of metal. Each time the selector is toggled, the cup angle increases by $1/2^\circ$.

Off — Switches off the Shot-Size Adjust functions.

Increase — Increases the amount of metal. Each time the selector is toggled, the cup angle decreases by $1/2^\circ$.

PROGRAMMING THE LADLE

POUR POSITION ADJUSTMENT

To change the pour position, first do a home sequence. Then follow this procedure:

- Using the remote operator panel, manually move the ladle arm to the desired pour position by turning the MECHANISM switch counter-clockwise..
- At the operator panel, touch the <Edit Positions> key. (See Pour Position description for further information.)
- Touch the <Arm Pour Position> number. The display will show the current position of the ladle arm, and also the pour position that had been saved for this program.
- Enter the current position using the number pad; then, touch the <ENTER>.

DRIP DISTANCE ADJUSTMENT

To change the drip distance, first do a home sequence. Next:

- At the operator panel, touch the <Edit Positions> key. Touch the <Arm Drip Distance> field. Enter the desired value with the numeric keypad, then press ENTER to store setting.
- Press the <ABORT> key to return to the run screen.

To program the ladle, use the Edit Positions, Edit Speeds and Edit Timers screens to make the changes to the default values in the selected program. If necessary, refer to the software system section to review each function.

ADJUSTING THE QUANTITY OF METAL

To set the quantity of metal at the remote operator panel:

1. Rotate the SHOT SIZE ADJUST switch to INCREASE or DECREASE. This step can be performed “on the fly” and operates in either the “Manual” or “Auto” mode. Any changes will be shown on the run screen at the operator panel display. A value of .5 degree will be added or subtracted from the current fill angle each time the toggle switch is flipped

STARTING AN AUTO CYCLE

Two actions are required before starting an auto cycle:

1. At least one home sequence must be done since the last time the AC power to the ladle was turned on.
2. The ladle must be programmed with a Pour Position.
3. Perform the following steps only after the above items have been completed.
4. At the control box operator panel, select the desired program using New Program.
5. At the remote operator panel, place the ladle in AUTO MODE.
6. Press the AUTO CYCLE button.

7. The ladle will begin the programmed cycle.
8. If the ladle is left in AUTO MODE, subsequent cycles may be started in one of two ways.
 - a) Using the CYCLE DELAY timer: the next cycle starts when the timer runs out. The timer begins counting when the ladle returns home after pouring.
 - b) Using the optional CS (CYCLE Start) input: the next cycle starts when voltage is momentarily applied to this input.

To use this method, the CYCLE DELAY timer should be disabled in the machine parameter.

If at any time during a cycle the Operation Mode switch is turned to OFF, or to MANUAL, the ladle will stop immediately. To restart the cycle, switch back to the Auto mode, and press AUTO CYCLE. It is not necessary for the mechanism arm to be at home to start a cycle. An auto cycle can be started from any position except with the probes in contact with the metal. Manually move the arm forward until the probes are clear of the metal's surface, then return to Auto Mode and press AUTO CYCLE.

MAINTENANCE AND ADJUSTMENTS

- 4 -

Ladler Preventative Maintenance Schedule

	Monthly	3 Months	4 Months	12 Months	24 Months
Check gearbox oil level. Fill as required.	X				
Inspect proximity switches. Replace as required.		X			
Inspect Home and Max. Back cams to verify that they are tight. Tighten as required. If they are found loose, verify they are in the correct locations.		X			
Inspect Metal probes to verify they are tight. Tighten as required.		X			
Inspect metal probe wiring for damage and that connections are tight. Replace or tighten as required.		X			
Inspect chain tensions. Tighten as required. There are 2 chains to tighten.		X			
Check all tapered bearings for grease. Grease as required.			X		
Change oil in both gearboxes.				X	
Replace hi-temperature cup end bearings				X	
Replace chain in the cup arm.				X	
Replace metal probe insulators.				X	
Replace all bearings.					X
Replace upper chain.					X
Replace both motor couplings.					X

The ladle maintenance procedure is done at certain periods of time or periods of cycles the ladle has executed. The maintenance covers two sections:

- Mechanical preventive and corrective adjustments
- Lubrication inside the mechanism speed reducers.

The first section covers the mechanical preventive and corrective adjustments. The second section contains gearbox oil options.

MECHANICAL PREVENTIVE AND CORRECTIVE ADJUSTMENTS

The mechanical preventive procedures covers the ladle mechanism, the gear reduction boxes for the link arm and cup rotation and some electrical interface devices mounted in the ladle mechanism. The maintenance procedures are suggested to be done within predefined periods of time or within a range of ladle cycles completed. This maintenance must be done as follows:

90-DAY MAINTENANCE

Once every three months or every 100,000 cycles, perform the following maintenance:

- Check the **proximity switches** for:
 - Wear in sense and cable connections are in good condition.
 - If the proximity switch is damaged or has a faulty sense, replace it.
 - If the switch is OK, reassemble

and remount it on the right position.

- Check the **cup and arm cams**.
 - Verify the cams are tight.
 - If any cam is found loose, tighten it or adjust following the procedures and using the corresponding clamp bolts.

- The **home prox. switch cam adjustment** procedure for the cup or arm, must be done in *very small increments*, a *small change in the cam* results in a *relatively large change in position*.

1. Move the ladle arm to the desired home position.
2. Slightly loosen the bolts holding the cam and move the cam in the desired direction. Retighten the bolts after the cam lights the switch light.
3. Turn off the power. This is necessary because the prox. switches are used to established the home position after the power has been turned on.
4. Power up the ladle and do a home sequence to check the new position. If the cam adjustment is made while the power is applied, the ladle **must** be turned off then back on before doing the home sequence.

After a home position adjustment has been done there is an additional procedure that must be to followed.



- If the arm home was moved back toward the metal the Maximum Pour Position parameter must be increased. See Steps 5 thru 8 to set this parameter.
- If the arm home was moved forward toward the sleeve the Maximum Pour Position parameter must be decreased. See Steps 5 thru 8 to set this parameter.

After any cam position adjustments to the arm cams have been made, the next procedure must be done.

5. Set the Pour Position to 0 to allow maximum movement of the arm, then return to the main menu.
6. Manually move the arm forward until the main crank arm is within ¼" of the forward stop block.
7. Select the Pour Position, and read the current arm position.
8. Enter the current arm position as the new Maximum Pour Position parameter.

The maximum back travel adjustment for the arm cam must be done in very small increments, a small change in the cam results in a relatively large change in position. This limit switch can only be adjusted accurately if the holding furnace is empty or nearly empty.

1. Turn the ladle power off.
2. To move the arm deeper into the pot (to chase more metal), loosen the cam clamp bolts and rotate the cam away from the prox switch. Then retighten the clamp bolts.
3. To move the arm further away from the bottom of pot (to chase less metal), loosen the cam clamp bolts and rotate the cam toward the prox switch. Then retighten the clamp bolts.
4. Turn the power on.

5. Manually move the arm toward the pot to verify the new position.

- Check each **probe**.

- ☑ Make sure that probes are mechanically tight.
- ☑ If any is found loose, tighten it using the jamnut on the mounting screws.
- ☑ Check that the wire connections at each probe are in good condition, and each wire is tight.
- ☑ If the cable wire or the wire holder is broken, replace it.
- ☑ Check the visible part of each probe wire for worn insulation.
- ☑ If the wire insulation is worn, replace it.
- ☑ Verify the probes position is the correct one.
- ☑ If the detection position of the probes is not correct, follow the adjustment procedure below.

- To adjust the probes or metal sensors, follow the next procedure:

1. Loosen the appropriate jamnuts that position the primary probe rods. (The ones set at the same depth position.)
2. Move the threaded shaft in the required direction until the desired position is obtained.
3. Once the probes have the right sense position, retighten the jamnuts.

The secondary probe or metal follower probe should be adjusted to just below the arm end to prevent submersion while filling the cup. This position must be higher than the other two probes.



Figure 4-1 shows the desired metal sense position for the primary probes.

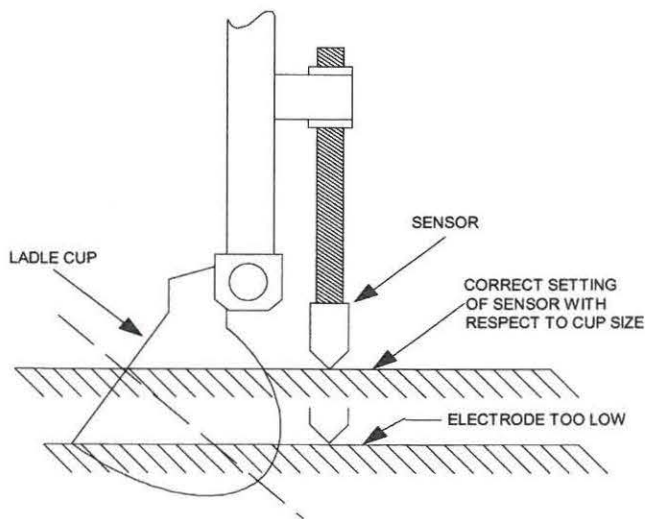


Figure 4-1 Metal sensors adjustment

- Verify the cup-rotate chain tension. (The chains should not be too loose.)
 - ☑ To check the cup chains, remove the external covers in the upper arm as well as the 3x12 cover in the cup arm near the probes.
 - ☑ If any cup chain is found loose, tighten it using the following procedure. **Note:** Over-tightening on any of these chains may result in erratic cup rotation and inconsistent metal quantity. It will also cause premature wear in the cup shaft bearings.

□ The **tightening procedure** for the cup chains consist of:

1. Move the ladle arm to a safe place or as far as possible from any furnace or other heat source.
2. Turn off the power to the ladle mechanism.
3. Remove the cover for the chain to be tightened.

Note: There are 2 turnbuckles in the external chain and only one inside the Cup Arm.

4. Inside the Cup Arm
 - a. Loosen the Jam Nut on the turnbuckle.
 - b. Rotate the turnbuckle until the slack is out of the chain.
 - c. Retighten the jam nut.
 - d. Replace the cup arm access cover.
5. External chain
 - a. Loosen the Jam Nuts on both turnbuckles.
 - b. Rotate one of the turnbuckles until the slack is out of the chain.
 - c. Check to see if cup is level.
 - d. If cup is level, retighten Jam Nuts and replace cover.
 - e. If cup is not level, loosen one turnbuckle and tighten the other an equal amount to make cup level
 - f. Retighten Jam Nuts and replace cover.

Figure 4-2 (next page) shows the chains and the tighten mechanism.





Figure 4-2 Maintaining the chain, probe cable and probes



120 DAY MAINTENANCE

Once every four months perform the following maintenance:

- Check the tapered bearings at all arm pivots for grease.
- Check the oil level in both arm and cup reducers of each gear box.

1 YEAR MAINTENANCE

Once every year or every 500,000 cycles perform the following maintenance:

- Check, and if necessary, clean the bearings, seals, switches, control relays, etc.
- Change the oil on both gearbox sets.

LUBRICATION INSIDE THE MECHANISM SPEED REDUCERS

It is very important to keep the gearbox lubricated. Without adequate lubrication, increased power consumption, added maintenance, and gearset failure can result. Use the following information to maintain your gearset. **USE ONLY SYNTHETIC OILS.**

GEARS

Gear units should have the oil changed every 5,000 hours or 1 year. If synthetic lubricant is used it should be changed every 10,000 hours or 2 years. For adverse operating conditions the interval should be shorter. **DO NOT MIX SYNTHETIC & MINERAL BASE OILS.**

OIL CHANGE

See oil types and amounts on following page. The oil in a **NEW UNIT** should be drained at

the end of two weeks operation, and the case thoroughly flushed with light flushing oil. The original oil can be used for refilling if it has been filtered; otherwise, new oil must be used. Check the oil after approximately 1000 hours of operation, or every four months, whichever occurs first.

Where operating conditions are severe, such as with large variations in temperature, the gear case can sweat inside its walls and form sludge. Also, if the gearset operates under moist or dusty conditions, or in the presence of concentrated chemical fumes, it may be necessary to change the oil every one to three months.

OIL LEVEL

Drive reducers are furnished with either a "bull's eye" type sight glass or a pipe plug to indicate the oil level. In either case, an oil level tag is affixed to the unit near the oil level indicator. Always check the oil level with the unit stopped.

AMBIENT TEMPERATURE

The oil listing, shown on the list of approved lubricants shipped with all speed reducers, are for use in an ambient temperature range of approximately 0° to 130°. If the ambient temperature is below or above this range, please contact Advance Products for specific recommendations on the type of lubricant to use, as well as for oil seal and shim materials.

SLUDGE

The oil in the gearset must be clean and free of sludge at all times.

Sludge that forms in gearsets can be caused by excessive heat, dust, dirt, and other contaminants, and by the presence of moisture and chemical fumes. Use caution to prevent water and foreign particles from entering the gear case.



Advance recommends the following types of oil:

Main Arm Gearbox

Manufacturer	Brand Name Synthetics
Henkel Corp./Emery Group	Emery-2843 Synthetic Lubricant
Keystone/Atochem	Keystone KSL-367 Synthetic Lubricant
Mobil Oil Co.	Mobil SHC634 Synthetic Lubricant
Texaco Lubricant Co.	Primmacle 460 Synthetic Lubricant

Cup Arm Gearbox

Manufacturer	Brand Name Synthetics
Mobil	Glygoyle HE-680

Bearing Grease:

Lithium base NLG #2 or NLGI #3

DOUBLE REDUCTION REDUCERS

These units utilize separate housings and are furnished with separate isolated oil sumps. It is important that both sumps of each gearbox are filled to the proper oil level.

SINGLE REDUCTION REDUCERS

These units utilize a single housing and are furnished with one oil sump. It is important that the sump of the gearbox is filled to the proper oil level.




ADJUSTING MAX BACK TRAVEL SWITCH CAM (See Figure 4-3)

NOTE: When changing the max back travel switch cam, always adjust the cam in very small increments. A small change in the cam results in a relatively large change in position. This prox switch can only be adjusted accurately if the holding furnace is empty, or nearly empty.

To change the "Max Back Travel" limit, use the following procedure:

1. Turn the ladler power off.
2. To make the arm to move deeper into the pot, loosen the cam setscrew, and slide the cam away from the prox switch arm, then retighten the setscrew.
3. To make the arm stop further away from the bottom of the pot, loosen the cam setscrew, and slide the cam toward the prox switch arm, then re-tighten the setscrew.
4. Turn on the ladler power.
5. Manually move the arm toward the pot to check the new position.

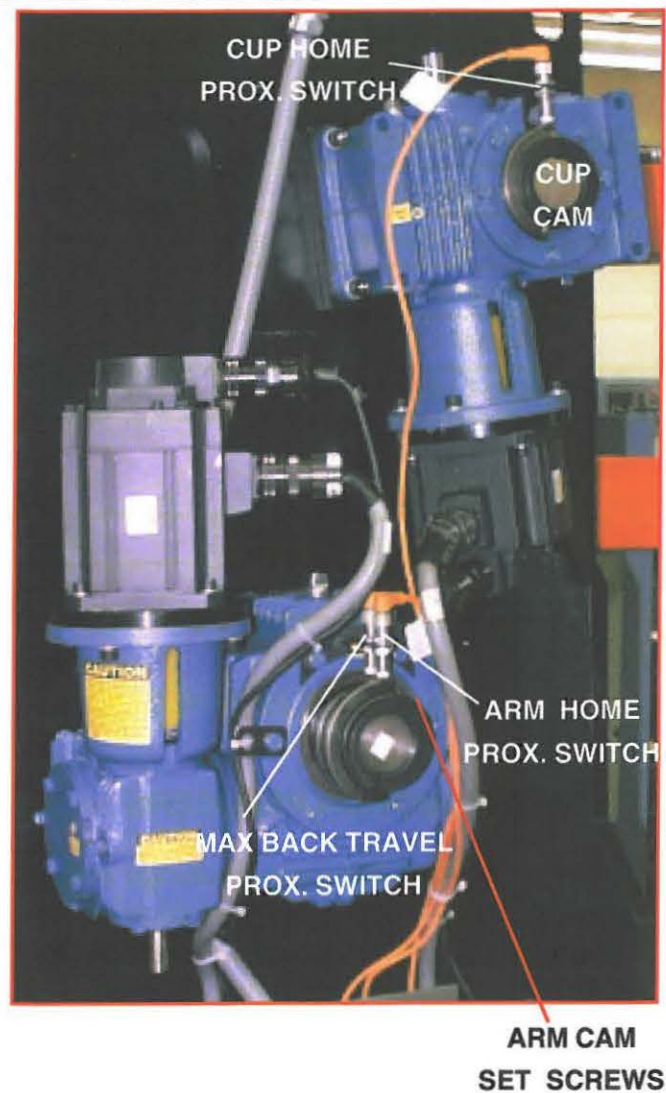

Adjusting The Prox. Switch Cams

FIGURE 4-3



GENERAL

This part of the manual will help you locate and correct problems that may occur in the ladler operation. You will need an **AC/DC voltmeter** to troubleshoot some of the circuitry.

Advance servo ladlers are the most accurate and reliable on the market. Proper maintenance will help your equipment work at peak performance. Please refer to Chapter 4 for regular maintenance schedules.

The following chart lists specific problems, possible conditions that could cause each problem, and corrective measures you can perform.

Please refer to electrical and mechanical drawings in this manual (Chapter 6) to help you.

If you need replacement parts, refer to the "Replacement Parts" lists in Chapter 7 for part numbers.

In an extreme case where you are unable to resolve a difficulty, please contact an Advance Products technical support representative. Our address and telephone number are on the front of this manual. Most of the time, the tech support rep will be able to talk you through the problem and corrective measures. On-site repair is available. Refer to service rates in your contract.

SHIPPING

If it becomes necessary to ship any part to Advance Products for repair, please call our Service Department for a Return Materials Authorization prior to shipment. Be ready to give a detailed description of the problem(s) you are having with the equipment. Please also have the model & serial number of the ladler on hand as well.



PROBLEM	CAUSES	SOLUTIONS
<ul style="list-style-type: none"> All LEDs flashing on the remote. 	<ul style="list-style-type: none"> Safety gate relay is not energized. No voltage to SG terminal at interface. Safety gate open. 	<ul style="list-style-type: none"> Check for voltage at SG terminal, (check Safety gate relay for correct voltage). Repair open circuit. Close Safety gate. If a safety gate is not used, remove safety gate relay.
<ul style="list-style-type: none"> Ladler will not power up. 	<ul style="list-style-type: none"> Disconnect switch not on. Missing 3-phase power. Missing 120VAC control power. Phase monitor not sequenced. 	<ul style="list-style-type: none"> Pull the red master control all the way out to the momentary "start" position, then release. It will return to the stationary "ON" position. Power is now applied. Check incoming 3-phase power and main fuses. Check 120VAC line fuse, if blown check 120VAC circuit for a short and repair. Check for phase sequence LED on monitor, if not present, switch any two phases. Check Adjustment on front of phase monitor should be about 1/4 turn from min.
<ul style="list-style-type: none"> Ladler appears to power up, but no display on MMI. 	<ul style="list-style-type: none"> Power plug to MMI not connected. Missing DC power to MMI. Defective MMI. Defective DC power supply. Defective power cable to MMI. RAM SIMM module not seated securely. 	<ul style="list-style-type: none"> Reconnect power plug. Check for both primary and secondary voltage at MMI power supply. If present, replace MMI. If missing, check for an open circuit on primary side of power supply. If primary voltage is present but on secondary voltage, adjust or replace power supply. Check at MMI end of power cable of voltage. If no voltage present, replace cable. Reseat SIMM memory.
<ul style="list-style-type: none"> Ladler powers up, but can not move arm in manual mode. 	<ul style="list-style-type: none"> Auto/Manual switch not in manual position on remote. Defective Auto/Manual selector switch on remote. 	<ul style="list-style-type: none"> Place Auto/Manual switch in manual position. Replace switch. Verify no fault is displayed on either Servo Amp. See pages 6-14 and 6-15 for list.



PROBLEM	CAUSES	SOLUTIONS
<ul style="list-style-type: none"> Ladler powers up, but won't run in Auto mode. 	<ul style="list-style-type: none"> Auto/Manual switch is not in the Auto position. Defective Auto/Manual selector switch. No pour position entered in program. No cycle start received. 	<ul style="list-style-type: none"> Place Auto/Manual switch in Auto position. Replace switch. Enter a pour position other than zero. (If no Pour Position 1, the Pour Position LED will flash.) Press Auto cycle button on remote or send syscle start from DCM.
<ul style="list-style-type: none"> Ladler won't do a home sequence. 	<ul style="list-style-type: none"> Auto/Manual selector switch is not in manual. Auto/Manual selector switch is defective. Cup chain too tight. Mechanical linkage bound up. Problems with cup shaft end. Defective cup Servo Amp. Defective cup motor. 	<ul style="list-style-type: none"> Place Auto/Manual selector switch in manual. Replace switch. Adjust or replace chain. Check to insure that chain turnbuckles are not running into sprockets. Remove motor from gearbox, (CAUTION: with arm motor removed, arm is free to move). Check gearbox, chain, and nose bearings, if bad, replace. Check and replace nose bearings, sprocket and shaft if defective. Check and Replace Servo Amp or Servo Motor if defective. Check and replace motor coupler if bad.
<ul style="list-style-type: none"> Ladler won't complete a Home Sequence, but has completed the Cup Home sequence. 	<ul style="list-style-type: none"> Check for Servo Faults. Arm motor brake is not disengaging. Defective arm Servo Amp. Defective motor coupler. 	<ul style="list-style-type: none"> Correct any faults. If motor brake is not releasing check brake circuit and fuse. If circuit is OK, replace motor. Check and replace Servo Amp if defective. Check and replace arm motor coupler if defective.
<ul style="list-style-type: none"> Ladler starts Auto Cycle, but won't go past Home position, (Auto Cycle Abort). 	<ul style="list-style-type: none"> Missing Auto Enable Interface signal. 	<ul style="list-style-type: none"> Auto Enable signal must be present in order for arm to go to pour position.
<ul style="list-style-type: none"> Ladler goes to Pour Position, but does not pour, (Pour Abort). 	<ul style="list-style-type: none"> Missing Shot Rod back and/or Die Closed signals. 	<ul style="list-style-type: none"> Both signals must be present and remain on throughout the pour sequence.



PROBLEM	CAUSES	SOLUTION
<ul style="list-style-type: none"> Ladler completes cycle, but won't restart. 	<ul style="list-style-type: none"> No cycle start received. Shorted probes on return to Home Position. Cup does not return Home before arm returns Home. 	<ul style="list-style-type: none"> Press Auto Cycle button on remote or send cycle start from DCM. Fix short. Adjust cup or arm speed so that cup returns home before arm.
<ul style="list-style-type: none"> Inconsistent shot size 	<ul style="list-style-type: none"> Too short of a soak time, ladle cup is not being allowed to fill. Cup chain is loose. Ladle cup or shaft is worn or sloppy. Too short of a pour drain time. Cup mounting pin getting sloppy in its mounting hole. Cup is creating a wave going into the metal. 	<ul style="list-style-type: none"> Adjust parameter to allow ladle cup to fill either using more soak time or use the prefill option. Check, replace worn and sloppy cup components. Adjust parameter to allow more drain time. Change mounting pin. Reduce arm "speed to metal" parameter value. Turn on parameter "cup prefill" so cup is at fill angle when going into metal. Parameter "Prefill angle" may need to be adjusted.
<ul style="list-style-type: none"> Ladler "Dunks" into metal. 	<ul style="list-style-type: none"> Probe check was not done on initial power-up. Probe wired broken. 	<ul style="list-style-type: none"> Always check probe circuit on initial startup. Check probe wires for shorts or breaks.
<ul style="list-style-type: none"> Arm goes and touches the metal and then lifts back up. 	<ul style="list-style-type: none"> Second probe is touching metal. Defective first probe. 	<ul style="list-style-type: none"> Check the first probe for proper operation and adjustment. If the first probe is working, the second probe may be touching the side of the furnace or a wave from the cup going into the metal is hitting the probe. If so, turn on the cup prefill parameter.
<ul style="list-style-type: none"> At power up, Servo Amp has alarm "AL1A" (motor combination error). 	<ul style="list-style-type: none"> Arm and cup resolver cables have been switched around. 	<ul style="list-style-type: none"> Switch Arm and Cup resolver cables around at motor end.



Servo Drive Errors		
AL10 Undervoltage	AL24 Motor output ground fault	
AL12 Memory error 1	AL25 Absolute position erase	
AL13 Clock Error	AL30 Regenerative error	
AL15 Memory error 2	AL31 Overspeed	
AL16 Encoder error 1	AL32 Overcurrent	
AL17 Board error 2	AL33 Overvoltage	
AL19 Memory error 3	AL35 Command pulse frequency error	
AL1A Motor combination error	AL37 Parameter error	
AL20 Encoder error 2	AL45 Main circuit device overheat	

Servo Drive Warnings	
ALE0	Excessive regenerative warning
ALE1	Overload warning
ALE3	Absolute position counter warning
ALE5	ABS time-out warning
ALE6	Servo emergency stop
ALE9	Main circuit off warning
ALEA	ABS servo on warning

CAUTION: When any alarm has occurred, eliminate its cause, ensure safety, then reset the alarm, and restart operation. Otherwise, injury may occur.

When any of the following alarms has occurred, always remove its cause and allow about 30 minutes for cooling before resuming operation. If operation is resumed by switching control circuit power off, then on to reset the alarm, the servo amplifier and servo motor may become faulty.

- Regenerative error (AL30)
- Overload 1 (AL50)
- Overload 2 (AL51)

The alarm can be deactivated by switching power off, then on or by turning on the reset signal (RES).

When an alarm occurs, the trouble signal (ALM) switches off and the dynamic brake is operated to stop the servomotor. At this time, the display indicates the alarm number. The servo motor comes to a stop. Remove the cause of the alarm in accordance with this section. The optional Servo Configuration Software may be used to refer to the cause.



Alarms and Warning List

When a fault occurs during operation, the corresponding alarm or warning is displayed.

		(Note 2) Alarm Code			Name	Alarm Deactivation				
Display	CN1B-19 pin	CN1A-18 pin	CN1A-19 pin	Power OFF→ON		Press "SET" on current alarm screen.	Alarm reset (RES) signal			
Alarms	AL10	0	1	1	Undervoltage	○	○	○		
	AL12	0	0	0	Memory error 1	○	X	X		
	AL13	0	0	0	Clock error	○				
	AL15	0	0	0	Memory error 2	○				
	AL16	1	1	1	Encoder error 1	○				
	AL17	0	0	0	Board error 2	○				
	AL19	0	0	0	Memory error 3	○				
	AL1A	1	1	1	Motor combination error	○				
	AL20	1	1	1	Encoder error 2	○				
	AL24	1	0	0	Motor output ground fault	○				
	AL25	1	1	1	Absolute position erase	○				
	AL30	0	0	0	Regenerative error	○	X	X		
	AL31	1	0	0	Overspeed	○				
	AL32	1	0	0	Overcurrent	○				
	AL33	0	0	0	Overvoltage	○				
	AL35	1	0	0	Command pulse frequency error	○				
	AL37	0	0	0	Parameter error	○				
	AL45	0	1	1	Main circuit device overheat	○				
	SL46	0	1	1	Servo motor overheat	○				
	AL50	0	1	1	Overload 1	○ (Note 1)			○ (Note 1)	○ (Note 1)
AL51	0	1	1	Over load 2	○ (Note 1)	○ (Note 1)			○ (Note 1)	
AL52	1	0	0	Error excessive	○	○	○			
AL8A	0	0	0	Serial communication time-out	○	○	○			
AL8E	0	0	0	Serial communication error	○	○	○			
8.8.8.8.8	0	0	0	Watchdog	○	X	X			
Warnings	AL92	X	X	X	Open battery cable warning			○	○	○
	AL96				Zero setting error					
	AL9F				Battery warning					
	ALE0				Excessive regenerative warning					
	ALE1				Overload warning					
	ALE3				Absolute position counter warning					
	ALE5				ABS time-out warning					
	ALE6				Servo emergency stop					
	ALE9				Main circuit off warning					
	ALEA				ABS servo on warning					

Note 1. Deactivate the alarm for about 30 minutes for cooling time after removing the cause of the occurrence.

Note 2. 0:OFF, 1:ON



Display	Name	Definition	Cause	Action
AL10	Undervoltage	Power supply voltage dropped. MR-J2S uA: 160V or less.	1. Power supply voltage is low.	Inspect the power supply.
			2. Power failed instantaneously for 15 ms or longer.	
			3. Shortage of power supply capacity caused the power supply voltage to drop at start, etc.	
			4. Power switched on within 5s after it had switched off.	
			5. Faulty parts in the servo amplifier	Change the servo amplifier.
			<p>— Checking method —</p> <p>Alarm (AL10) occurs if power is switched on after all connectors are disconnected.</p>	
AL12	Memory error	RAM, memory fault	Faulty parts in the servo amplifier	Change the servo amplifier
AL13	Clock error	Printed board fault		
AL15	Memory error	EEP-ROM fault		
			<p>— Checking method —</p> <p>Alarm (any of AL12,13 and 15) occurs if power is switched on after all connectors are disconnected.</p>	
AL16	Encoder error 1	Communication error occurred between encoder and servo amplifier	1. CN2 connector disconnected.	Connect correctly.
			2. Encoder fault	Change the servo motor.
			3. Encoder cable faulty (Wire breakage or shorted)	Repair or change cable.
			4. Wrong combination of servo amplifier and servo motor.	Use correct combination.
AL17	Board error 2	CPU/parts fault	Faulty parts in the servo amplifier	Change the servo amplifier.
AL19	Memory Error	ROM memory fault		
			<p>— Checking method —</p> <p>Alarm (AL17 or AL19) occurs if power is switched on after all connectors are disconnected.</p>	
AL1A	Motor combination error	Wrong combination of servo amplifier and servo motor.	Wrong combination of servo amplifier and servo motor connected.	Use correct combination.
AL20	Encoder error 2	Communication error occurred between encoder and servo amplifier.	1. Encoder connector disconnected.	Connect correctly.
			2. Encoder cable faulty (Wire breakage or shorted)	Repair or change the cable.
AL24	Motor output ground fault	Ground Fault occurred at the servo motor outputs (U,V and W phases) of the servo amplifier.	1. Power input wires and servo motor output wires are in contact at main circuit terminal block (TE1).	Connect correctly.
			2. Servo motor power cable insulation deteriorated.	Change the cable.
AL25	Absolute position erase	Absolute position data in error	1. Reduced voltage of super capacitor in encoder.	After alarm has occurred, hold power on for a few minutes, and switch it off once, then on again. Make home position return again.
			2. Battery voltage low	Change battery.
			3. Battery cable or batter is faulty.	Make home position return again.



Display	Name	Definition	Cause	Action
AL30	Regenerative alarm	Permissible regenerative power of the built-in regenerative brake resistor or regenerative brake option is exceeded.	1. Wrong setting of parameter No. 0	Set correctly.
			2. Built-in regenerative brake resistor or regenerative brake option is not connected.	Connect correctly.
			3. High-duty operation or continuous regenerative operation caused the permissible regenerative power of the regenerative brake option to be exceeded. <div style="border: 1px solid black; padding: 2px;"> — Checking method — Show the status display and check the regenerative load ratio. </div>	1. Reduce the frequency of positioning. 2. Use the regenerative brake option of larger capacity. 3. Reduce the load.
		4. Power supply voltage is abnormal. 260V or more.	Inspect power supply.	
		Regenerative transistor fault.	5. Regenerative transistor faulty. <div style="border: 1px solid black; padding: 2px;"> — Checking method — 1) The regenerative brake option has overheated abnormally. 2) The alarm occurs even after removal of the built-in regenerative brake resistor or regenerative brake option. </div>	Change the servo amplifier.
AL31	Overspeed	Speed has exceeded the instantaneous permissible speed.	1. Input command pulse frequency exceeded the permissible instantaneous speed frequency.	Set command pulses correctly.
			2. Small acceleration/deceleration time constant caused overshoot to be large.	Increase acceleration/deceleration time constant.
			3. Servo system is unstable causing overshoot.	1. Re-set servo gain to proper value. 2. If servo gain cannot be set to proper value: 1) Reduce load inertia moment ratio: or 2) Reexamine acceleration / deceleration time constant.
			4. Electronic gear ratio is large (parameters No.3, 4)	Set correctly.
			5. Encoder faulty.	Change the servo motor.
AL32	Overcurrent	Current that flew is higher than the permissible current of the servo amplifier.	1. Short occurred in servo amplifier. output phases U, V and W.	Correct the wiring.
			2. Transistor (IPM) of the servo amplifier faulty. <div style="border: 1px solid black; padding: 2px;"> — Checking method — Alarm (AL32) occurs if power is switched on after U,V and W are disconnected. </div>	Change the servo amplifier.
			3. Ground fault occurred in servo amplifier output phases U, V and W.	Connect the wiring.
			4. External noise caused the overcurrent detection circuit to misoperate.	Take noise suppression measures.



Display	Name	Definition	Cause	Action
AL33	Overvoltage	Converter bus voltage exceeded 400V.	1. Lead of built-in regenerative brake resistor or regenerative brake option is open or disconnected.	1. Change lead 2. Connect correctly.
			2. Regenerative transistor faulty.	Change servo amplifier.
			3. Wire breakage of built-in regenerative brake resistor or regenerative brake option.	1. For wire breakage of built-in regenerative brake resistor, change servo amplifier. 2. For wire breakage of regenerative brake option, change regenerative brake option.
			4. Capacity of built-in regenerative brake resistor or regenerative brake option is insufficient.	Add regenerative brake option or increase capacity.
AL35	Command pulse frequency error	Input pulse frequency of the command pulse is too high.	1. Pulse frequency of the command pulse is too high.	Change the command pulse frequency to a proper value.
			2. Noise entered command pulses.	Take action against noise.
			3. Command device failure.	Change the command device.
AL37	Parameter error	Parameter setting is wrong.	1. Servo amplifier fault caused the parameter setting to be rewritten.	Change the servo amplifier.
			2. Regenerative brake option not used with servo amplifier was selected in parameter No. 0.	Set parameter No. 0 correctly.
AL45	Main circuit device overheat	Main circuit device overheat	1. Servo amplifier faulty.	Change the servo amplifier.
			2. The power supply was turned on and off continuously by overloaded status.	Review the drive method.
AL46	Servo motor overheat	Servo motor temperature rise actuated the thermal protector.	1. Ambient temperature of servo motor is over 40°C.	Review environment so that ambient temperature is 0 to 40°C.
			2. Servo motor is overloaded.	1. Reduce load. 2. Review operation pattern. 3. Use servo motor that provides larger output.
			3. Thermal protector in encoder is faulty.	Change servo motor.
AL50	Overload 1	Load exceeded overload protection characteristic of servo amplifier. Load ratio 300%: 2.5s or more Load ratio 200%: 100s or more	1. Servo amplifier is used in excess of its continuous output current.	1. Reduce load. 2. Review operation pattern. 3. Use servo motor that provides larger output.
			2. Servo system is unstable and hunting.	1. Repeat acceleration/ deceleration to execute auto tuning. 2. Change auto tuning response setting. 3. Set auto tuning to OFF and make gain adjustment manually.
			3. Machine struck something.	1. Review operation pattern. 2. Install limit switches.
			4. Wrong connection of servo motor. Servo amplifier's output terminals U, V, W do not match servo motor's input terminals U, V, W.	Connect correctly.
			5. Encoder faulty.	Change the servo motor.

— Checking method —

When the servo motor shaft is rotated slowly with the servo off, the cumulative feedback pulses should vary in proportion to the rotary angle. If the indication skips or returns midway, the encoder is faulty.



Display	Name	Definition	Cause	Action
AL51	Overload 2	Machine collision or the like, caused max. output current to flow successively for several seconds. Servo motor locked: 1s or more	1. Machine struck something.	1. Review operation pattern. 2. Install limit switches.
			2. Wrong connection of servo motor. Servo Amplifier's output terminals U, V, W do not match servo motor's input terminals U, V, W.	Connect correctly.
			3. Servo system is unstable and hunting.	1. Repeat acceleration/deceleration to execute auto tuning. 2. Change auto tuning response setting. 3. Set auto tuning to OFF and make gain adjustment manually.
			4. Encoder faulty. <div style="border: 1px solid black; padding: 5px; margin-top: 5px;"> <p style="text-align: center;">— Checking method —</p> <p>When the servo motor shaft is rotated slowly with the servo off, the cumulative feedback pulses should vary in proportion to the rotary angle. If the indication skips or returns midway, the encoder is faulty.</p> </div>	Change the servo motor.
AL52	Error excessive	Droop pulse value of the deviation counter exceeded 80k pulses.	1. Acceleration/deceleration time constant constant is too small.	Increase the acceleration/deceleration time constant.
			2. Torque limit value (parameter No. 28) is too small.	Increase torque limit value.
			3. Motor cannot be started due to torque shortage caused by power supply drop.	1. Review the power supply capacity. 2. Use servo motor which provides larger output.
			4. Position control gain 1 (parameter No. 6) value is small.	Increase set value and adjust to ensure proper operation.
			5. Servo motor shaft was rotated by external force.	1. When torque is limited, increase the limit value. 2. Reduce load. 3. Use servo motor that provides larger output.
			6. Machine struck something.	1. Review operation pattern. 2. Install limit switches.
			7. Encoder faulty	Change the servo motor.
			8. Wrong connection of servo motor. Servo amplifier's output terminals U, V, W do not match servo motor's input terminals U, V, W.	Connect correctly.
AL8A	Serial communication time-out	RS-232 or RS-422 communication stopped for longer than the time set in parameter No. 56.	1. Communication cable breakage.	Repair or change communication cable.
			2. Communication cycle longer than parameter No. 56 setting.	Set correct value in parameter.
			3. Wrong protocol.	Correct protocol.
AL8E	Serial communication	Serial communication error occurred between servo amplifier and communication device (e.g. personal computer).	1. Communication connector is disconnected.	Connect correctly.
			2. Communication cable fault. (Open cable or short circuit)	Repair or change the cable.
			3. Communication device (e.g. personal computer) faulted	Change the communication device (e.g. personal computer).
8.8.8.8.8	Watchdog	CPU, parts faulty	Fault of parts in servo amplifier. <div style="border: 1px solid black; padding: 5px; margin-top: 5px;"> <p style="text-align: center;">— Checking method —</p> <p>Alarm (8.8.8.8.8) occurs if power is switched on after all connectors are disconnected.</p> </div>	Change servo amplifier





Warnings:

If ALE1 (overload warning) occurs, operation may be continued but an alarm may take place or proper operation may not be performed. If another warning (ALE6 or ALE9) occurs, the servo amplifier will go into a servo-off status. Eliminate the cause of the warning according to this section. Use the optional Servo Configuration software to refer to the cause of warning.

Display	Name	Definition	Cause	Action
AL92	Open battery cable warning	Absolute position detection system battery voltage is low.	1. Battery cable is open.	Repair cable or replace.
			2. Battery voltage dropped to 2.8V or less.	Change battery.
AL96	Zero setting error	1. In incremental system: Zeroing could not be made. 1. In absolute position detection system: Zero setting could not be made.	1. Droop pulses remaining are greater than the in-position range setting.	Remove the cause of droop pulse occurrence.
			2. Command pulse entered after the clearing of droop pulses.	Do not enter command pulse after clearing of droop pulses.
			3. Creep speed high.	Reduce creep speed.
ALE0	Excessive regenerative warning	There is a possibility that regenerative power may exceed permissible regenerative power of built-in regenerative brake resistor or regenerative brake option.	Regenerative power increased to 85% or more of permissible regenerative power of built-in regenerative brake resistor or regenerative brake option. <div style="border: 1px solid black; padding: 5px; width: fit-content;"> — Checking method — Invoke the status display and check the regenerative load ratio. </div>	1. Reduce frequency of positioning. 2. Change regenerative brake option for the one with larger capacity. 3. Reduce load.
ALE1	Overload warning	There is a possibility that overload alarm 1 or 2 may occur.	Load increased to 85% or more of overload alarm 1 or 2 occurrence level. <div style="border: 1px solid black; padding: 5px; width: fit-content;"> — Cause, checking method — Refer to AL50, AL51. </div>	Refer to AL50, AL51
ALE3	Absolute position counter warning	Absolute position encoder pulses faulty.	1. Noise entered the encoder. 2. Encoder faulty.	Take noise suppression measures. Change servo motor.
ALE5	ABS time-out warning		1. PC ladder program wrong. 2. ST2 - TLC signal mis-wiring	Contact APC for program correction. Connect properly.
ALE6	Servo emergency stop	EMG-SG are open.	External emergency stop was made valid. (EMG-SG opened.)	Ensure safety and deactivate emergency stop.
ALE9	Main circuit off warning	Servo was switched on with main circuit power off.		Switch on main circuit power.
ALEA	ABS servo on warning	Servo on signal (SON) turned on more than 1s after servo amplifier had entered absolute position data transfer mode.	1. PC ladder program wrong.	1. Contact APC for program correction.
			2. SON signal mis-wiring	2. Connect properly.



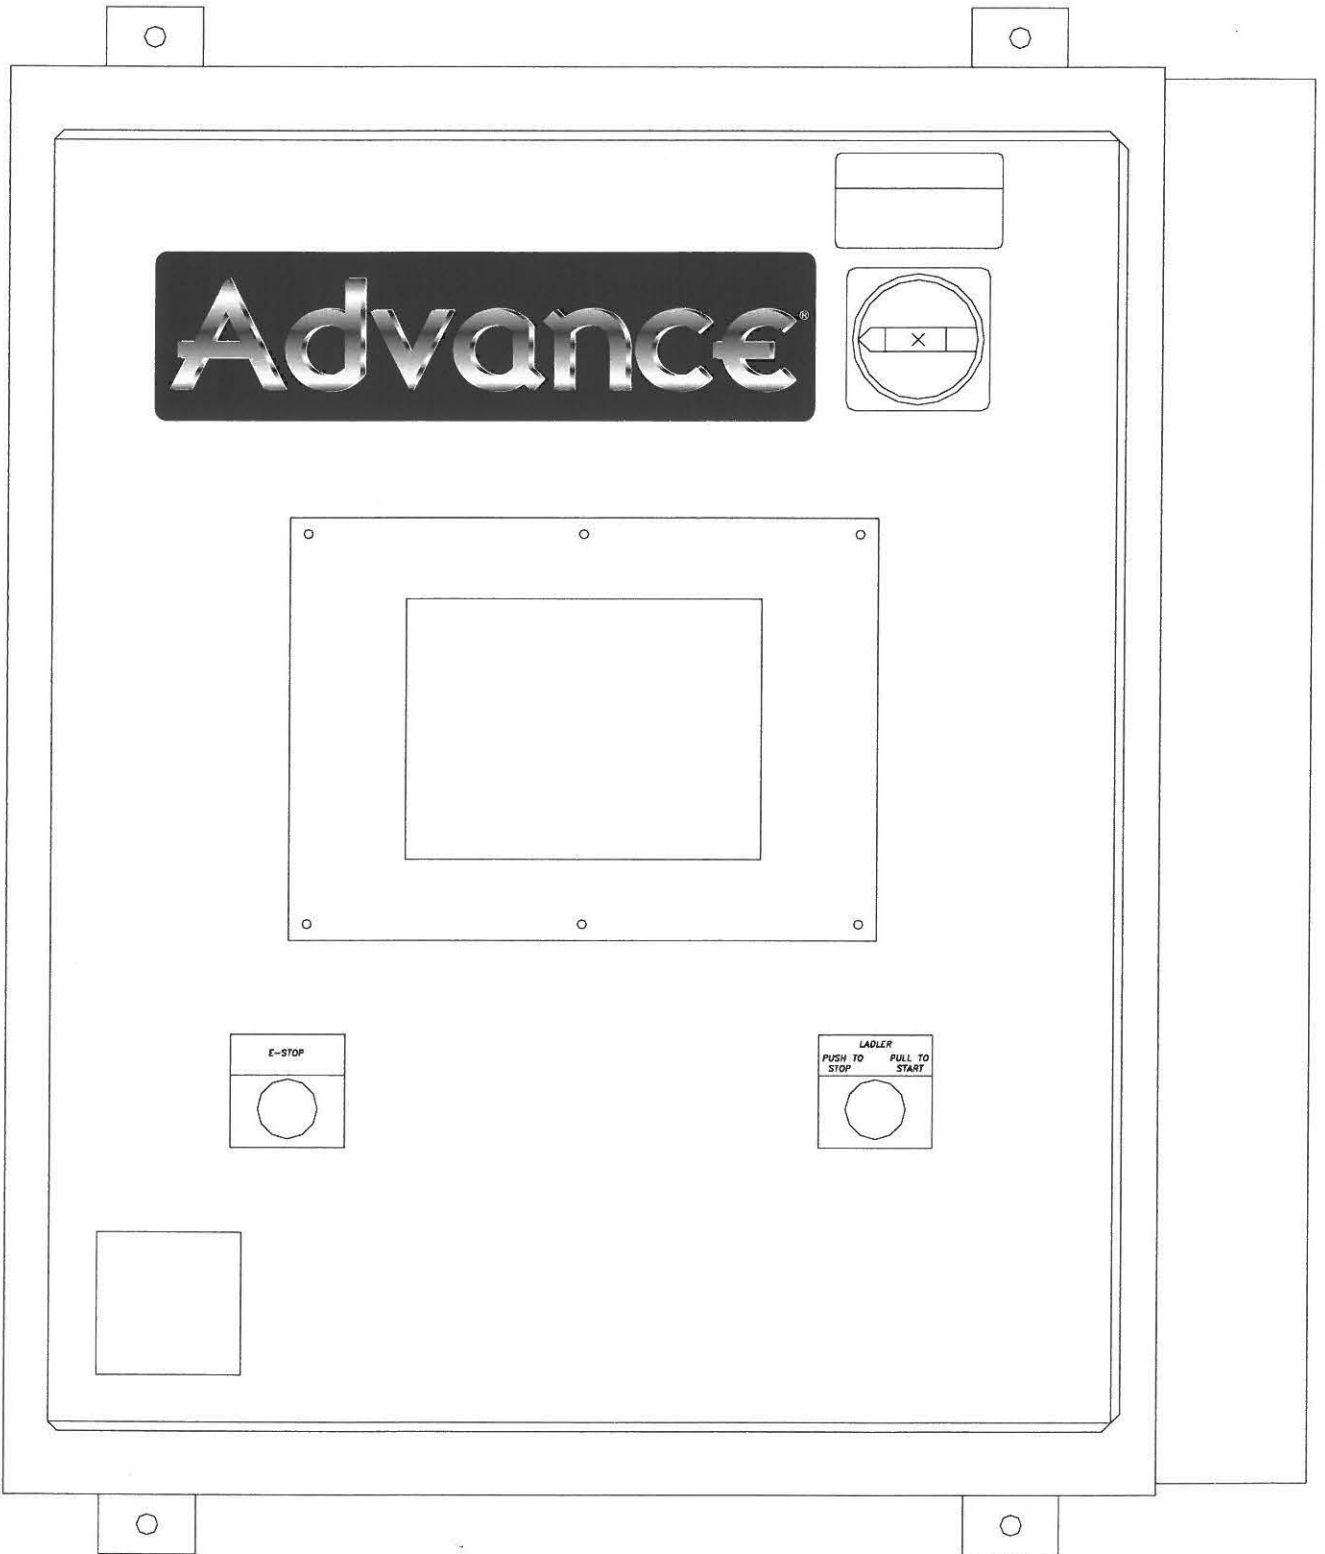

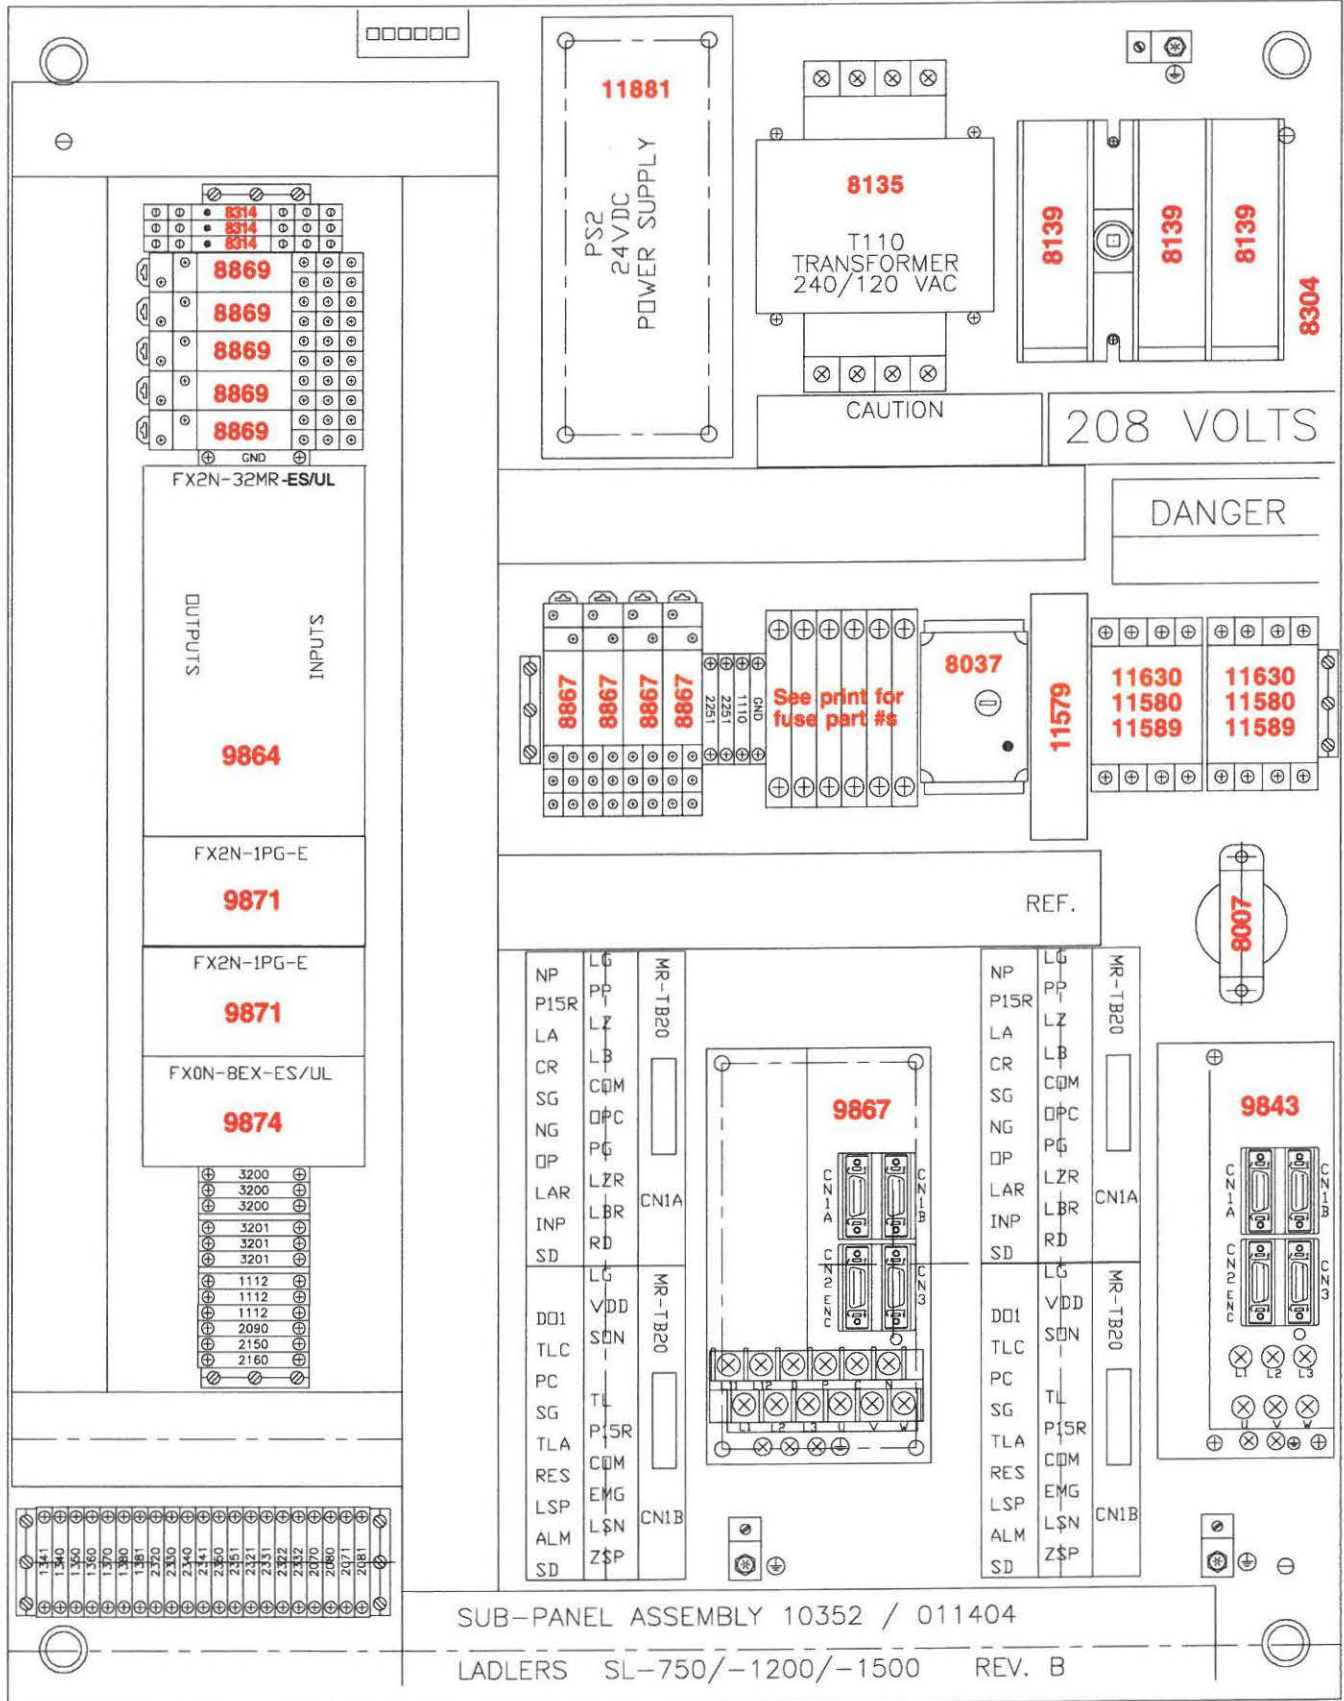

SUB-PANEL ASSEMBLY 10352 / 011404
 LADLERS SL-750/-1200/-1500 REV. B

Ladler Sub-Panel


Pounds of Aluminum

Pounds of Aluminum

CupAngle	Cup#8.0	Cup#6.0	Cup#4.0	Cup#3.5	Cup#3.0	Cup#2.5	Cup#2.0	Cup#1.5
25.00	21.883	17.213	12.923	10.656	8.688	6.543	5.579	4.263
26.00	21.489	17.023	12.706	10.480	8.512	6.367	5.471	4.181
27.00	21.163	16.738	12.570	10.290	8.376	6.204	5.362	4.100
28.00	20.865	16.575	12.299	10.113	8.213	6.068	5.213	4.018
29.00	20.512	16.385	12.095	9.950	8.050	5.905	5.077	3.937
30.00	20.186	16.181	11.892	9.801	7.914	5.756	4.968	3.855
31.00	19.724	15.951	11.688	9.584	7.778	5.606	4.860	3.774
32.00	19.426	15.761	11.525	9.407	7.588	5.457	4.738	3.665
33.00	19.059	15.530	11.349	9.285	7.453	5.281	4.588	3.584
34.00	18.720	15.313	11.077	9.122	7.263	5.131	4.466	3.502
35.00	18.394	15.082	10.901	8.973	7.168	4.982	4.358	3.421
36.00	18.028	14.865	10.711	8.797	7.005	4.846	4.235	3.326
37.00	17.675	14.647	10.493	8.620	6.869	4.697	4.113	3.244
38.00	17.227	14.403	10.317	8.444	6.733	4.548	3.991	3.122
39.00	16.833	14.159	10.100	8.254	6.557	4.358	3.855	3.041
40.00	16.439	13.901	9.855	8.077	6.380	4.222	3.692	2.959
41.00	16.019	13.656	9.638	7.914	6.217	4.073	3.570	2.864
42.00	15.652	13.399	9.435	7.724	6.054	3.923	3.434	2.756
43.00	15.177	13.154	9.204	7.548	5.905	3.774	3.299	2.674
44.00	14.770	12.910	8.987	7.331	5.742	3.638	3.177	2.579
45.00	14.362	12.625	8.783	7.140	5.579	3.489	3.041	2.484
46.00	13.928	12.367	8.430	6.937	5.403	3.339	2.891	2.389
47.00	13.439	12.068	8.118	6.747	5.186	3.190	2.756	2.294
48.00	12.991	11.824	7.887	6.557	4.996	3.041	2.634	2.213
49.00	12.503	11.552	7.656	6.353	4.833	2.864	2.511	2.104
50.00	12.027	11.254	7.412	6.122	4.643	2.715	2.389	2.023
51.00	11.607	10.996	7.195	5.932	4.480	2.579	2.267	1.928
52.00	11.145	10.724	6.950	5.729	4.290	2.444	2.158	1.846
53.00		10.439	6.652	5.539	4.127	2.294	2.023	1.765
54.00		10.141	6.407	5.349	3.923	2.172	1.901	1.670
55.00		9.855	6.149	5.131	3.747	2.050	1.792	1.588
56.00		9.543	5.919	4.941	3.570	1.928	1.683	1.507
57.00		9.245	5.661	4.711	3.407	1.805	1.575	1.425
58.00		8.932	5.362	4.507	3.217	1.683	1.466	1.344
59.00		8.688	5.118	4.303	3.068	1.561	1.371	1.262
60.00		8.335	4.887	4.113	2.891	1.466	1.276	1.195

LADLER CUSTOMER INTERFACE


ISOLATION RELAYS

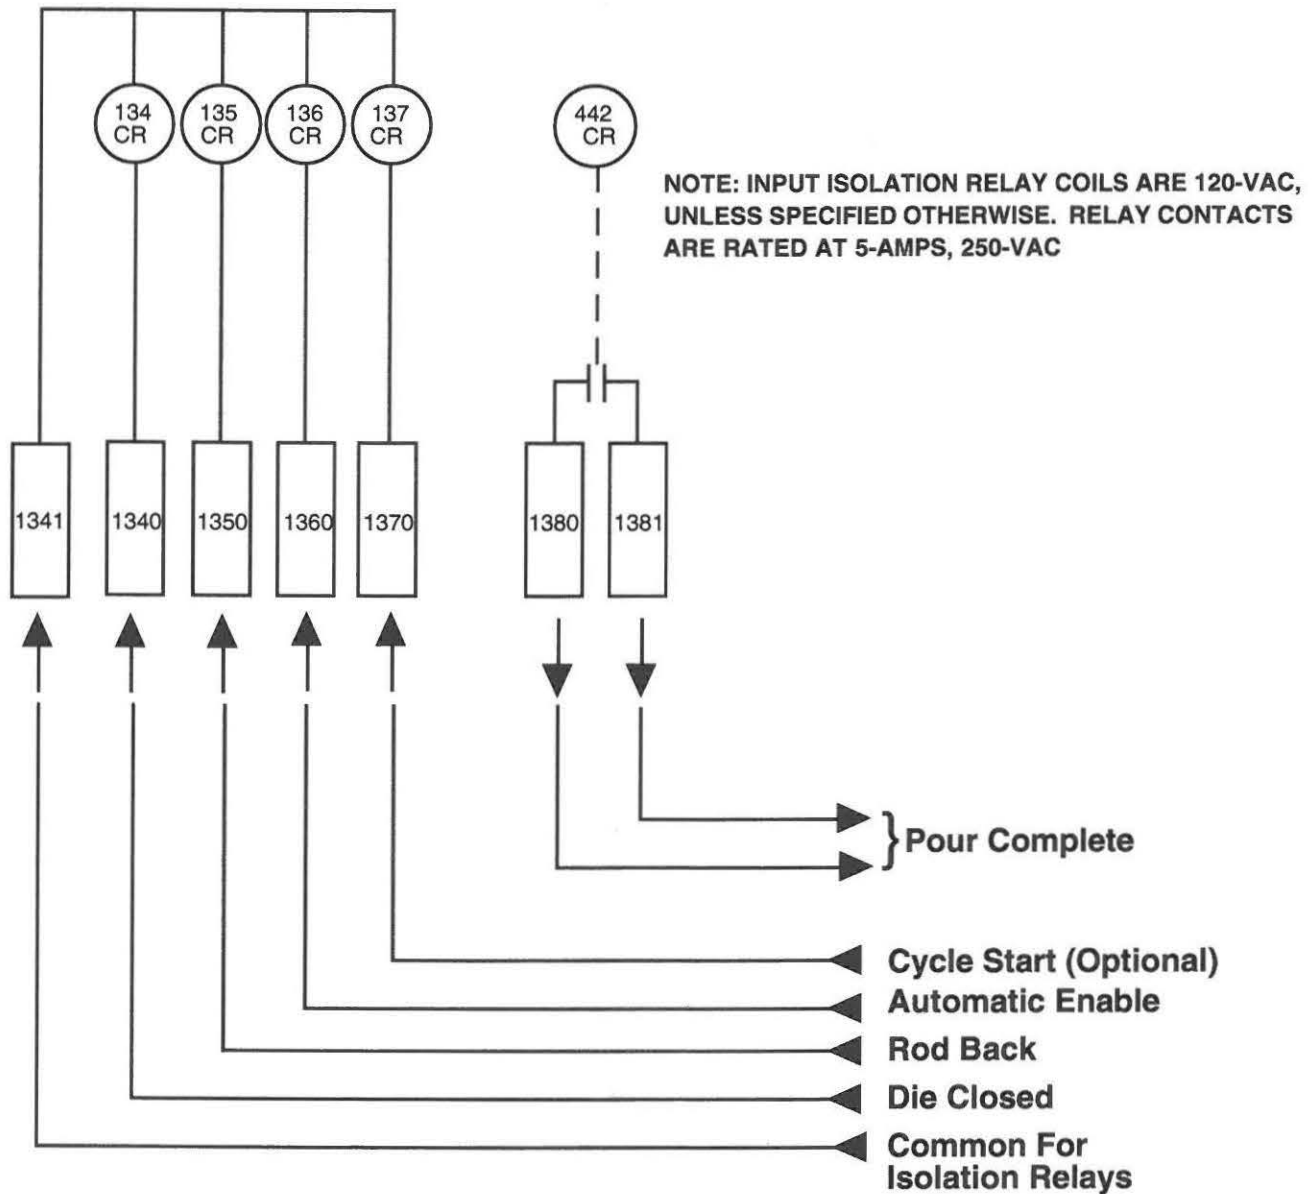

NOTE: See the following two pages for typical interface wiring options.


LADLER ELECTRICAL INTERFACE USING INTERNAL LADLE POWER


ISOLATION RELAYS

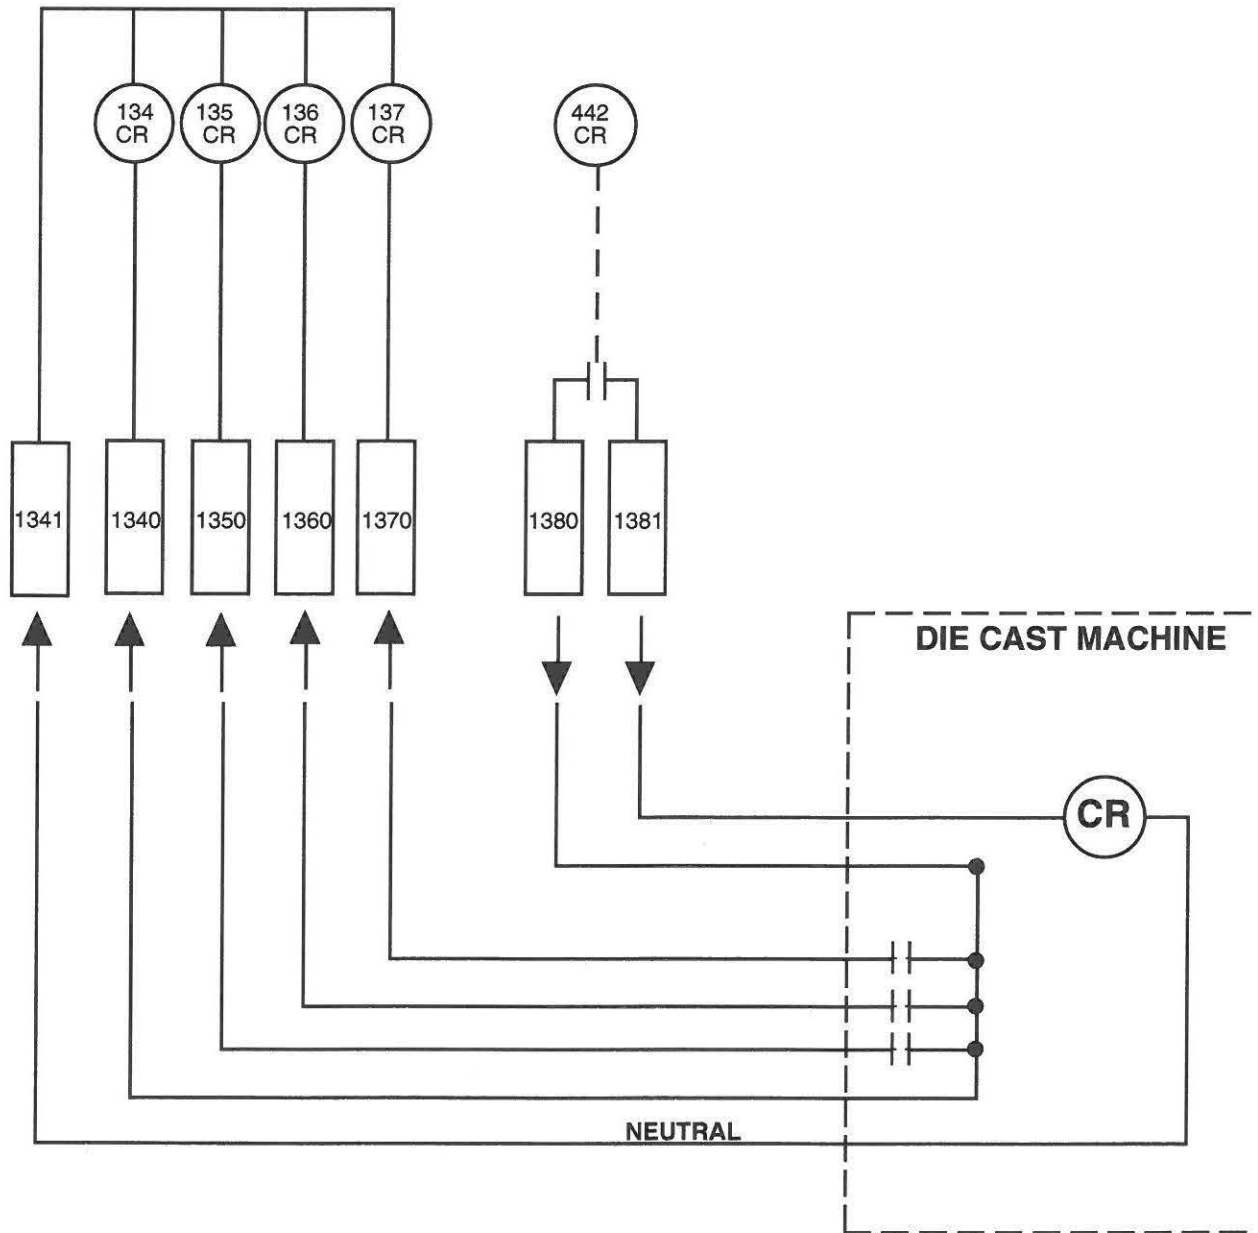

LADLER ELECTRICAL INTERFACE USING CUSTOMER SUPPLIED POWER


ISOLATION RELAYS

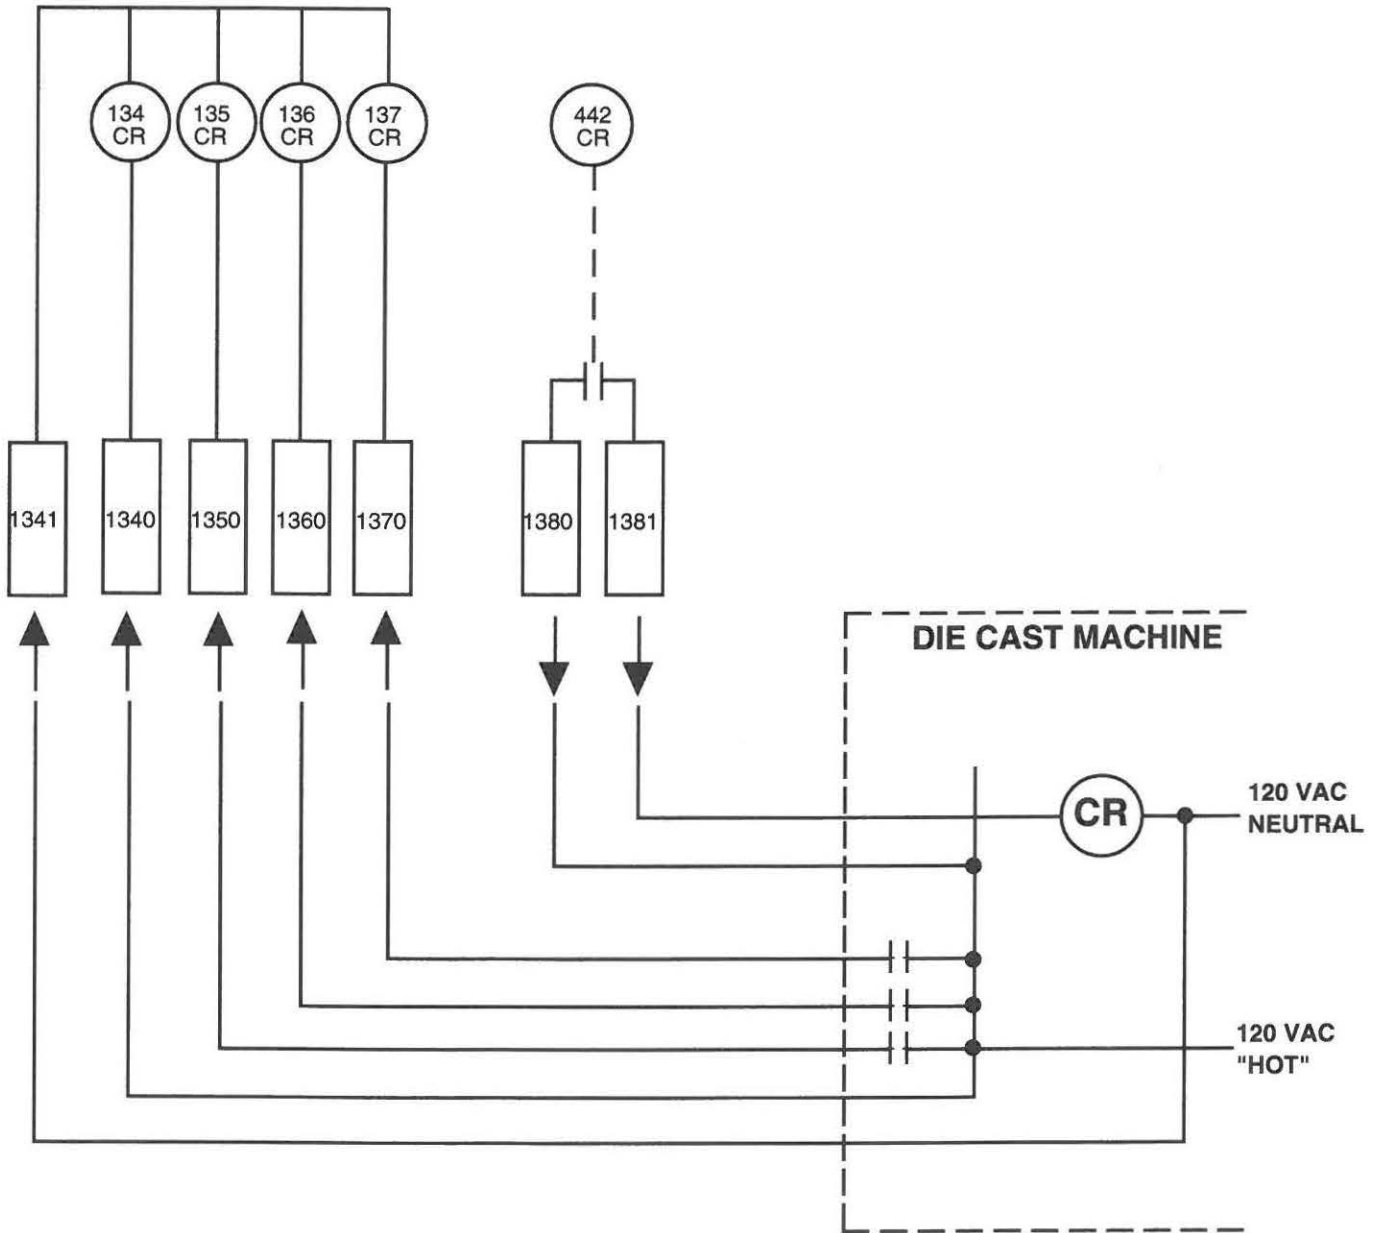

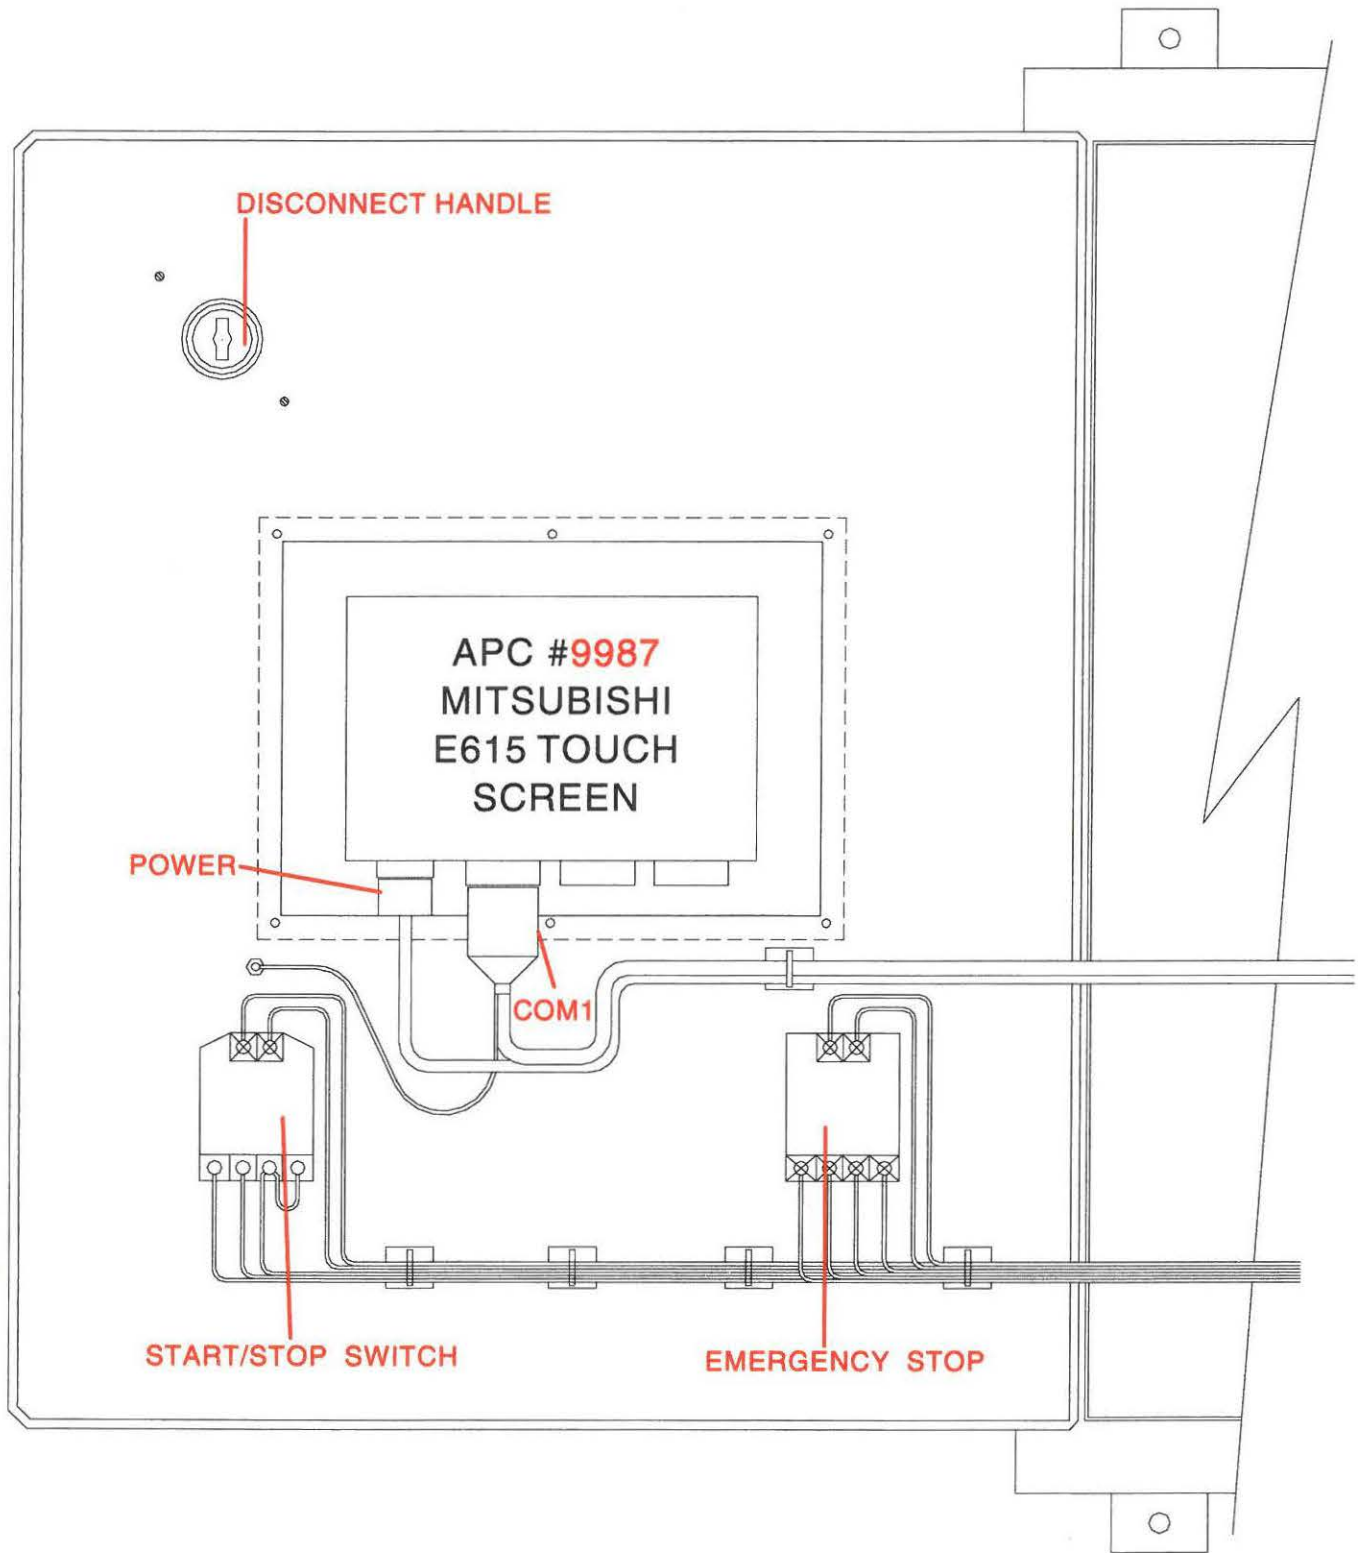


**CONTROL BOX --
INSIDE FRONT COVER**

PLC RS422 CABLING

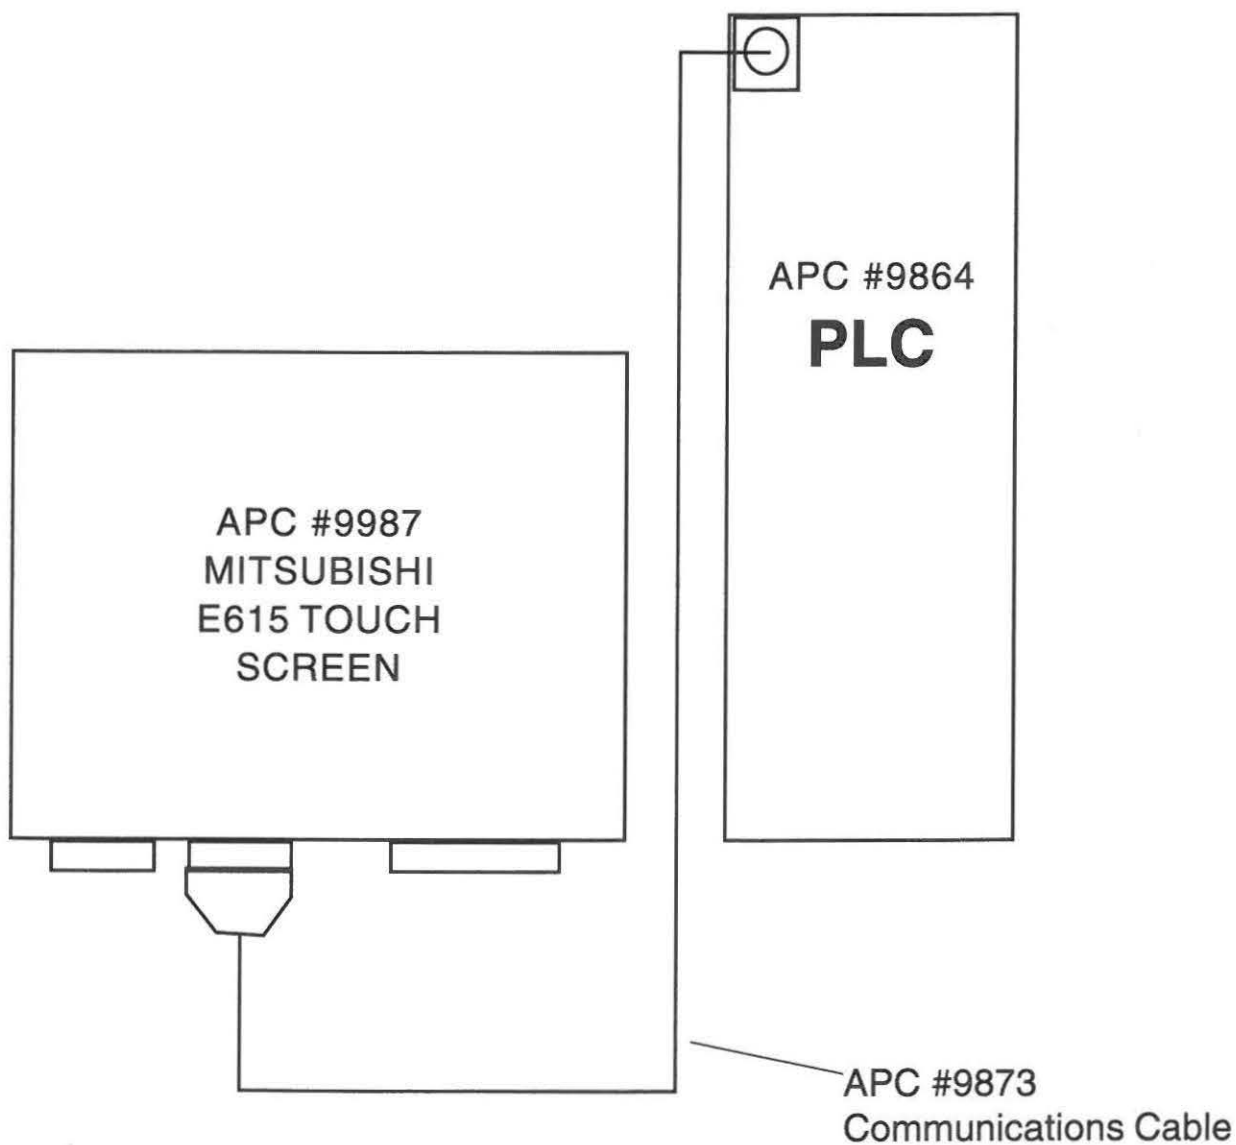

P/N 10600-030 CONTROL CABLE ASSEMBLY

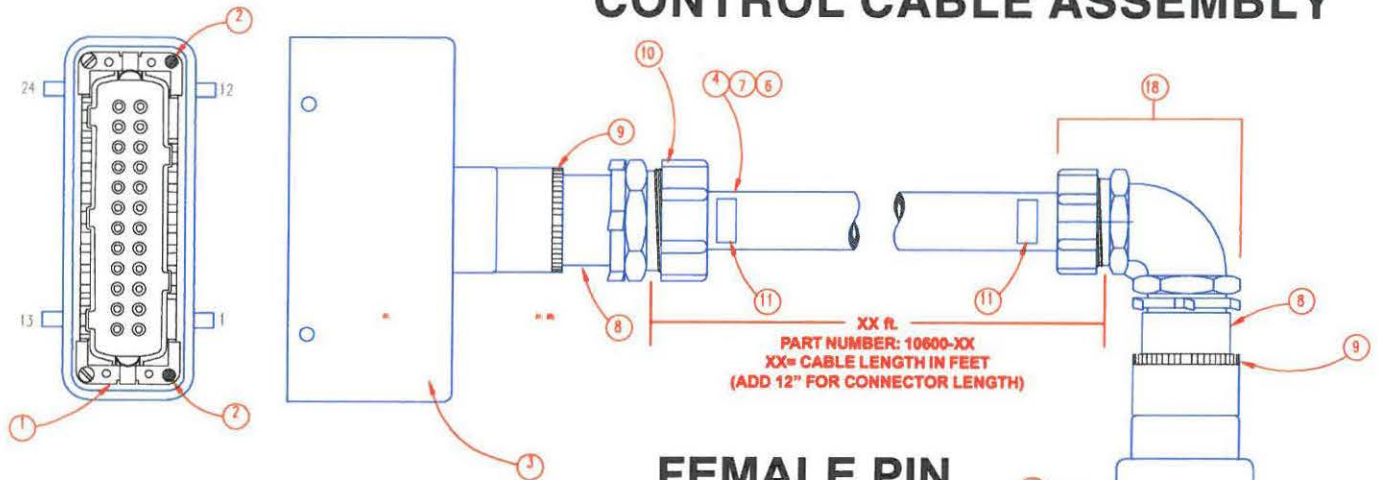


**FEMALE PIN
END TO
LADLER**

**MALE PIN END TO
CONTROL BOX
(SEE OTHER END
FOR PIN
CALLOUTS)**

Pin#	Color	Description
1	Yellow	Arm Cosine +
2	Red	Arm Sine +
3	Black	Arm Sine -
4	Orng/Blk	spare
5	Wht/Blk	Arm Home Limit Switch
6	Grn/Blk	Arm Max Back Limit Switch
7	Blue/Blk	Cup Home Limit Switch
8	Blue	+24v dc
9	Shield	Shield
10	Orange	Cup Carrier
11	Green	Cup Signal Common
12	Brown	Cup Cosine -
13	Brown	Arm Cosine -
14	Green	Arm Signal Common
15	Orange	Arm Carrier
16	Shield	Arm Shield
17	Orange	-24v dc
18	Red	Metal Probe Common
19	Red/Blk	Metal Probe 1
20	Green	Metal Probe 2
21	Blk/Wht	spare
22	Black	Cup Sine -
23	Red	Cup Sine +
24	Yellow	Cup Cosine +


Item#	Part #	Qty	Description
1	7505	1	24Pole Plug (Male) Insert Connector
2	7504	4	Coding pins
3	10620	2	24 Pole Hood Assembly
4	1865	1	3/4" Ø Flex Conduit
5	7546	1	24 Pole Socket (Female) Insert Conn.
6	7550	2	22 Gauge 6 Conductor Shielded Wire
7	7549	1	18 Gauge 12 Conductor
8	8551	2	Reducer, PG21-3
9	7553	2	Reducer, PG29, PG21
10	8384	1	Connector, LQT, 3/4", st
11	8388	1	3/4" Dia. Rt. Angle Conn.

P/N 10602-030 POWER CABLE ASSEMBLY

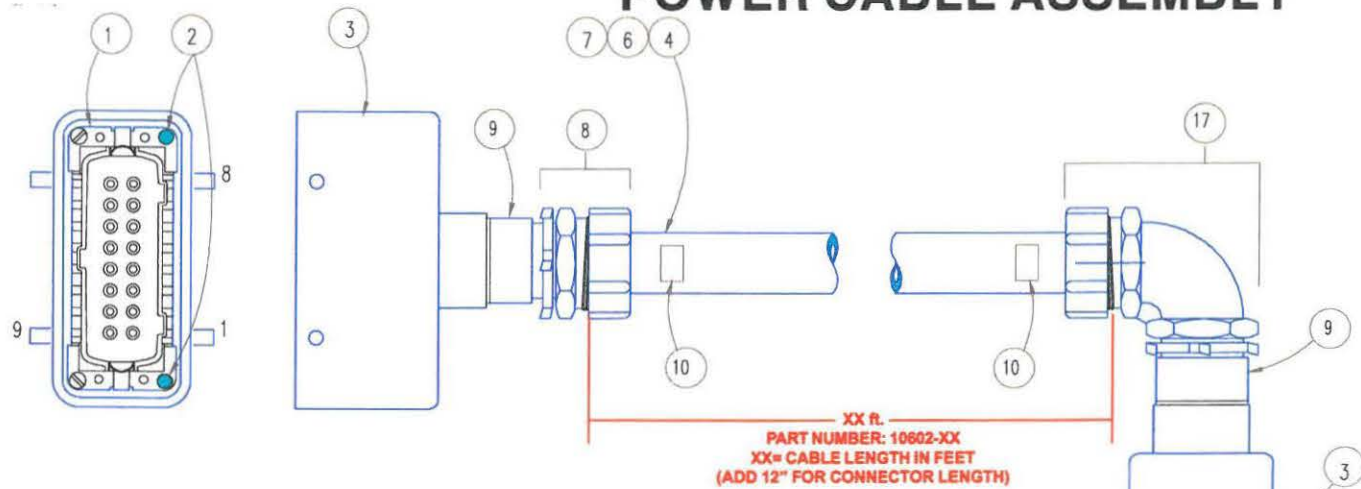

**FEMALE PIN
END TO
LADLER**


**MALE PIN END
TO CONTROL
BOX (SEE
OTHER END
FOR PIN
CALLOUTS)**

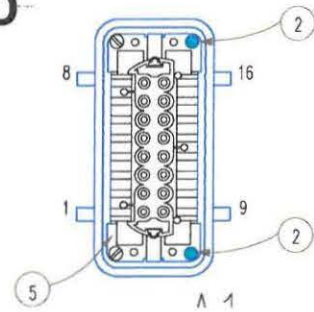

Pin#	Color	Description
1	Green	Ground
2	Red	U. Arm Servo Motor
3	White	V. Arm Servo Motor
4	Black	W. Arm Servo Motor
5	Shield	Ground
6	Blue	Brake +24
7	Orange	Brake com
8	Red	Arm Temp Sensor 1
9	Black	Arm Temp Sensor 2
10	Wht or Yw	Cup Temp Sensor 1
11	O/Bk or Brn	Cup Tem Sensor 2
12	Bk/W or Prpl	Ground
13	Red	U. Cup Servo Motor
14	White	V. Cup Servo Motor
15	Black	W. Cup Servo Motor
16	Green	Ground

Item#	Part #	Qty	Description
1	7329	1	16 Pole Plug (Male) Insert Connector
2	7504	4	Coding Pin
3	10621	2	16 Pole Connector Hood Assembly
4	1865	1	3/4" Ø Flex Conduit
5	7548	1	16 Pole Socket (Female) Insert Conn.
6	7549	1	18 Gauge, 12 Conductor Unshld Wire
7	7551	2	14 Gauge 3 Conductor Shlded Wire
8	8384	1	3/4" Straight LQT Connector
9	8551	2	Reducer, PG-21
10	8388	1	Right angle LQT Connector


P/N 100-0294-030 REMOTE CABLE ASSEMBLY

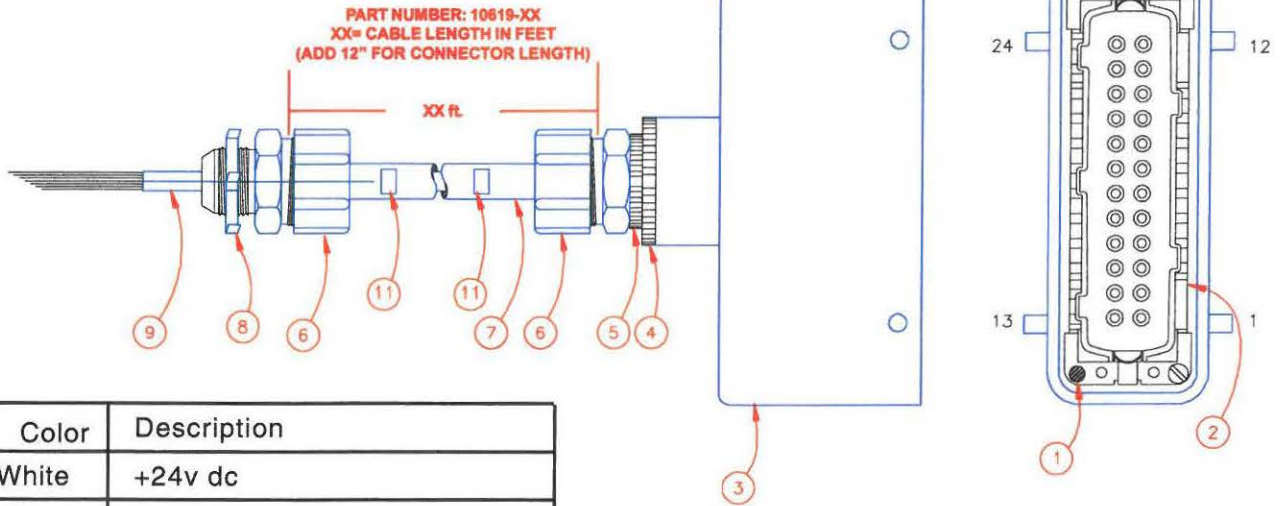

Pin#	Color	Description
1	White	+24v dc
2	Orng/Blk	-24v dc
3	Blue/Blk	Home
4	Blk/Wht	Auto
5	Grn/Wht	Manual
6	Blu/Wht	Arm Forward
7	Blk/Red	Arm Backward
8	Wht/Red	Auto Cycle
9	Org/Red	LED - Pour Position
10	Blu/Red	LED - Home Position
11	Org/Grn	LED - Back Position
12	Red/Blk	LED - Auto Cycle
13	Bl/Rd/Wt	Cup Pour
14	Wt/Rd/B	Cup Empty
15	Rd/Wt/B	Shot Increase
16	Red	Shot Decrease
17	Gr/Wt/Bl	LED - Cup Empty
18	Blue	LED - Cup Horizontal
19	Red/Wht	LED - Shot Size
20	Orange	LED - Low / No Metal
21	Wht/Blk	LED - Cycle Abort / Normal
22	Red/Grn	LED - Probes
23	Blk	Spare
24	Grn/Blk	Spare
25	Green	Ground

MALE PIN END TO CONTROL BOX (SEE OTHER END FOR PIN CALLOUTS)

Item#	Part #	Qty	Description
1	7504	2	Coding Pin
2	7505	1	24 Pole Plug (Male) Insert Connctor
3	10620	1	24 Pole Connector Hood
4	8525	1	Reducer
5	8599	1	Reducer
6	8383	2	1/2" Ø Con. Straight Connector
7	8863	1	1/2" Ø Flex Conduit
8	8393	1	Nut
9	7552	1	10 Gauge, 25 Conductor Wire

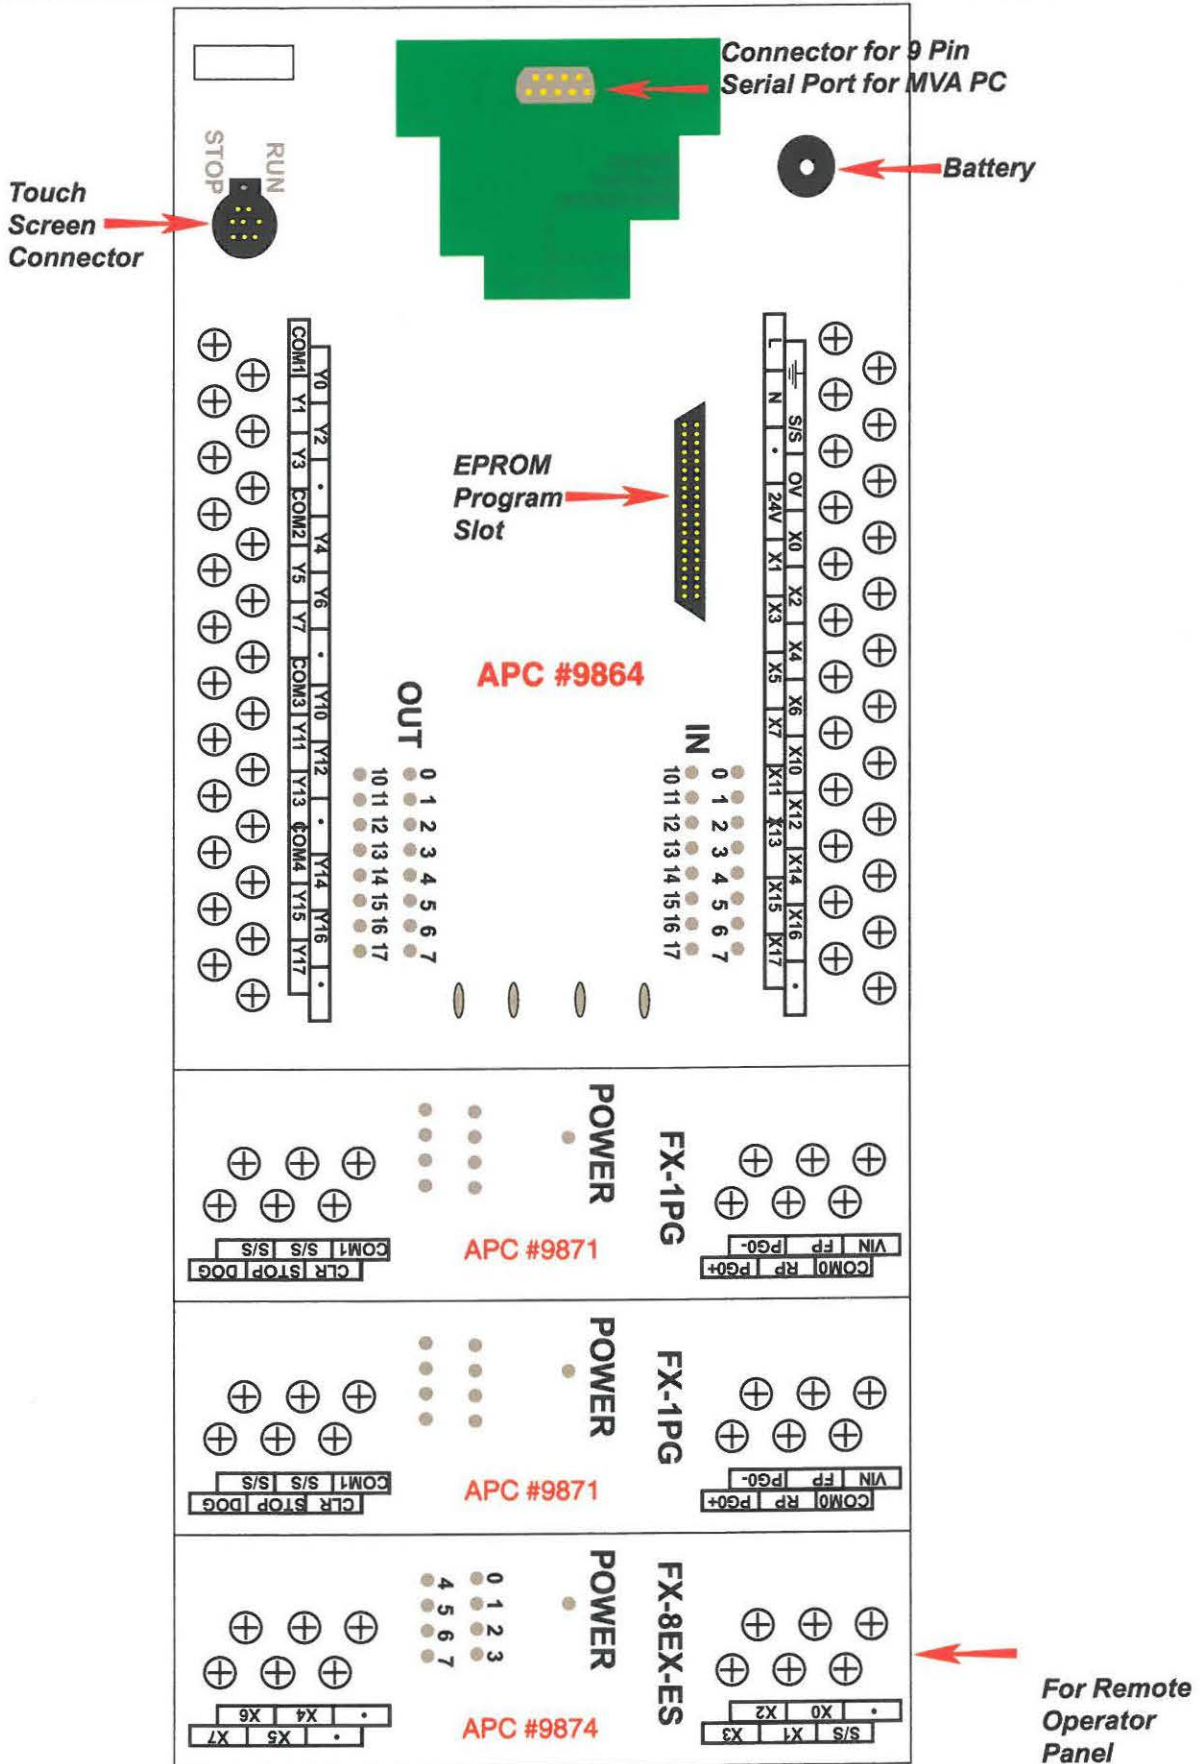

PLC APC P/N 9864

PLC Specifications *APC P/N 9864*

Power Supply


Current Repeatability 720mA, 100V AC.
 Current Typical 300 mA, 100V AC.
 Max. Allowable Momentary Power Failure Period - 10msec.
 Fuse (size) rating..... 3.15A

Inputs




Input Current 24V DC, 5mA.
 Response Time 10 msec.
 Circuit Isolation / Operation Indication.... Photocoupler / LED is lit.
 Input voltage 85-132V AC 50/60Hz.
 Input Impedence 21k Ω /50Hz or 18k Ω /60Hz

Relay Outputs

Switched Voltages \leq 240V AC, 30V DC.
 Rated current / N points 2A / 1 Point, 8A / Com.
 Max. Inductive Load 80 VA, 120 / 240 VAC.
 Max Lamp Load (tungsten load) 100W (1.17 A / 85VAC, 0.4A / 250VAC).
 Circuit Isolation By Relay.
 Operation Indication LED is lit when coil is energized.

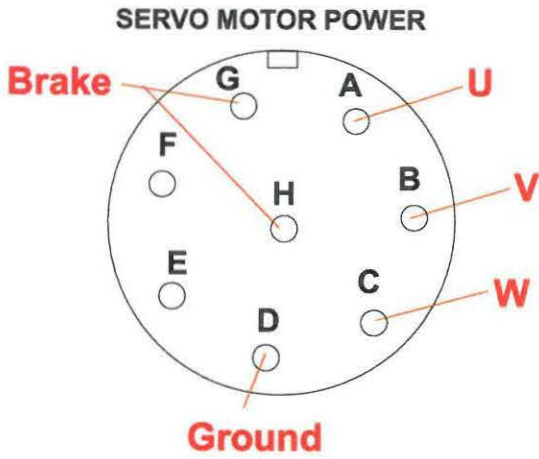

SERVO MOTOR ENCODER

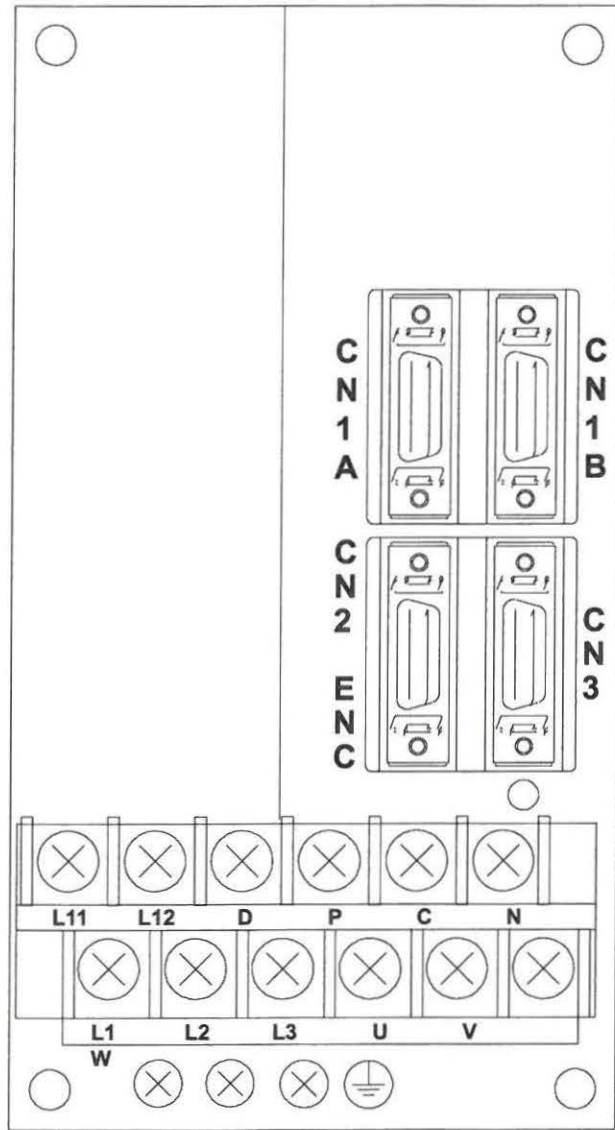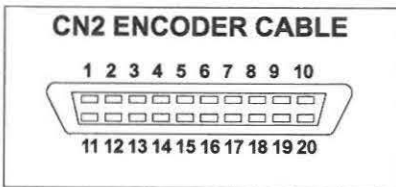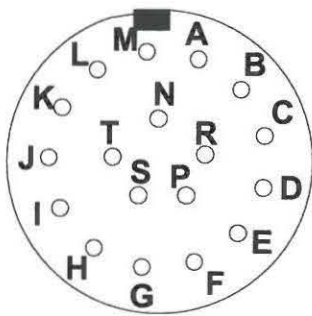

Servo-Amp APC P/N 9867 & 9843

Servo-amp Specifications *APC # 9867 & 9843*

Power Supply

Voltage/frequency 3-phase, 200 to 230V AC 50/60Hz.
 Permissible voltage fluctuation 3-phase 170 to 253V AC 50/60 Hz.
 Permissible frequency fluctuation $\pm 5\%$ max.

GENERAL

Control System Sine-wave PWM control/current control system.
 Dynamic brake Built-in.
 Speed frequency response 550Hz or more.
 Safety Features Overcurrent shutdown, regeneration, overvoltage shutdown, overload shutdown (electronic thermal), servomotor overheat protection, encoder fault, protection, regeneration fault protection, under-voltage/sudden power outage protection, overspeed protection, excess error protection.

Structure

Fan cooling, open (IP00).

Environment

Ambient temperature 0 to 55°C(32 to 131°F)(non freezing), storage: -20 to 65°C(-4 to 149°F)(non freezing).
 Ambient humidity 90% RH max. (non condensing), storage: 90% RH max. (non condensing).
 Atmosphere Inside control panel; no corrosive gas, inflammable gas, oil mist, or dust.
 Elevation 1000 meters or less above sea level.
 Oscillation 5.9 m/s² max.



Servo-Motor APC P/N 9868 & 9842

Servomotor Specifications *APC # 9868 (Arm Motor)*

Power facility capacity 2.5kVA.

Continuous Running Duty

Rated output 1.5 kW.

Rated torque 7.16Nm (1013.8 oz-in).

Specifications Continued

Maximum torque 21.6Nm (3058.5 oz-in).

Rated rotation speed 2000 r/min.

Maximum rotation speed 3000 r/min.

Permissible instantaneous rotation speed-3450 r/min.

Power rate at continuous rated torque ... 25.6 kW/s.

Rated current 9 A.

Maximum current 27 A.

Speed/Position encoder Resolution per encoder/servomotor rotation: 131072 pulses/revolution.

Environment

Ambient temperature 0 to 40°C(32 to 104°F)(non freezing), storage: -15 to 70°C(-5 to 158°F)(non freezing).

Ambient humidity 80% RH max. (non condensing), storage: 90% RH max. (non condensing).

Atmosphere Indoors (no direct sunlight); no corrosive gas, inflammable gas, oil mist, or dust.

Elevation 1000 meters or less above sea level.

Servomotor Specifications *APC # 9842 (Cup Motor)*

Power facility capacity 1.7kVA.

Continuous Running Duty

Rated output 1.0 kW.

Rated torque 4.78Nm (676.8 oz-in).

Specifications Continued

Maximum torque 14.4Nm (2039.0 oz-in).

Rated rotation speed 2000 r/min.

Maximum rotation speed 3000 r/min.

Permissible instantaneous rotation speed-3450 r/min.

Power rate at continuous rated torque ... 16.7 kW/s.

Rated current 6 A.

Maximum current 18 A.

Speed/Position encoder Resolution per encoder/servomotor rotation: 131072 pulses/revolution.

Environment

Ambient temperature 0 to 40°C(32 to 104°F)(non freezing), storage: -15 to 70°C(-5 to 158°F)(non freezing).

Ambient humidity 80% RH max. (non condensing), storage: 90% RH max. (non condensing).

Atmosphere Indoors (no direct sunlight); no corrosive gas, inflammable gas, oil mist, or dust.


Elevation 1000 meters or less above sea level.

REPLACEMENT PARTS

- 7 -

This section lists the major user-replaceable components in the SL-1200 Auto Ladle System, and shows locations for the major components. A Replacement parts list follows. Please see the "Technical Documentation" section of this manual for more information.

When you place an order for a part, please give us the "Part Number," "Quantity," and "Description" of the part. You can call or write Advance Products and we will ship the part to you as soon as possible. Our address and telephone number are listed at the bottom of the front page of this Manual.

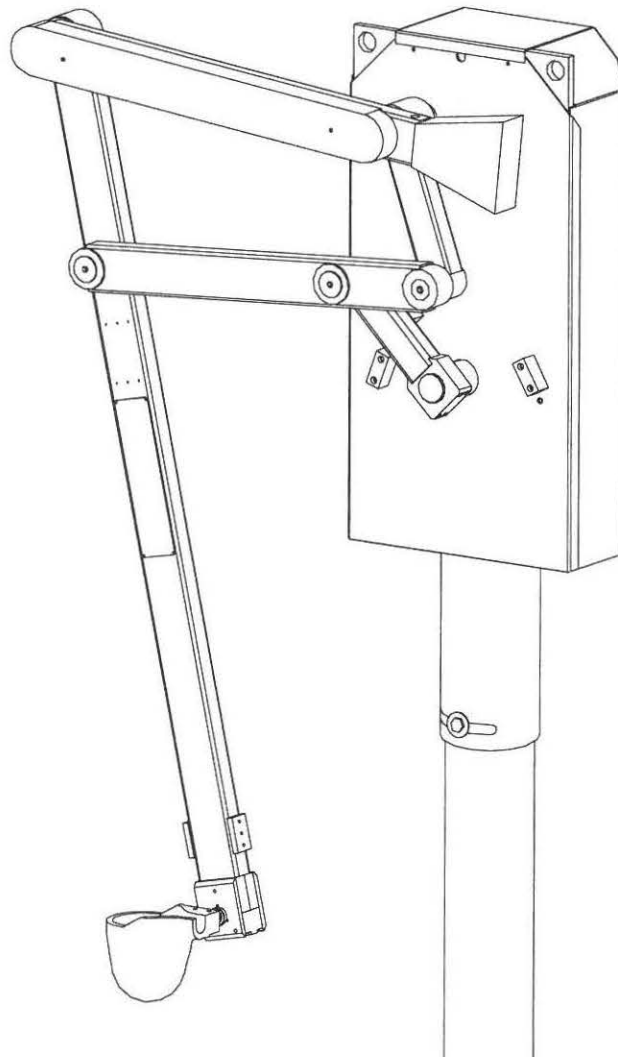



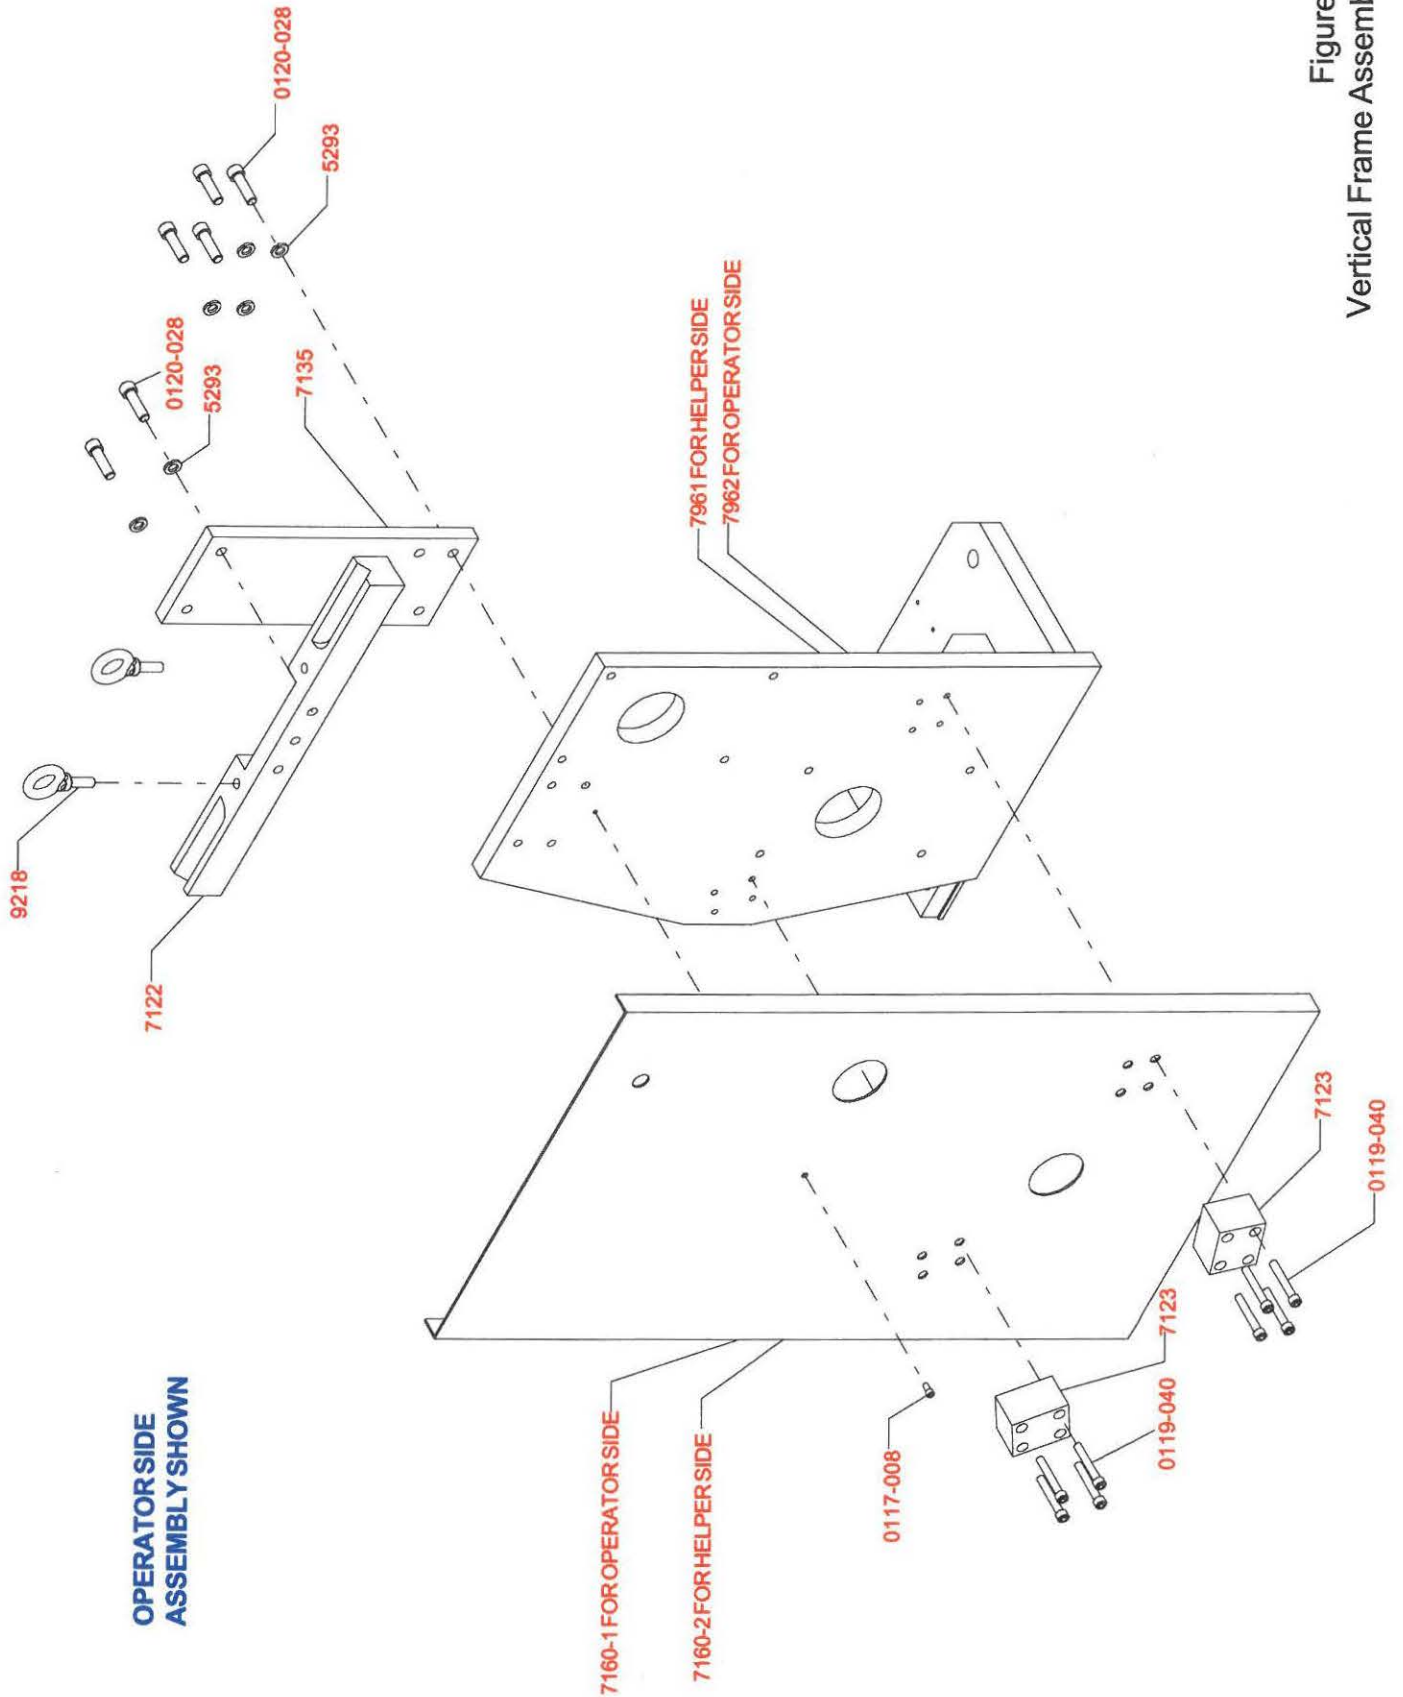


Figure 7-1
Vertical Frame Assembly 1

Figure 7-2
Vertical Frame Assembly 2

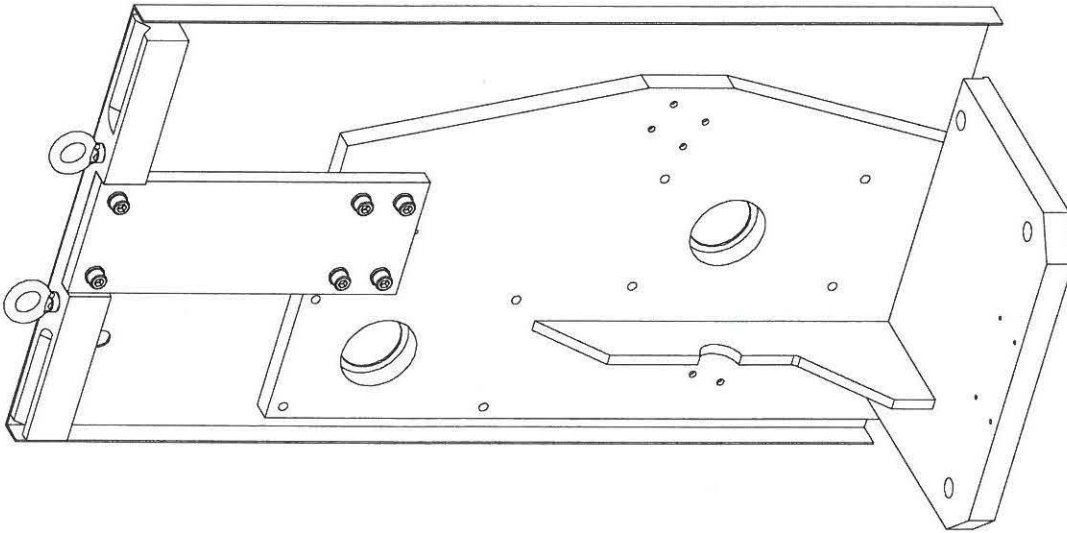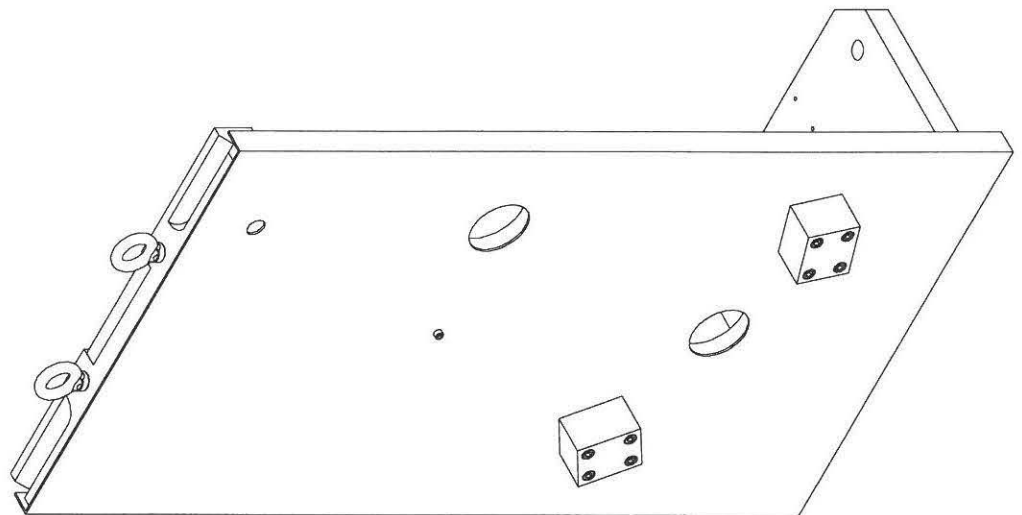

OPERATOR SIDE
ASSEMBLY SHOWN




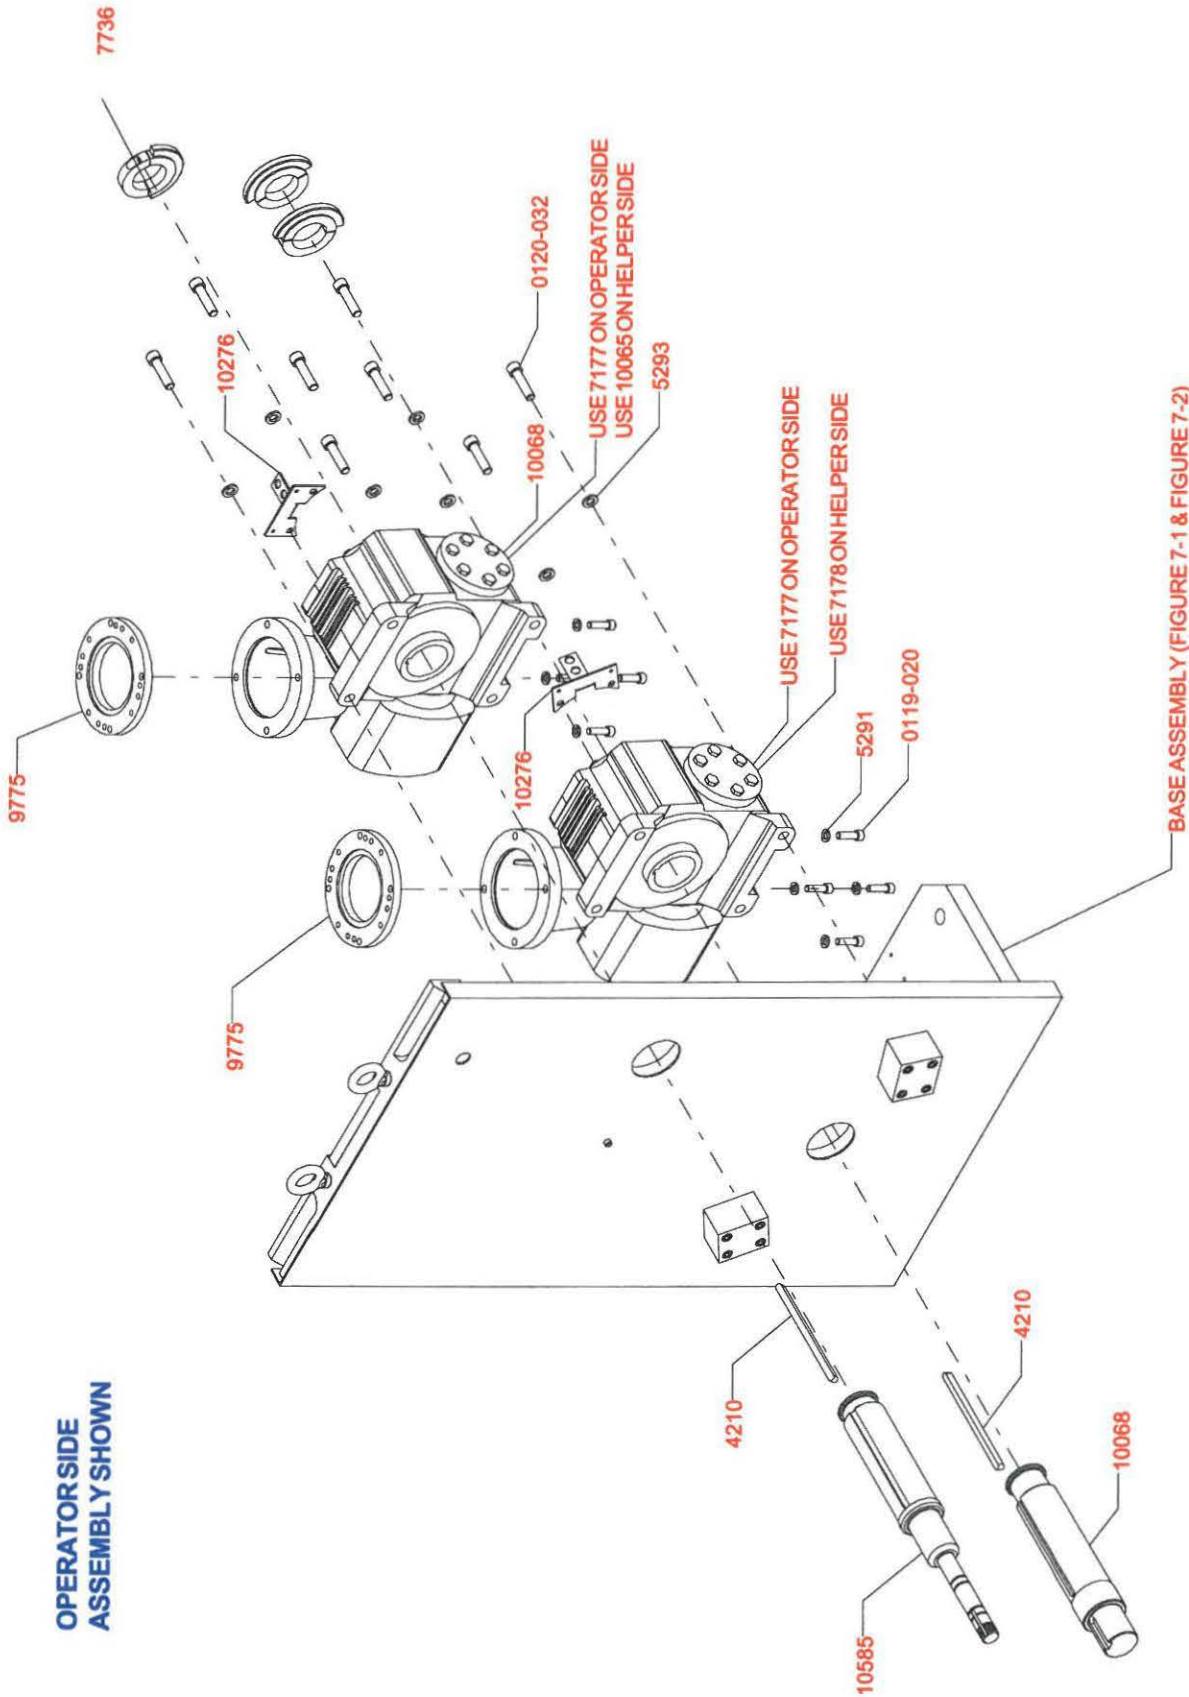



Figure 7-3
Gear Reducer Placement

OPERATOR SIDE
ASSEMBLY SHOWN

Figure 7-4
Gear Reducer Assembly

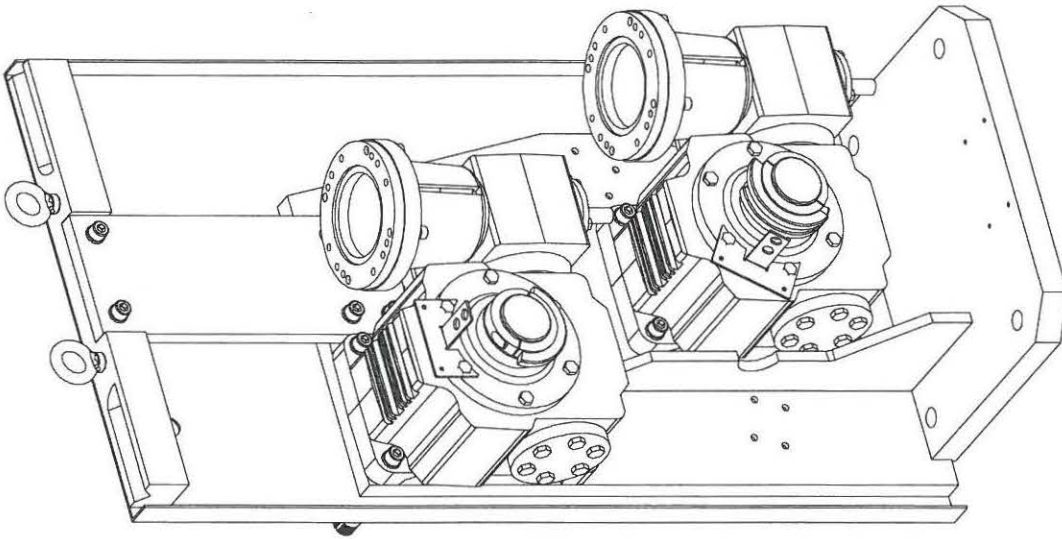

OPERATOR SIDE
ASSEMBLY SHOWN

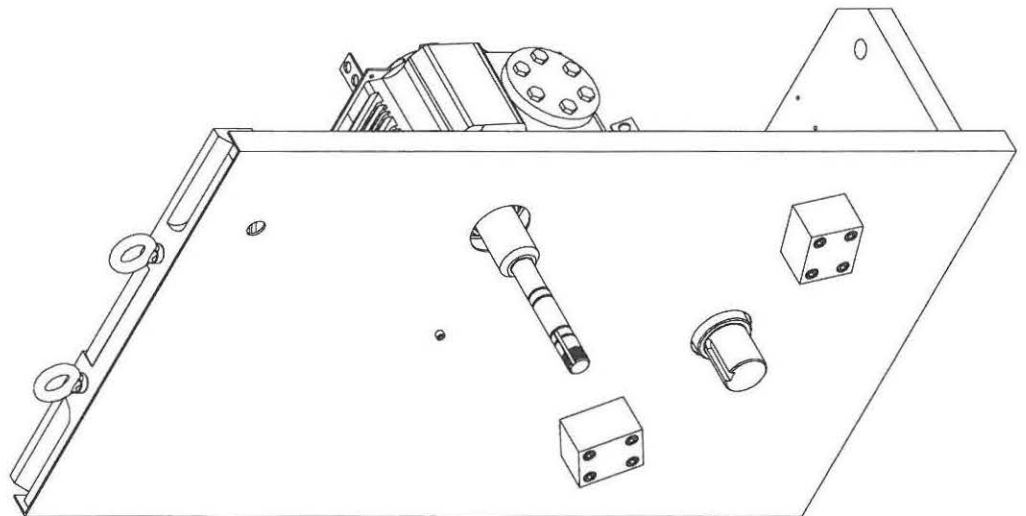

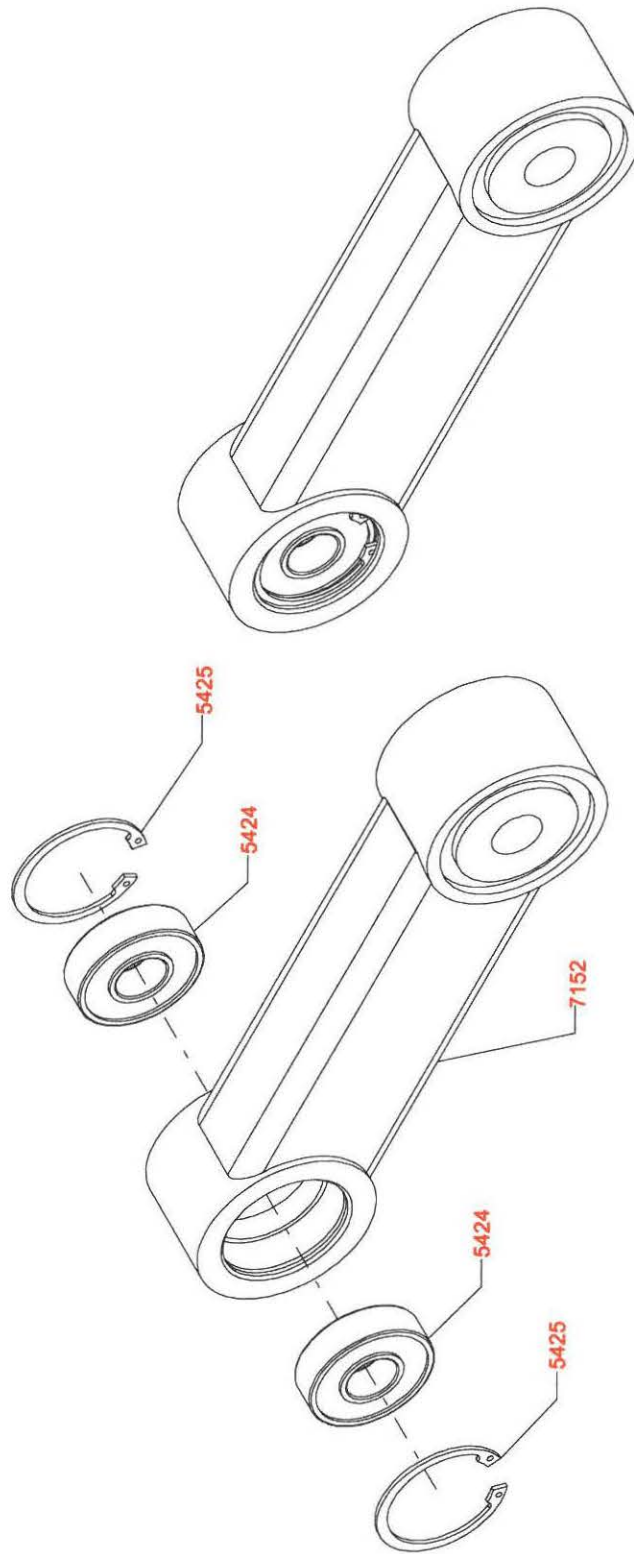


Figure 7-5
"Dog Bone" Arm Assembly

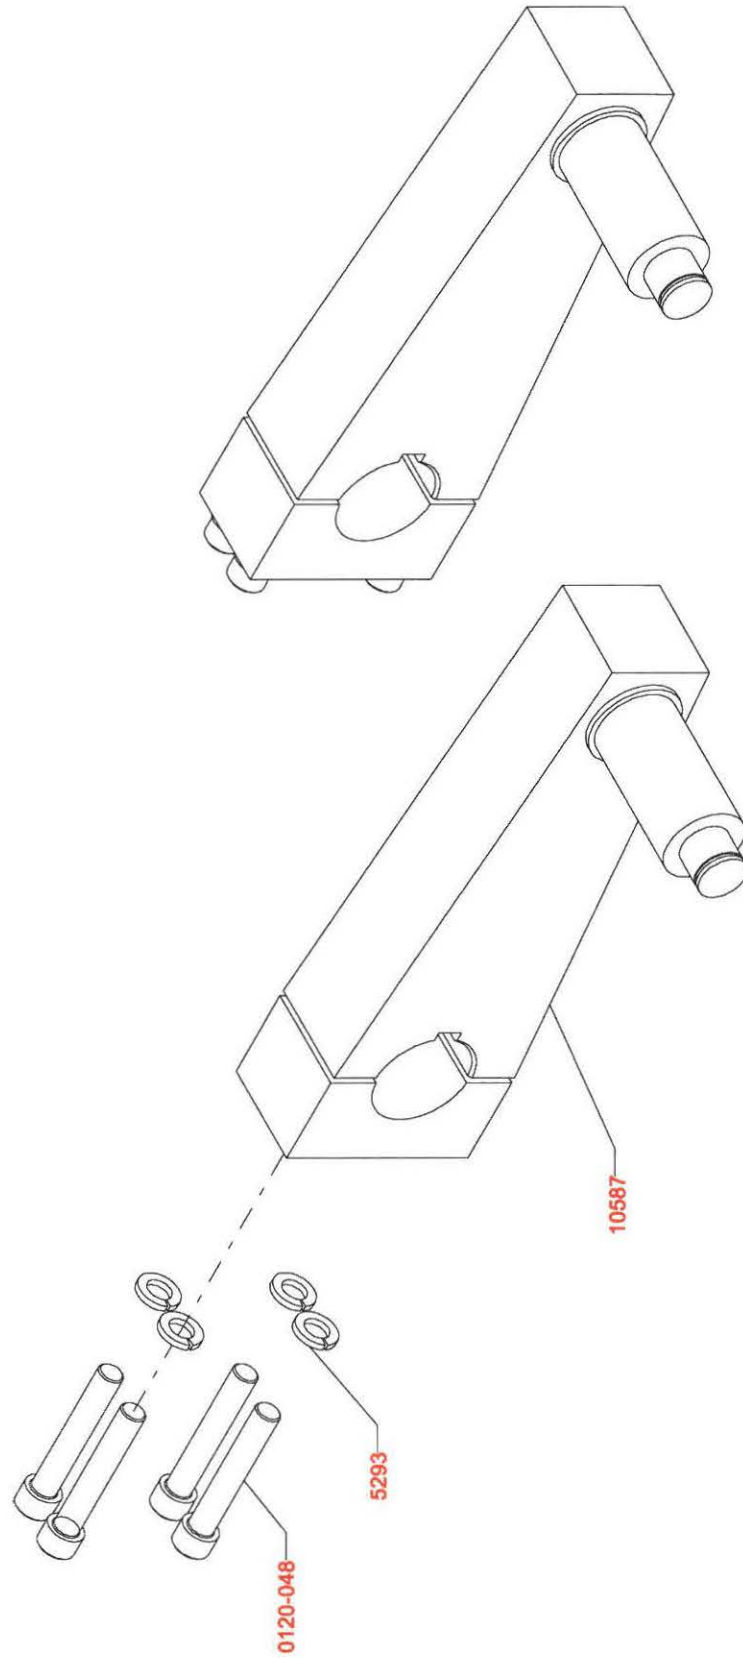


Figure 7-6
"Crank" Arm Assembly

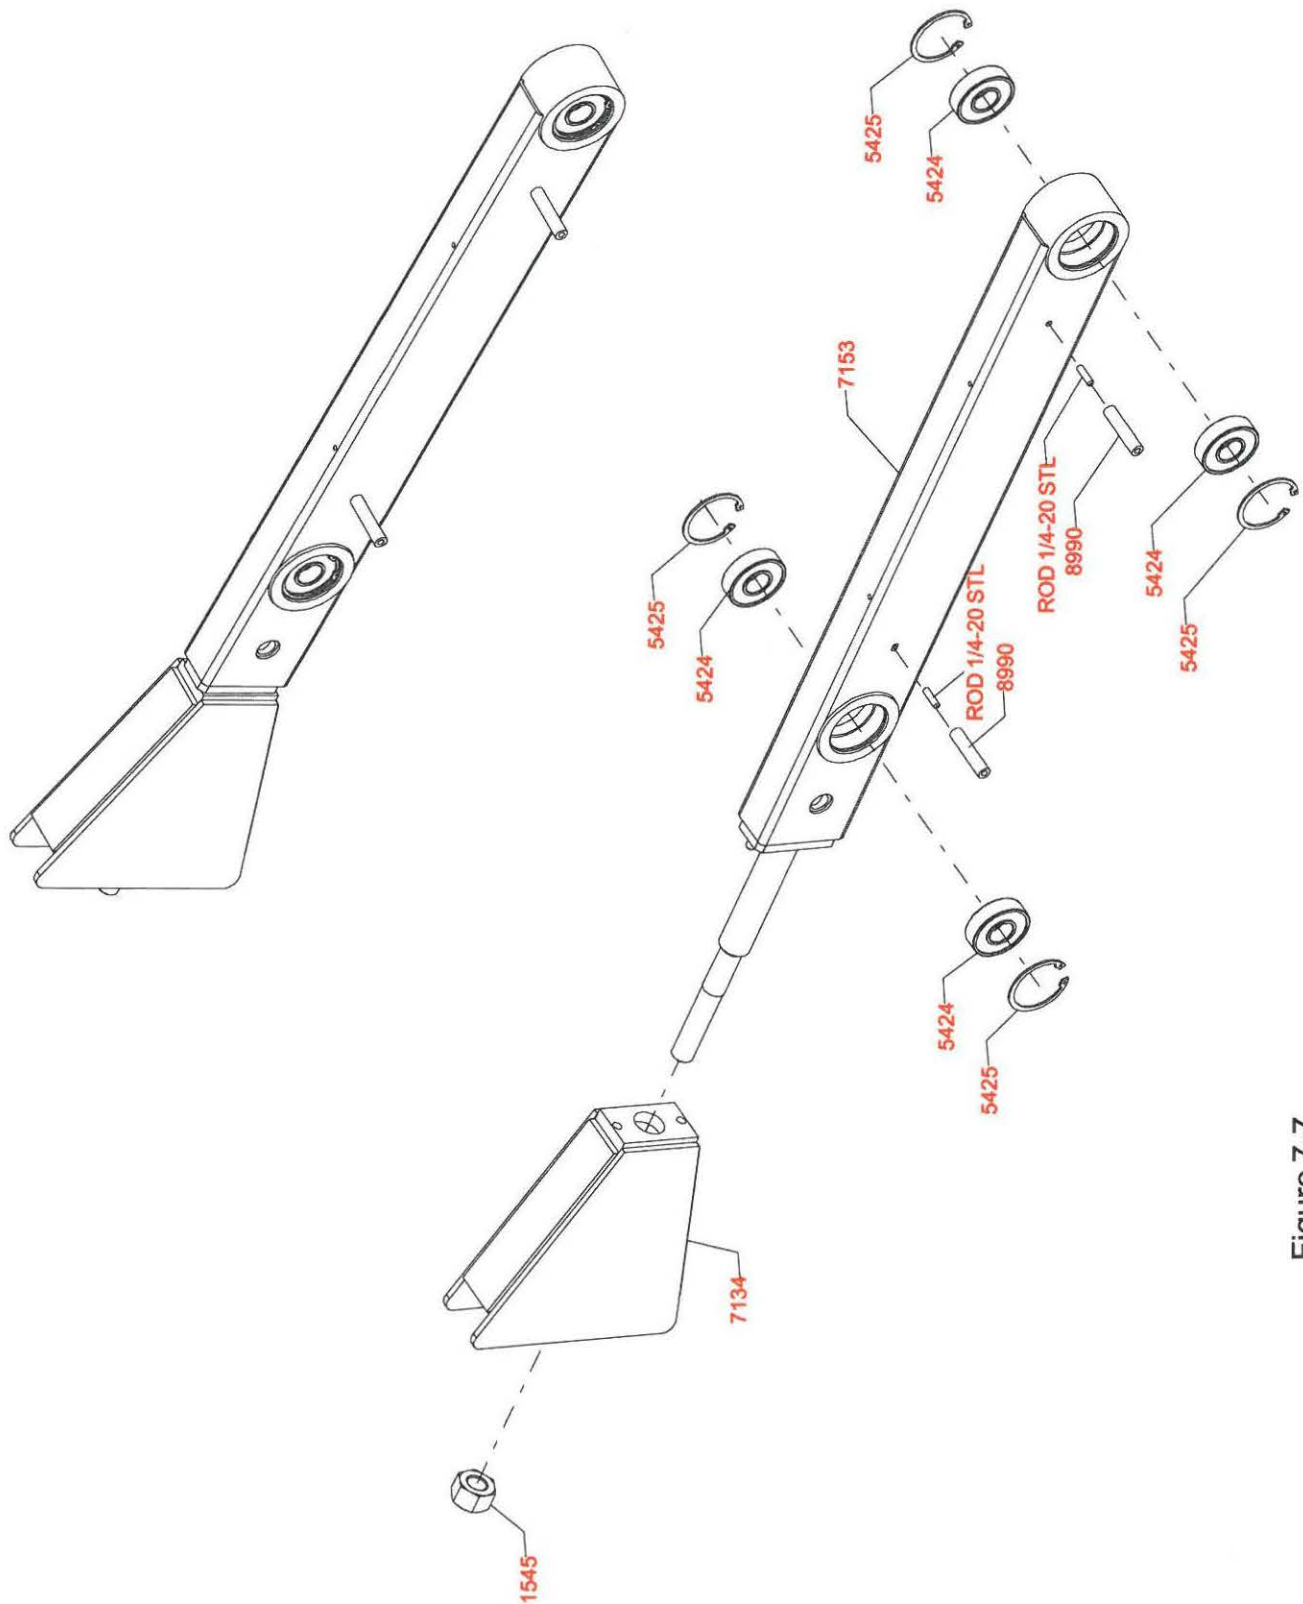


Figure 7-7
"Counterweight" Arm Assembly



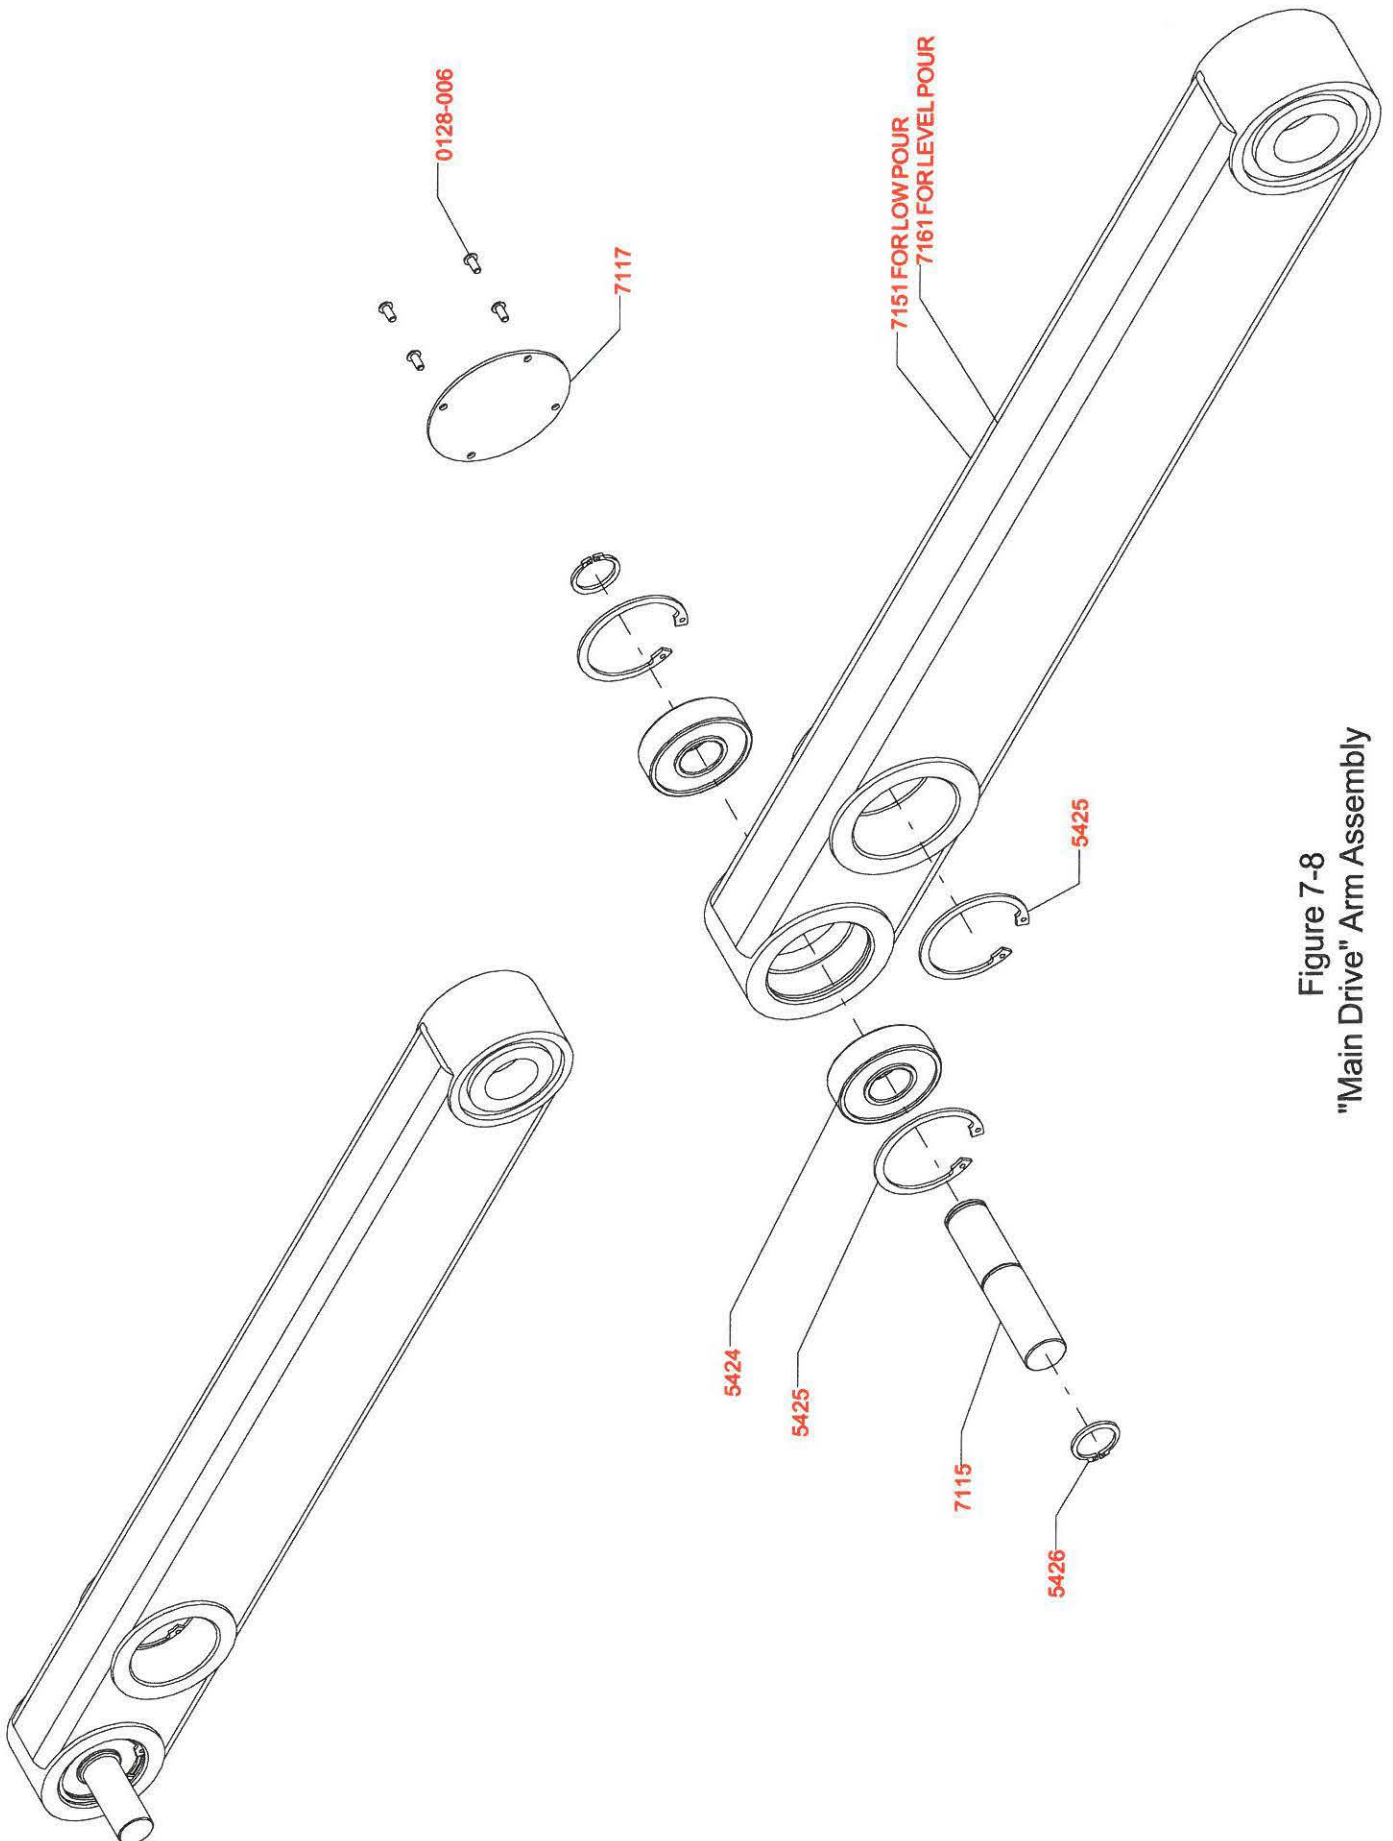


Figure 7-8
"Main Drive" Arm Assembly

Figure 7-9
"Cup" Arm Assembly

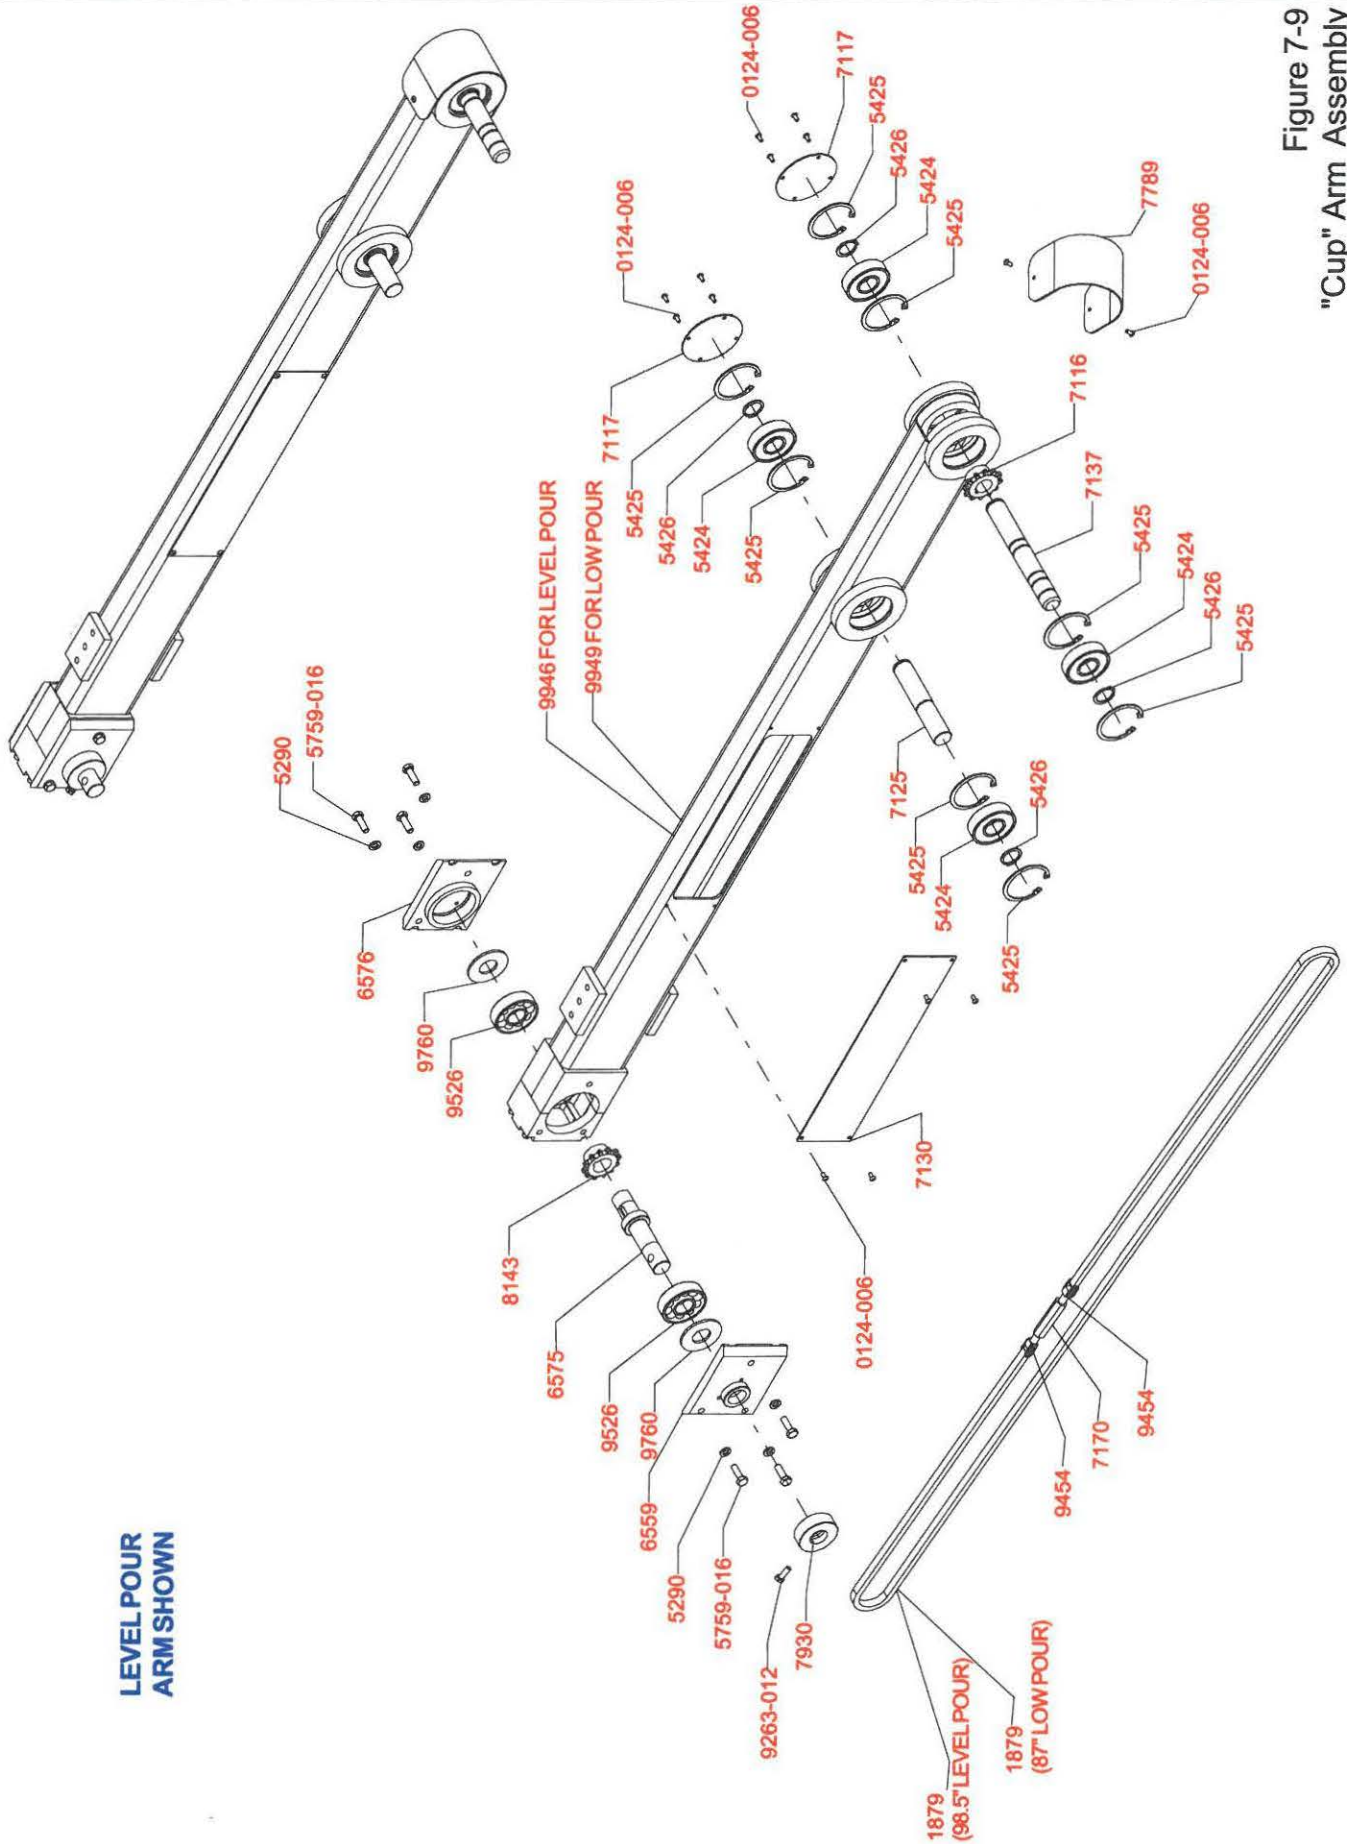

LEVEL POUR
ARM SHOWN

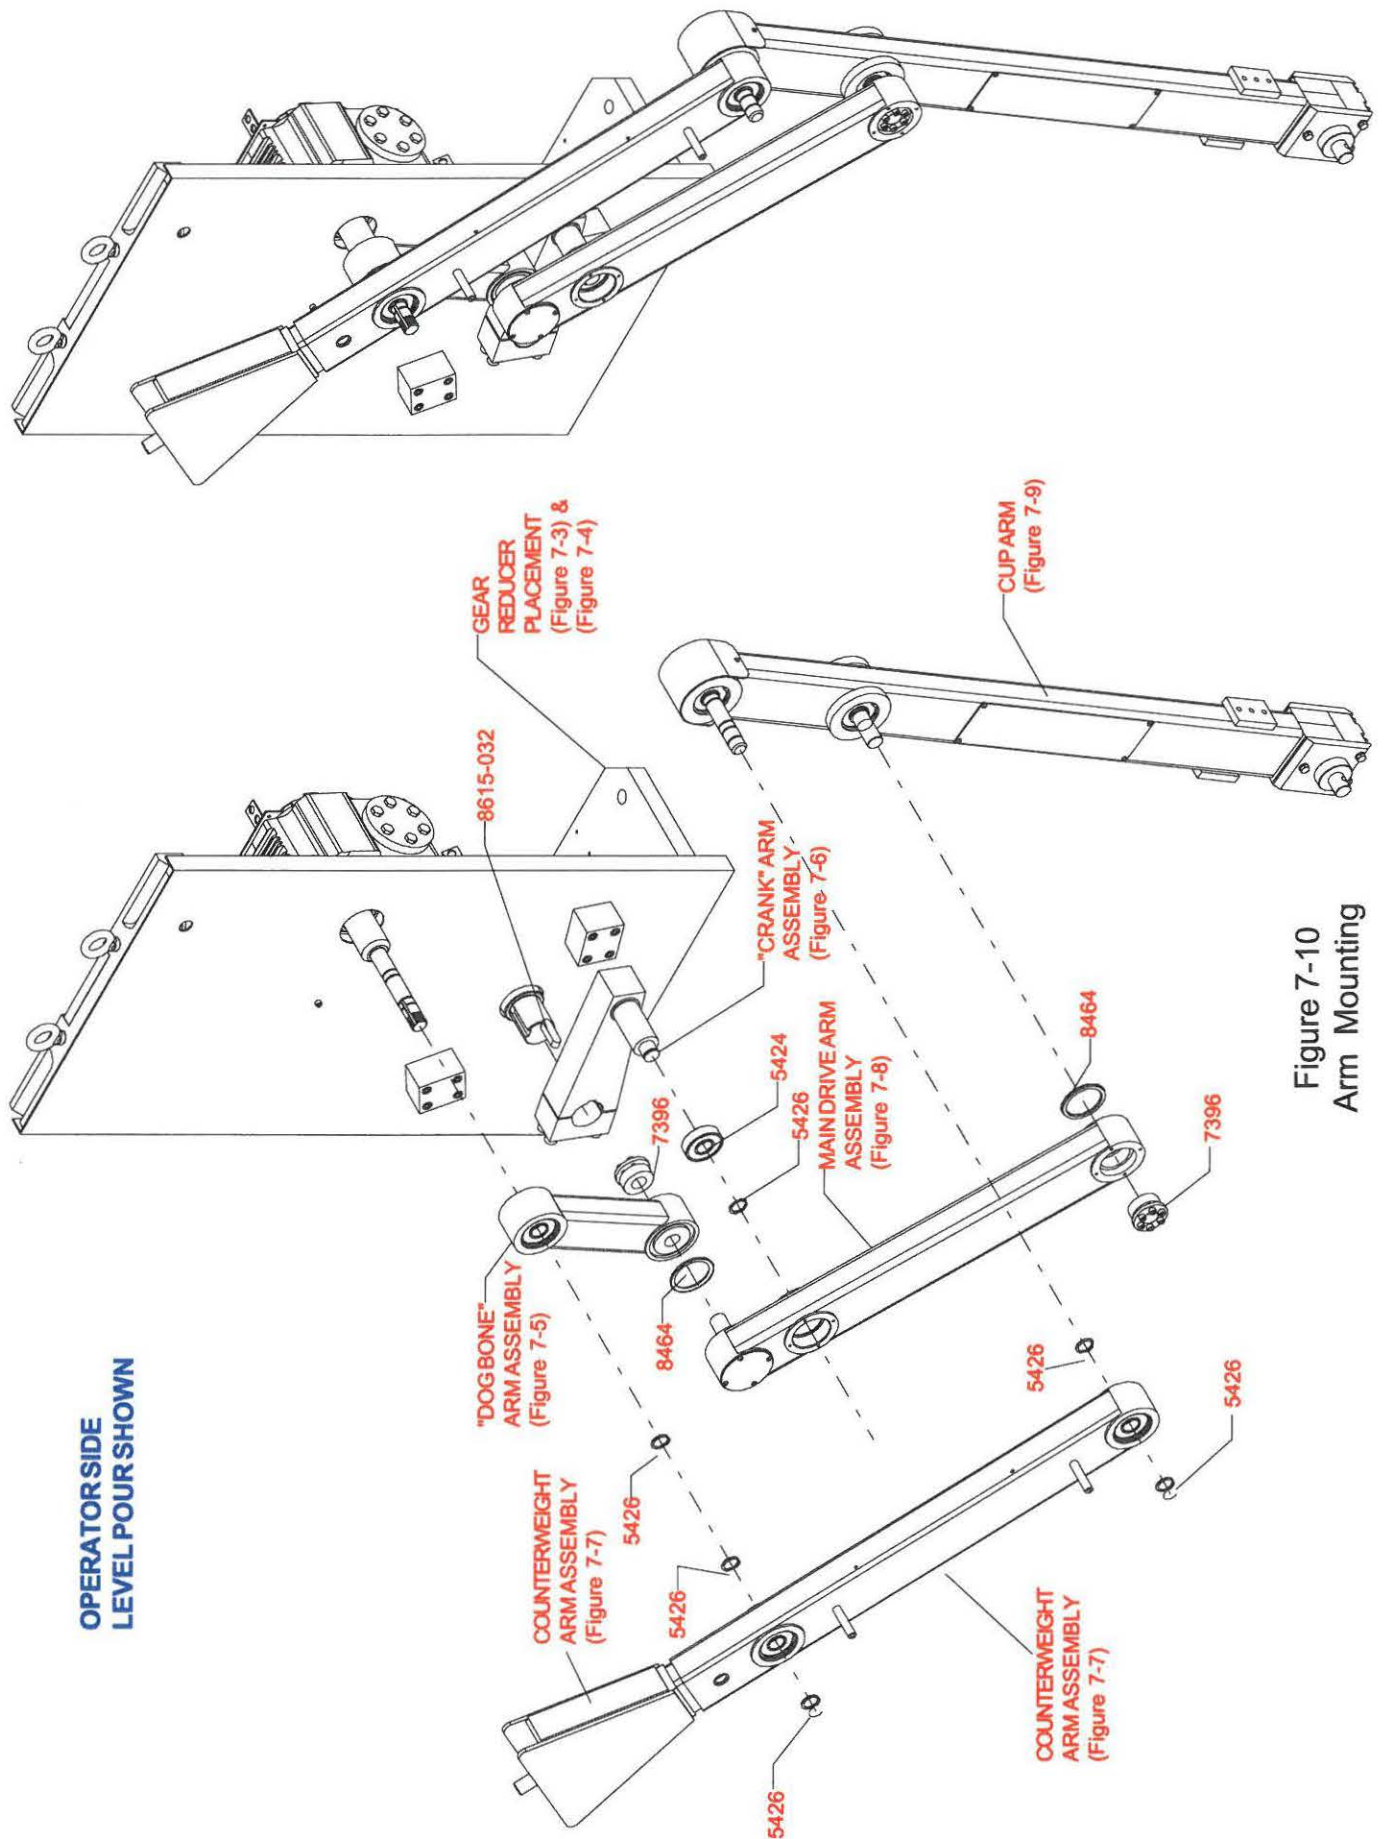

OPERATOR SIDE
LEVEL POUR SHOWN

Figure 7-10
Arm Mounting

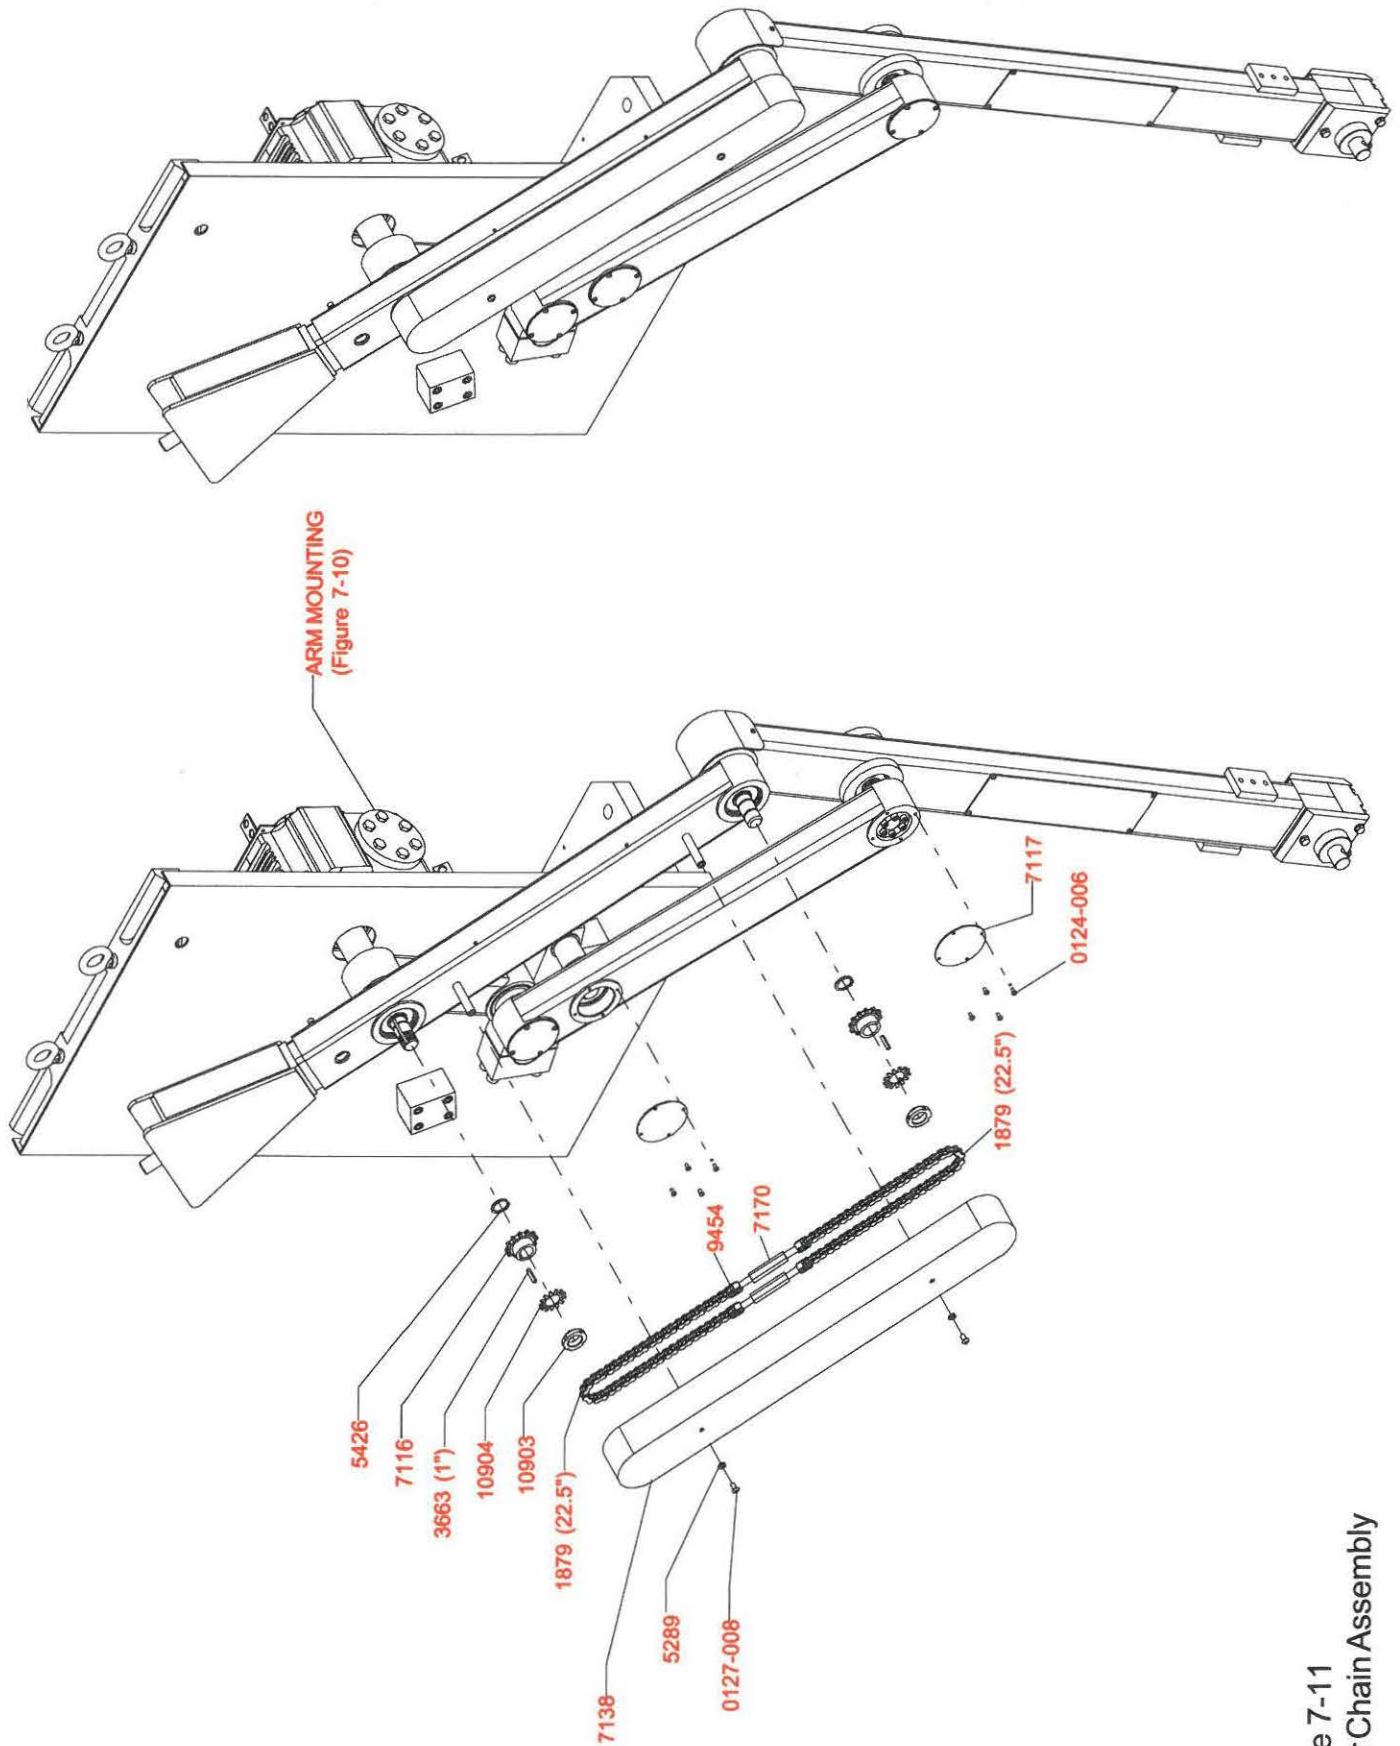


Figure 7-11
Outer Chain Assembly

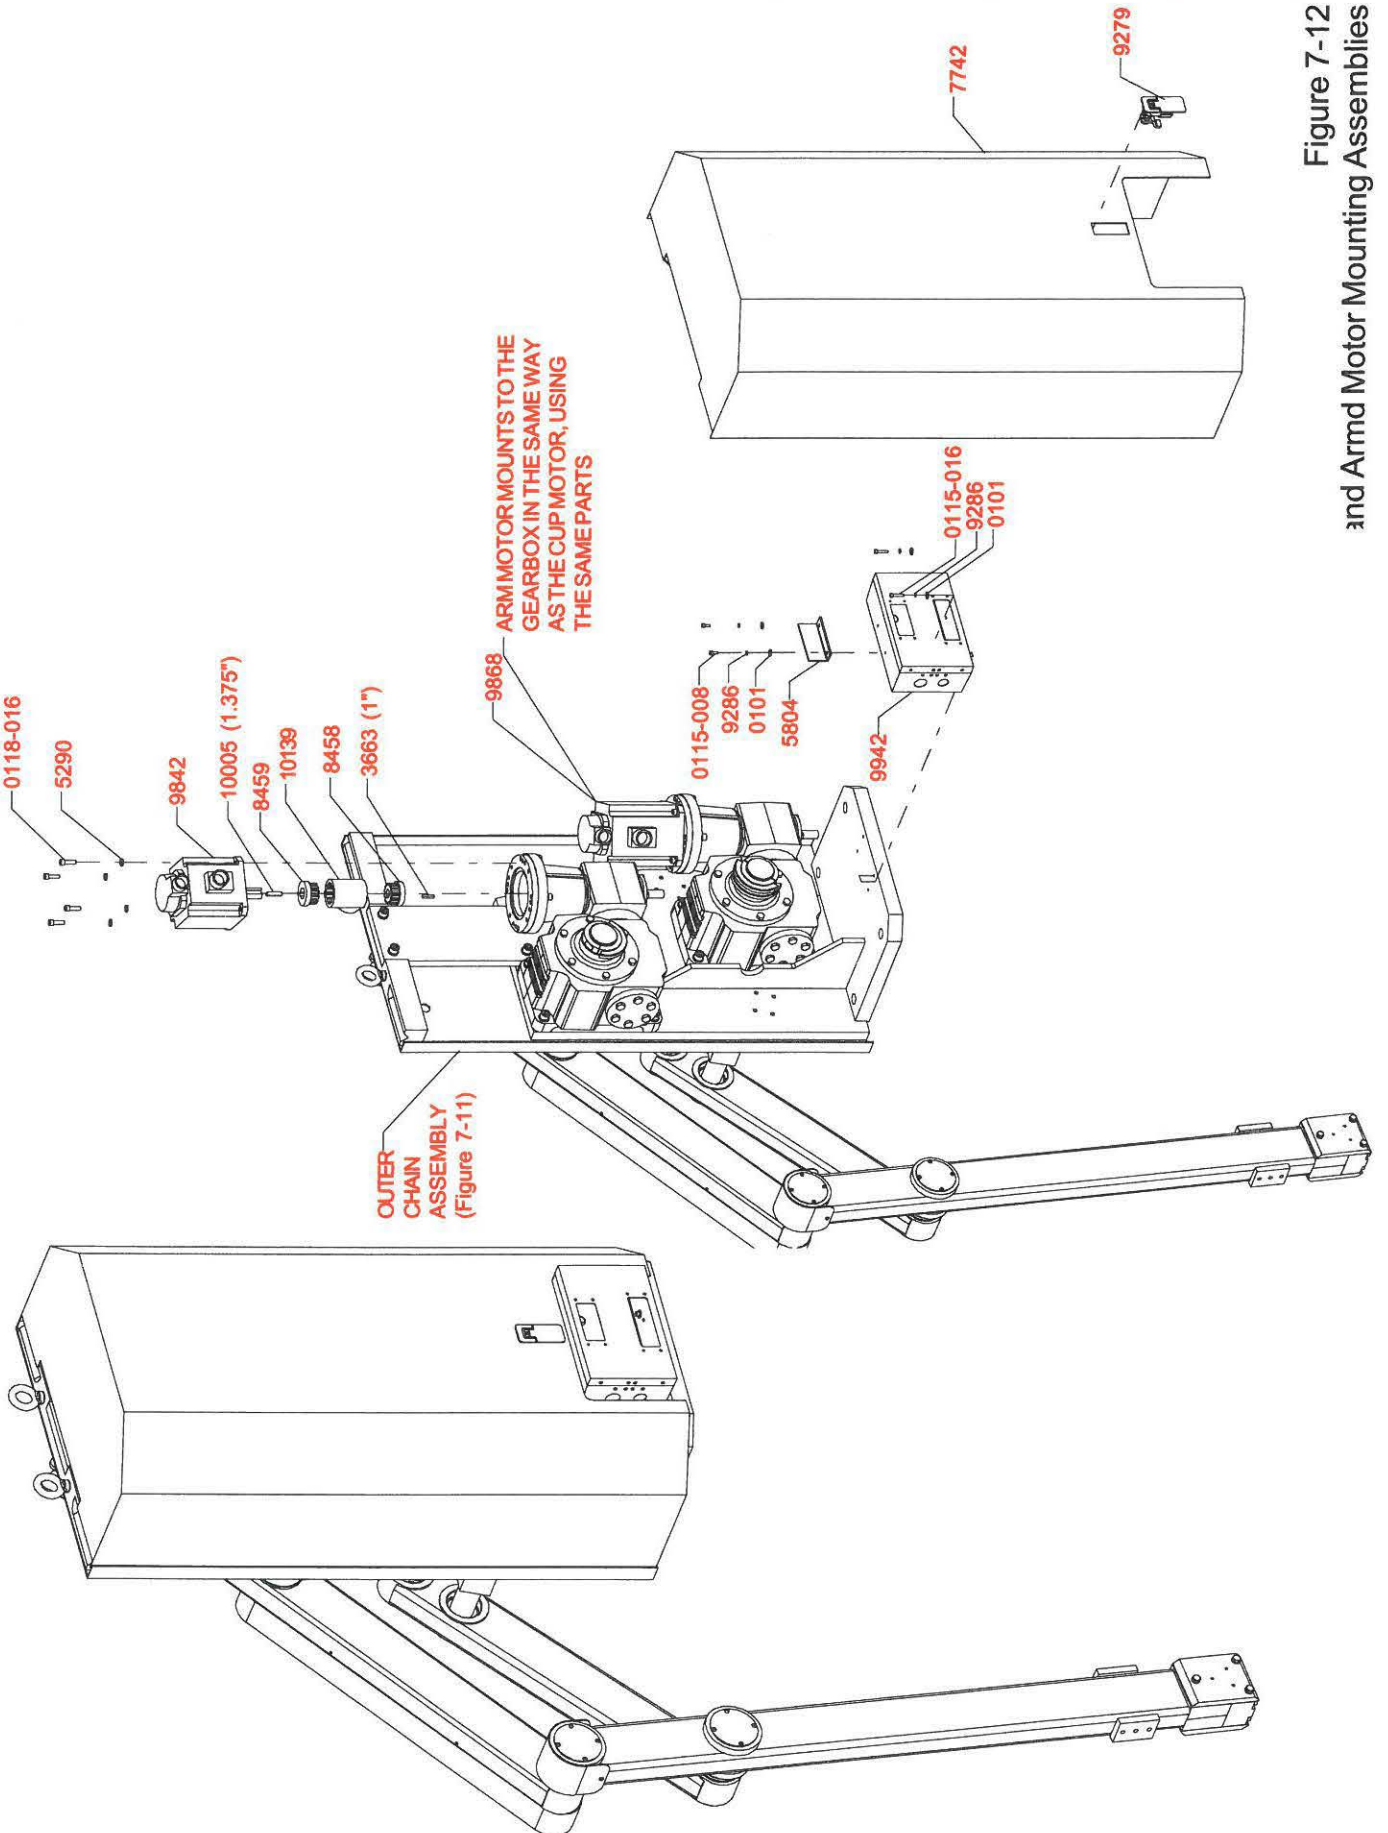


Figure 7-12
and Arm Motor Mounting Assemblies

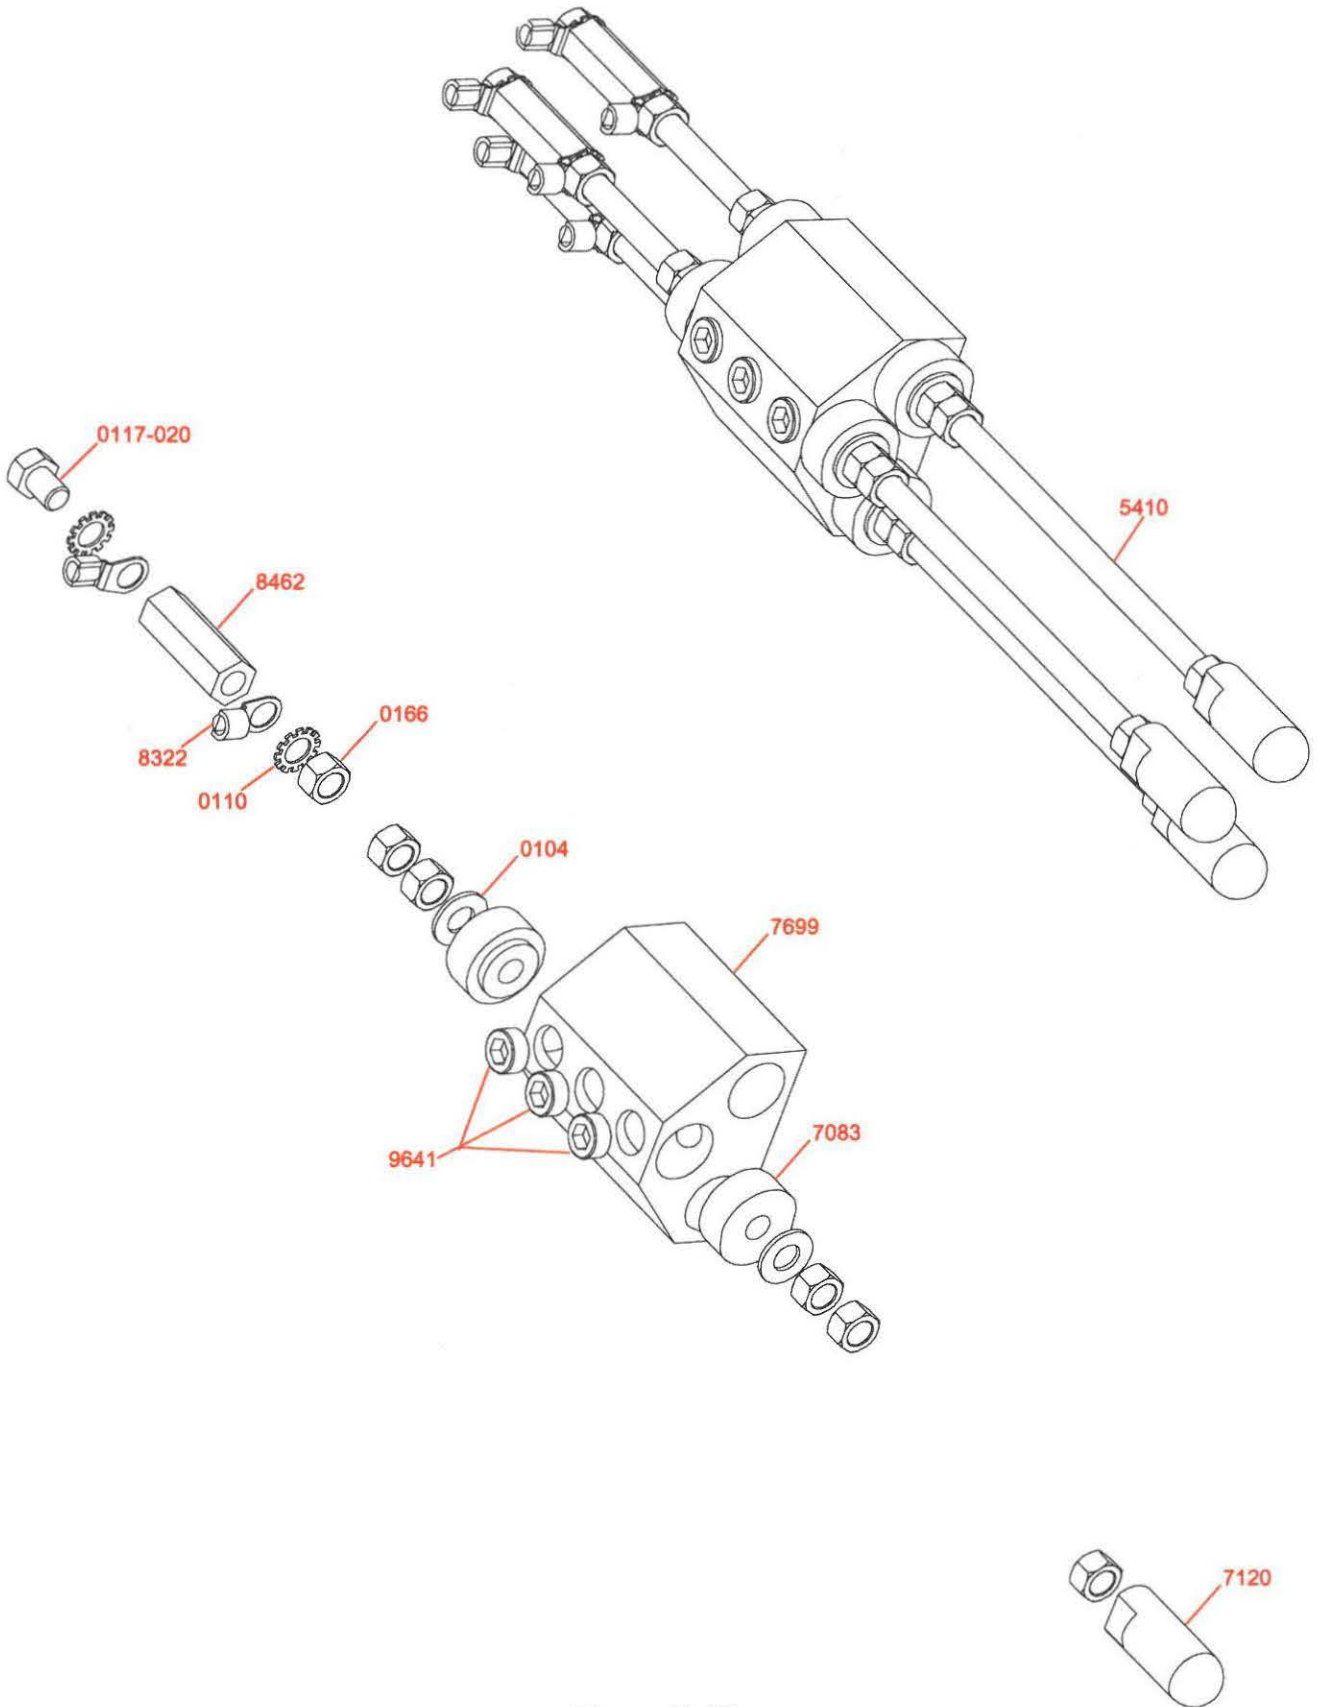


Figure 7-13
Probes Assembly

SL-1200 PARTS DESCRIPTIONS

PART#	QTY	TYP	DESCRIPTION	PART#	QTY	TYP	DESCRIPTION
1545	1	EA	NUT, 7/8-9, HEX, FLANGE	7930	1	EA	SPACER - CUP 650/1400/1500
1879	19	FT	CHAIN,#40 PRE-STRETCHED-single	7961	1	EA	VERTICAL PLATE ASSY. HELPER
1880	6	EA	LINK, CONNECTING, #40 CHAIN	7962	1	EA	VERTICAL PLATE ASSY. OPERATOR
3663	2	IN	KEY, 3/16 SQ (STEEL)	8143	1	EA	Sprocket - #40 Chain 12 teeth
4210	2	EA	KEY, 3/8 SQ X 7.500, 55EP	8322	6	EA	TERMINAL, RING, 8AWG, 3/8
5290	4	EA	WASHER, 5/16, LOCK, COIL	8378	65	FT	WIRE, 16AWG, WHITE, PROBES
5294	8	EA	WASHER, 3/4, LOCK, COIL	8462	3	EA	Coupler, 3/8-16 X 1.750, Hex
5379	1	EA	CONNECTOR, 1/2" ARMORED CABLE,	8464	2	EA	Seal, V-ring, CR, 400600
5410	3	EA	ROD, THREADED, 3/8-16 X 17	8504	2	EA	LABEL, TEMP,140-190F,TELETEMP
5424	11	EA	BEARING,RADIAL,305KDD Standard	8613	2	EA	COUPLING, ASSY, 1400, GUARDIAN
5425	16	EA	SNAP RING, INTERNAL, HO-244	8764	2	EA	LABEL, ADVANCE labels
5426	14	EA	SNAP RING, EXTERNAL, SHR-98	8827	5	FT	CONDUIT,FLEX,1/2",ALUMINUM
5804	1	EA	BAR, LATCH	8846	5	EA	CLIP, CONDUIT, 1/2 RIGID
5842	1	EA	PIN, LADLE CUP, 2.750 LONG	8851	1	EA	CONNECTOR,FLEX,REGAL,672,1/2"
7083	6	EA	INSULATOR, PROBES, ALL LADLERS	8854	1	EA	CONDUIT COUPLING,1/2",GALV,
7115	1	EA	SHAFT SHORT PIVOT	8990	2	EA	Standoff, 2.330" LG.
7116	4	EA	SPROCKET, 12 TOOTH SPROCKET	9001	2	EA	BRACKET, ARM PROX SWITCH
7117	5	EA	CAP BEARING 4 HOLE MOUNT	9218	2	EA	EYEBOLT, 1/2-13 X 1.50
7120	3	EA	PROBE, TIP, ALL LADLERS	9279	1	EA	LATCH, LADLE COVER
7122	1	EA	BAR, EYEBOLT	9379	2	EA	CLAMP COLLAR, 11/16ID X 1.50D
7123	2	EA	BLOCK POSITIVE STOP ARM	9497	1	EA	LABEL, MULTILINGUAL, YELLOW ON
7125	1	EA	SHAFT LONG PIVOT	9498	1	EA	LABEL, MULTILINGUAL, YELLOW ON
7126	1	EA	SHAFT, CUP	9526	2	EA	BEARING, HI TEMP
7130	1	EA	COVER, PLATE, TURNBUCKLE ARM	9775	2	EA	MOTOR ADAPTOR, MITSUBSHI TO
7134	1	EA	COUNTERWEIGHT ASSY COMPLETE	9842	1	EA	MOTOR, SERVO, 2000RPM, 1000W
7135	1	EA	PLATE, EYEBOLT SUPPORT	9868	1	EA	MOTOR, SERVO, W/BRAKE, 2000RPM
7137	1	EA	SHAFT PIVOT - UPPER CUP ARM	9925	2	EA	KEY, 5/16 X 9/32 X 1-1/2, CRS
7138	1	EA	COVER, COUNTERWEIGHT ARM CHAIN	9946	1	EA	CUP ARM LINK, MACH'D, COMPLETE
7151	1	EA	ARM MAIN DRIVE LINK, SL1200	9949	1	EA	CUP ARM LINK, MACH'D, COMPLETE
7152	1	EA	ARM, SMALL LINK, "DOG BONE"	9950	1	EA	CAP, SPROCKET
7153	1	EA	ARM, COUNTERWEIGHT	9951	1	EA	CUP END INTERFACE
7160-1	1	EA	COVER, ARM SIDE - OPERATOR	10065	1	EA	GEARBOX, 200:1, CONE DRIVE
7160-2	1	EA	COVER, ARM SIDE, HELPER	10068	1	EA	GEARBOX, 200:1, CONE DRIVE
7161	1	EA	ARM MAIN DRIVE 3 HOLE, SL1200	10141	1	EA	SHAFT, MOUNTING SHAFT FOR MAIN
7170	3	EA	TURNBUCKLE, FOR #40 CHAIN	10142	1	EA	SHAFT, MOUNTING SHAFT FOR CUP
7177	1	EA	GEARBOX, 300:1, CONE DRIVE	10584	1	EA	SHAFT, MAIN, ARM, SL-1200
7178	1	EA	GEARBOX, 300:1, CONE DRIVE	10585	1	EA	SHAFT, CUP ROTATE DRIVE
7396	2	EA	Locking Assy, .984 dia shaft	10587	1	EA	ARM, MAIN CRANK, WELDMENT
7699	1	EA	Probe Block - 3 Hole	10617	6	EA	PIPE STRAP, 1/2", ONE HOLE
7736	3	EA	CAM-SPLIT CAM FOR PROX SWITCH	10715	3	EA	SWITCH, PROXIMITY
7742	1	EA	COVER, MOTOR SIDE, 1200, BLUE	10903	2	EA	Nut,bearing Pt# N05
7789	1	EA	COVER, CUP ARM END	10904	2	EA	Washer, Bearing, PW05

ELECTRICAL CABINET PARTS DESCRIPTIONS

10119	1	EA	TRANSFORMER, 1PH, 240V, TO 120V, 250V, SQ-D 9070TF250D1
10124	2	EA	FUSE, 1 AMP, PRIMARY OF .25KVA
10125	1	EA	FUSE, 2 AMP, SECONDARY OF .25KVA TRANSFORMER
10235	1	EA	LABEL, "ADVANCE", CORPORATE, FOR COVERS AND ARMS
10237	1	EA	LABEL, CAUTION, MAIN POWER DISCONNECT
10305	1	EA	LABEL, WARNING, FOR CANADA
10385-002	2	EA	mitsubishi servo encoder cable sprayers & ladlers
10409	1	EA	ELECTRICAL CABINET, EMPTY W/SUBPANEL
10445	2	EA	24 POLE BASE, SHELL ILME CHI-24
10446	1	EA	16 POLE BASE, SHELL ILME CHI-16
10493	1	EA	LEGEND PLATE, EMERGENCY STOP LADLERS & SPRAYERS
10499	1	EA	SWITCH MECHANISM W/ RED PUSH BUTTON,E-STOP
10500	3	EA	CONTACT BLOCK W/ N.C. CONTACTS, E-STOP
10578	2	EA	FINGERSAFE TERMINAL COVER FOR SWITCH CONTACT BLOCKS
10581	1	EA	SWITCH, 12" SHAFT, DISCONNECT KIT FORM
11589	1	EA	CONTACT BLOCK,AUX, 1 N.O.
11630	1	EA	RELAY, 4 N.O. CONTACTS
11632	1	EA	AUXILLIARY CONTACT, 1 N.C.
11881	1	EA	POWER SUPPLY, 72W, 2.9A, 24-28VDC
4864	3	EA	FUSE BLOCK,INDICATING,110-250V
8007	1	EA	TRANSFORMER, 1PH, 120V X 24VCT 0.2A, 60HZ, PROBE
8026	1	EA	PUSHBUTTON, 3POS, MUSH, ILLUMINATED, 120V
8037	1	EA	RELAY, 230VAC, 3PHASE MONITOR
8129	1	EA	CONNECTOR,16PIN,FEMALE,(TERMINAL)
8131	2	EA	CONNECTOR,24PIN FEMALE,(TERMINAL)
8139	3	EA	FUSE, 6AMP, TIMEDELAY, 600V, 13/32 x 1.5
8314	2	EA	RELAY, SPDT, 24VDC/AC, 6A W/BASE
8371	1	EA	RELAY BASE, 8 PIN, OCTAL
8505	1	EA	LABEL, TEMP,100-130F,5DEG INCREMENTS
8586	1	EA	FUSE, 2AMP, FAST BLOW, 250V 5X20MM, GLASS
8803	4	EA	END ANCHOR
8839	60	EA	TERMINAL BLOCK
8840	8	EA	END BARRIER
8843	6	EA	TERMINAL BLOCK, GROUNDING
8867	5	EA	RELAY ASSY, BASE+RELAY+LED
8868	1	EA	RELAY ASSY, RELAY+BASE+LED
8869	4	EA	RELAY ASSY, RELAY+BASE+LED
9197	1	EA	FUSE, 1AMP, FAST BLOW, 250V, .25X1.25, GLASS
9440	1	EA	LABEL, 2 7/16 SQ, RED, LADLER START
9843	1	EA	SERVO AMP, ANALOG, 1000W
9864	1	EA	PLC, 16 INPUT, 16 OUTPUT RELAY
9865	4	EA	CABLE, SERVO AMP TO TERMINAL BLOCK, 0.5 METER

ELECTRICAL CABINET PARTS DESCRIPTIONS CONTINUED

9866	4	EA	TERMINAL BLOCK, USED WITH 9867
9867	1	EA	SERVO AMP, ANALOG, 2000 WATT
9871	2	EA	MOTION CONTROLLER MODULE SGL. AXIS STEP/DIR CONT.#
9873	1	EA	CABLE, COMMUNICATIONS, PLC TO TOUCH SCREEN
9874	1	EA	EXPANSION MODULE,8 INPUT
9901	1	EA	HEAT EXCHANGER, 115VAC, LADLER 30 WATTS
9977	1	EA	IDENTIFICATION PLATE, SPRAYERS AND LADLERS
9983	1	EA	PLATE, DISPLAY ADAPTER, MITS. 610 OR 615 SCREEN
9987	1	EA	MMI, TOUCH SCREEN, E615, MITS.

*Additional
products
available from
Advance!*

[®]
Advance

Consumables/Shot End:

Shot Sleeves
Reworked Shot Sleeves
Plunger Tips
Plunger Rods
Ordering Forms

Consumables/Misc:

Hand Spray Guns
Die Clamps, T-Bolts, and Nuts
Slap Stix
Thermocouples
Die Cooling Fountain Water Junctions
Ladle Cups

Automation/Spraying:

SRL-250 Linear Spray Systems
Reciprocating Spray Systems
RSS-2500 Robotic Spray Systems
Spraying Technology
Spray Heads

Automation/Ladlers:

Ladlers
Ladle Cups

Automation/Misc:

Kawasaki Robots
Robot Grippers
Mini-Max Reclaimers
Central Lube Systems
Tool Temp Oil Temperature Control Units
Electronic Bacteria Killers
Stationary Casting Coolers
Vertical C-Frame Trim Press
Safety Signage

Consumables

ShotEnd

- Shot Sleeves
- Reworked Shot Sleeves
- Plunger Tips
- Plunger Rods
- Ordering Forms

Advance[®]

consumables

SHOT SLEEVES



For over 50 years ADVANCE[®] has been the leader in shot sleeve manufacturing.

Proper Design, tight manufacturing standards and in-house heat treating and nitriding assure you the highest quality at competitive prices and deliveries.

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

Your "Window To The World"® Of Shot End

Ask the operator that knows his die casting machine inside and out and he will tell you that "not all shot sleeves and shot end products are created equally."

Many manufacturers use antiquated equipment and inferior metal. The result is a shot sleeve that wears out before its time.

Advance uses only the finest H-13 steel. The metal is cut, bored and honed on computerized equipment by craftsmen with years of experience. We've been serving the die casting industry for over 52 years.

That is why we say "Experience and Equipment Does Make A Difference."



Customer side-by-side comparisons have proven the Advance sleeve lasts longer than our competitors' sleeves.

Don't buy sleeves on price alone, because as this brochure shows, not all shot sleeves are created equally.

1. Quality standards - we adhere to all acceptable machining practices.
2. Record keeping procedures - we maintain a file for you, so we can: keep track of heat treat numbers and the exact bar of steel the sleeve was machined from. Should a problem arise, we can trace pertinent information back to the source, have access to your heat treat and nitride hardness records.
3. Quick reference for reordering. So when you reorder a sleeve, we know exactly what you need and can expedite delivery. We make these records worthwhile to you by stamping our name on every sleeve we sell. Should any question arise, you know who to call, with full confidence that ADVANCE® can produce the information you need.

Specifications are subject to change without notice.

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
Printed in U.S.A.
APC-100-2002

Advance[®]

consumables



Shot Sleeve Maintenance is a Little Like Maintaining Your Teeth.

Brushing every day, and having your teeth professionally cleaned and polished will correct problems before they become an expensive and painful experience. Do the following periodic inspections and procedures and you could save a sleeve before it is too late:

- 1 Degrease and sandblast each time a sleeve is taken from service. If a crack exists, it will quickly become visible since the grease stays in the crack. Grinding and polishing the cracks at the die end and around the pour hole will extend sleeve life. If left unchecked these cracks can go the length of the sleeve and you could have a catastrophic failure.
- 2 Watch out for washouts. All sleeves will washout over time, but proper maintenance helps. If there is a "gross washout", very deep with sharp jagged edges, you may have a mechanical separation of the grain boundaries caused by excessive temperature when the metal temperature is above 1300°.
- 3 Clean the bore and check it for size. Use a good bore gauge and check both ends and in the middle of the sleeve. You may uncover an excessive bell-mouth or taper condition.
- 4 If you're experiencing excessive plunger tip wear, sticking plunger tips, or plunger tip flash by, it's probably time to call us for professional reconditioning!

Let us show you how ADVANCE[®] can help.

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

PROFESSIONAL SHOT SLEEVE RECONDITIONING



Catch 'em before it's too late

Advance offers 3 kinds of services

The first thing we do is clean and degrease the sleeve and inspect it. If we find a crack or washout beyond repair, we stop and will call you. There is a minimal inspection charge for this service. We recommend you clean and inspect the sleeves first. That way you become more knowledgeable about sleeve maintenance. Plus, you'll save the shipping expense, if a sleeve is beyond repair. One last thing, if a sleeve is beyond repair, destroy it. Don't leave it lying around so it can be used again. You could have a major accident if a bad sleeve were unknowingly put back into production. If it is determined to be salvageable, we have three procedures:

Procedure #1

If the sleeve has a minor washout, still concentric, and is in good general condition, we can simply hone it out to the proper size, deburr sharp edges, polish gates and renitride, if desired.

Procedure #2

If the sleeve has excessive washout, we will probably have to bore it out first. This procedure assures the sleeve concentricity. We can go for a clean up or bore to a specific size, then hone, grind, polish, and a final nitride.

Procedure #3

If the sleeve washout is severe, the area below the pour hole has become softer than the original hardness. The above procedures will do little for the sleeve's long term life. What's needed is a completely full anneal and re-heat treat. This process will bring the sleeve to its original hardness and proper metallurgical structure. Along with proper boring, honing, and nitriding, you will get a lot more shots from your sleeve.

With ADVANCE® shot sleeve reconditioning procedures, you'll get professional care and professional results! Give us a call today.

Specifications are subject to change without notice.

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
Printed in U.S.A.
APC-100-2002

Advance[®]

consumables

PLUNGER TIPS



**H13 STEEL, HEAT TREATED AND
NITRIDED, IF REQUIRED**

- **Custom Made to Your Specifications**
- **ADVANCE[®] Quality - Over 52 Years Serving the Die Casting Industry**




**"LIQUID FORGED" #20
BERYLLIUM COPPER**

- **Standard English or Metric Threads**
- **Blank Plunger Tip Blueprints available. See Your ADVANCE[®] Sales Person.**




Your "Window to the World"[®] of Die Casting Automation and Consumable Products

POINTS TO CONSIDER WHEN ORDERING


1. **KEEP EDGES SHARP.** A sharp leading edge and back – trailing edge is important. They prevent metal from being wedged between the TIP and the SLEEVE.

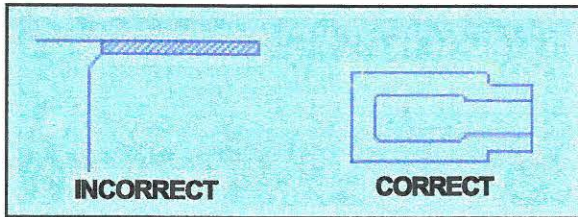


2. **MINIMIZE CRACKING TIP.** Make sure your blueprint doesn't have a sharp point on the bottom of the water jacket. - Sharp points will start cracks.

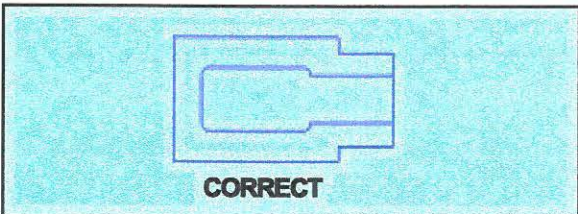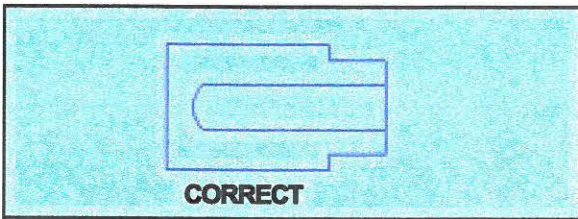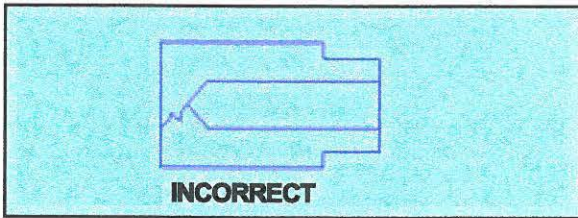

3. **SEAL TIPS AGAINST LEAKS.** Make sure the TIP is sealed at the ROD by a high temperature O-Ring. Water leaks can run into the SLEEVE to cause an explosion and possible injury. So prevent water leaks by buying a well-sealed TIP.

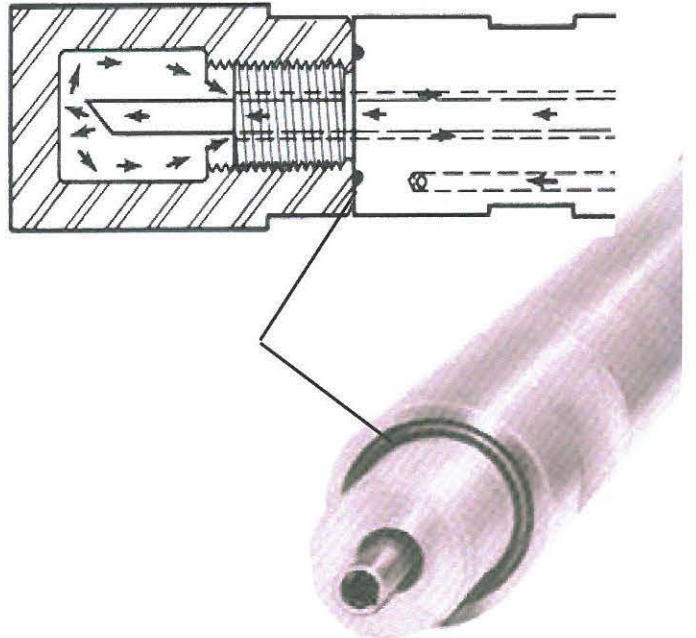

4. **Make sure the cooling tube is cut on a 45° angle.** Water will flow even if the tube bottoms out.

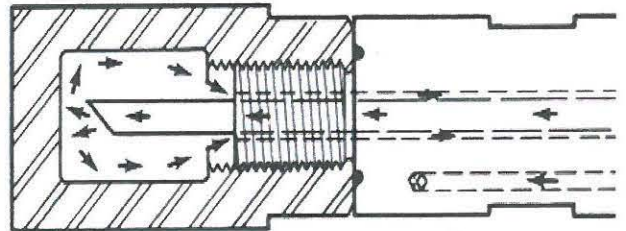

Specifications are subject to change without notice.

Advance


Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
Printed in U.S.A.
APC-100-2002

Advance[®]

consumables


PLUNGER RODS

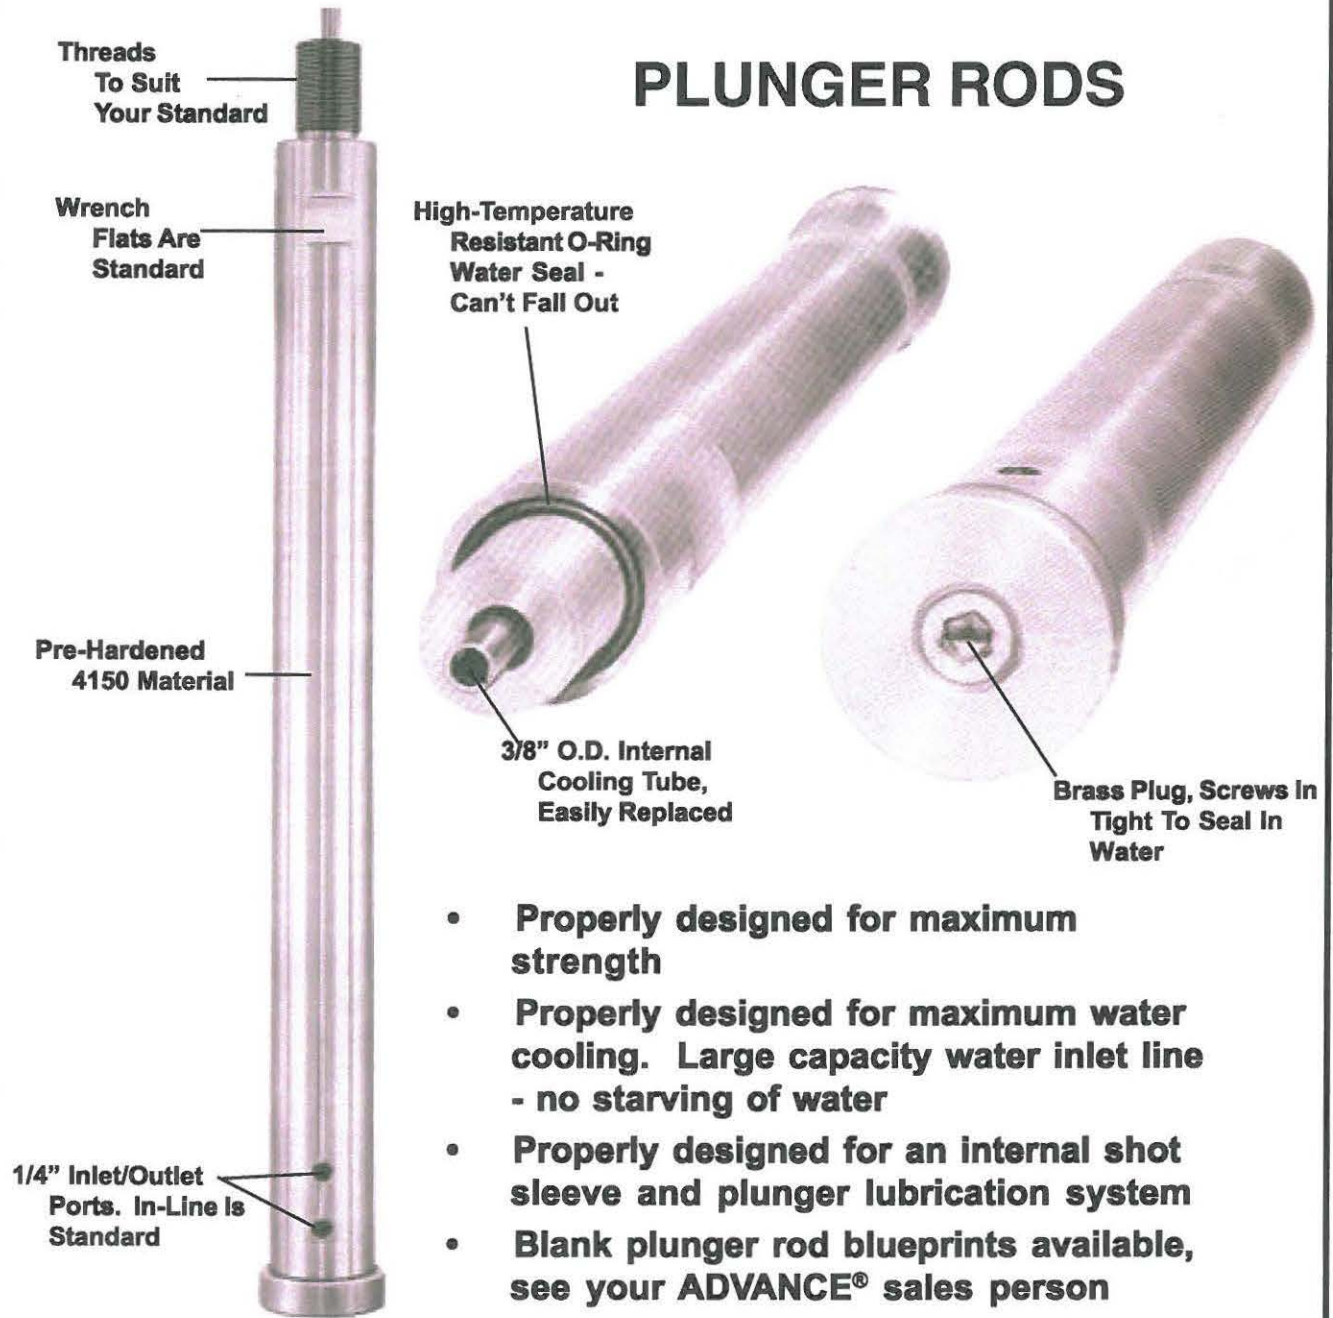

- Properly designed for maximum strength
- Properly designed for maximum water cooling. Large capacity water inlet line - no starving of water
- Properly designed for an internal shot sleeve and plunger lubrication system
- Blank plunger rod blueprints available, see your ADVANCE[®] sales person


Your "Window to the World"[®] of Die Casting Automation and Consumable Products

PROPER COOLING IS A MUST

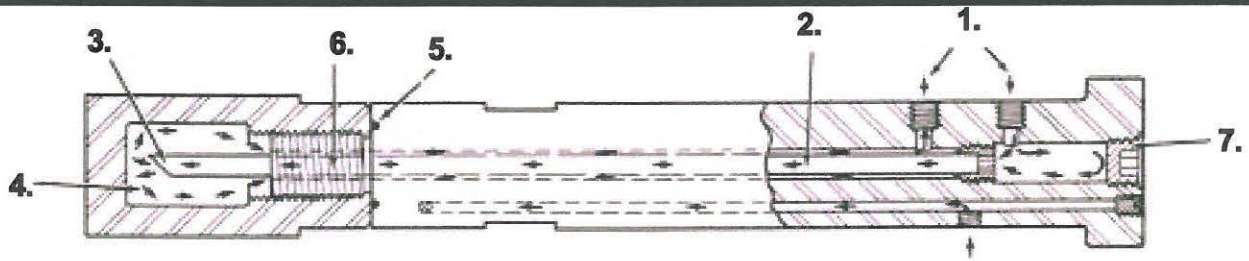


1. Coolant enters and exits at 1/4" Ports (in-line is standard)
2. ..then it flows the length of the rod through a 3/8" Tube – large enough so you'll always get sufficient coolant flow. Any smaller could starve Plunger Tip.
3. End of Tube is extra long and slanted so coolant always enters tip.
4. Advance Plunger Tips (sold separately) have a custom coolant chamber. Even wall thickness means even cooling all around, and consistent wall strength.
5. A high-temperature resistant o-ring seal fits snugly between rod and tip. No coolant can leak into sleeve or die – prevents thermo-shock and possible explosions.
6. Snug fit between tip and rod is vital. The threads on ADVANCE® rods and tips are ring-gauged for precise fit. Standard 1-1/4"-12 thread size means better availability and lower price for ADVANCE® rods and tips.
7. Brass Plug screws in tight to seal in coolant.

SLEEVE AND TIP LUBRICATION IS A MUST

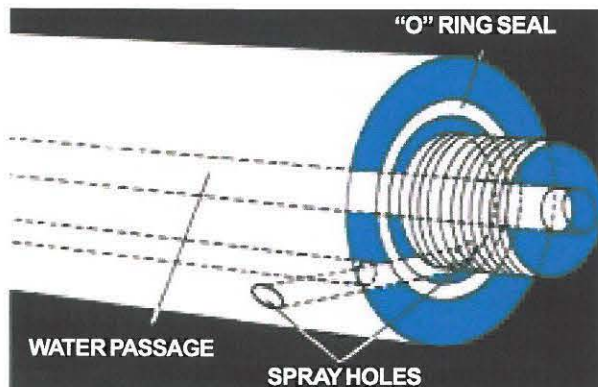

8. Have your rod gun-drilled. The ADVANCE® system puts a precise amount of lube where it belongs – behind the tip and below the center-line. So you can consistently get an even coating of lube, the length of the sleeve and the tip. And the straight-through, gun drilled hole is easier to clean.

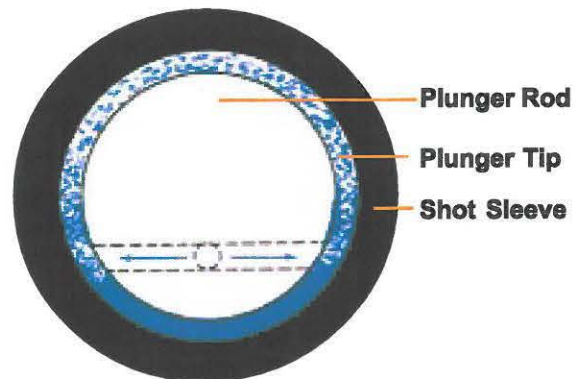

9. Contact between tip and sleeve is greater at their bottom. That's why we spray the lubricant there. So your plunger tip will always hydroplane over a thin layer of lube. And you get adequate lube coverage over sleeve and tip surfaces as well. Your tips and sleeves will last longer, work better.



Specifications are subject to change without notice.

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
Printed in U.S.A.
APC-100-2002

Advance

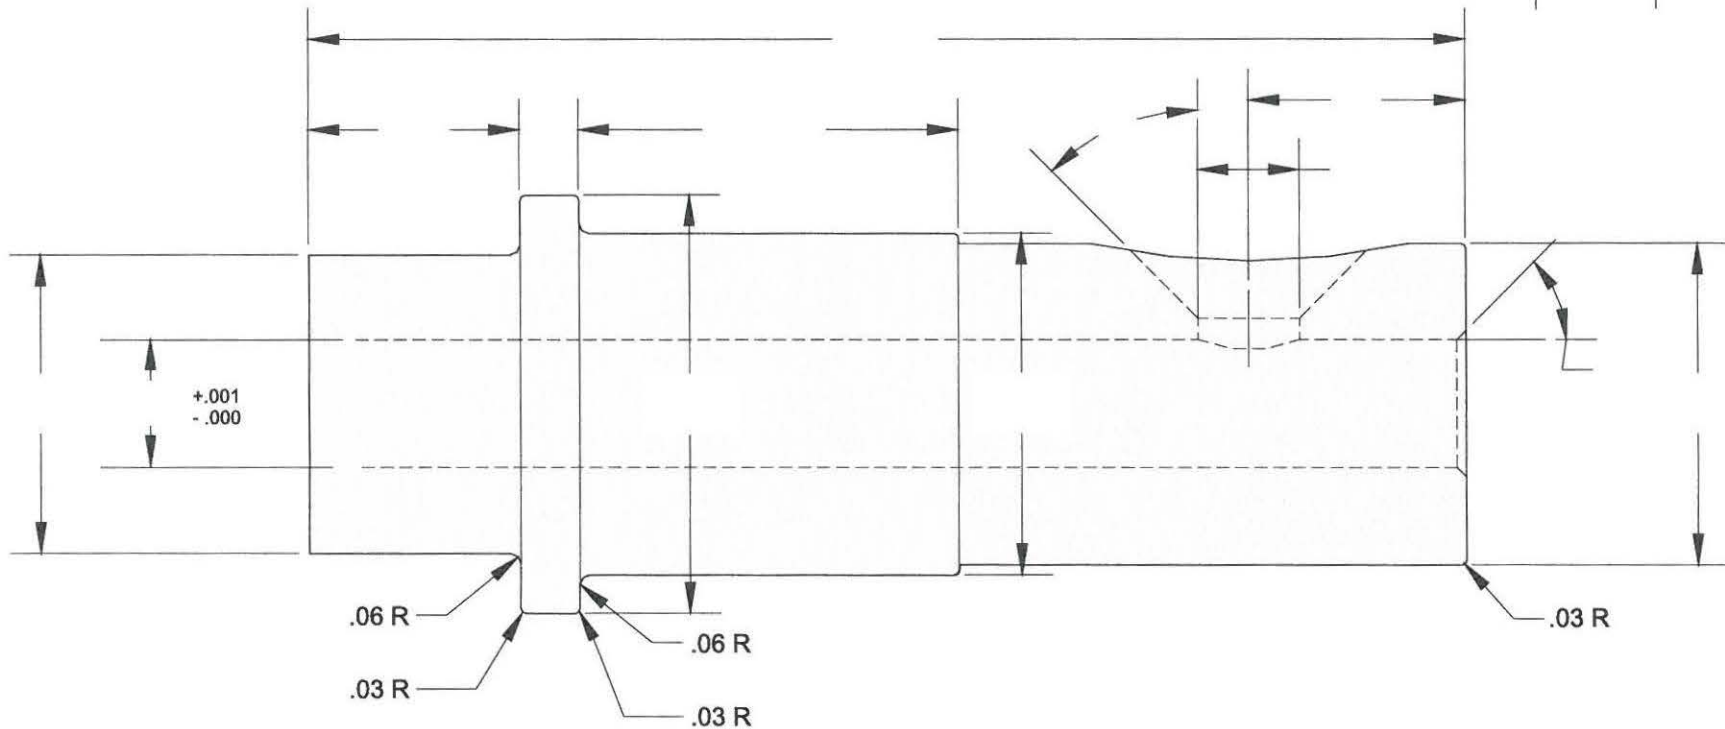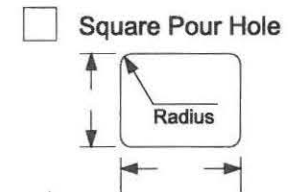

Standard Shot Sleeve

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
 Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

Customer:

Material: H3 Heat Treated Only H13 Heat Treated and Nitrided

Part / Drawing Number:

Quantity:

Work Order Number:

Date:

Your "Window to the World" of Die Casting Automation and Consumable Products


Consumables Misc.

- Hand Spray Guns
- Die Clamps, T-Bolts,
and Nuts
- Slap Sticks
- Thermocouples
- Die Cooling Fountain
Water Junctions
- Ladle Cups

Advance[®]

consumables

DUAL ADJUSTMENT HAND SPRAY GUN


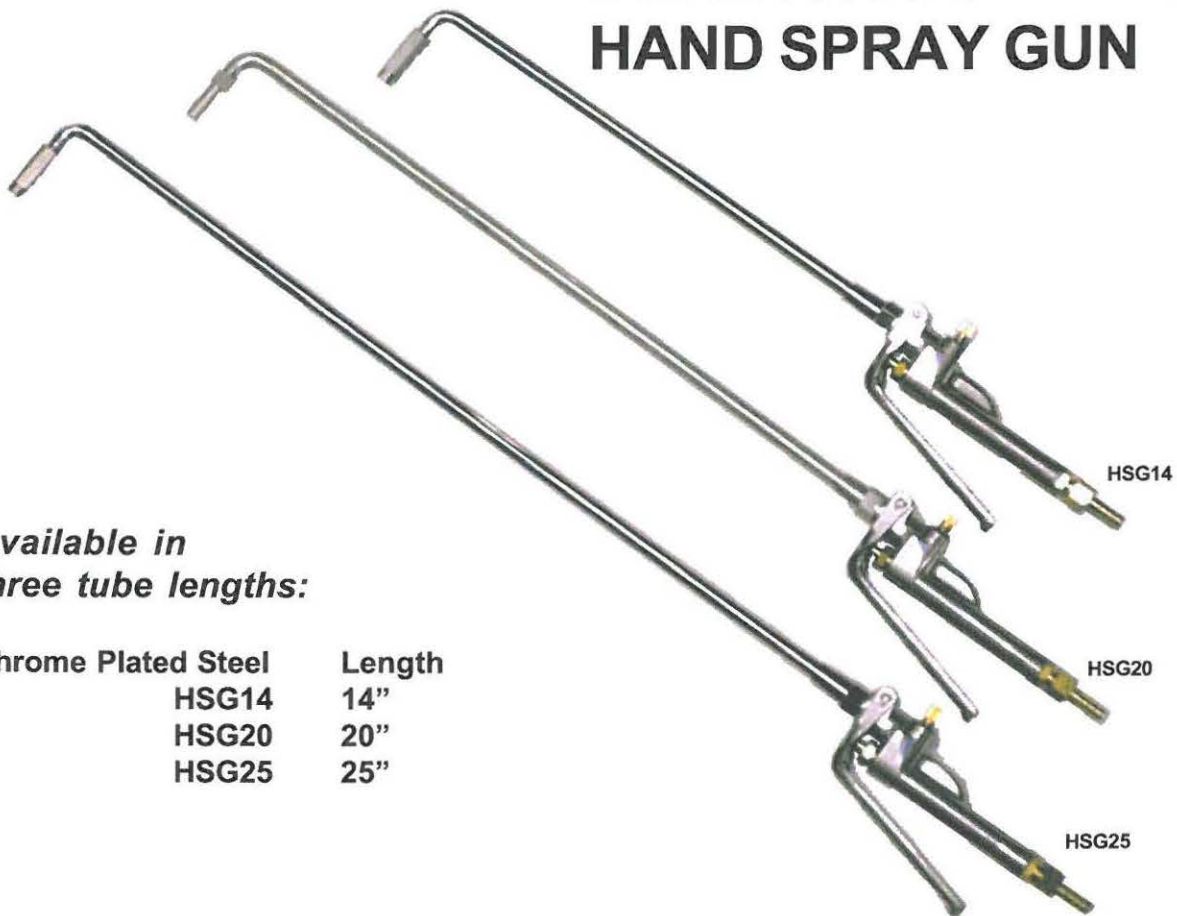


*Available in
three tube lengths:*


Chrome Plated Steel	Length
HSG14	14"
HSG20	20"
HSG25	25"

- The Hand Spray Gun offers a balanced feel and easy grip for maximum operator comfort and helps reduce operator disability claims.
- Operates with either siphon or pressure systems.
- A large 2-stage trigger for air/lube mix, from a very fine mist, to a heavy concentrated spray.
- Easy-to-adjust air and lube volume screws.

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

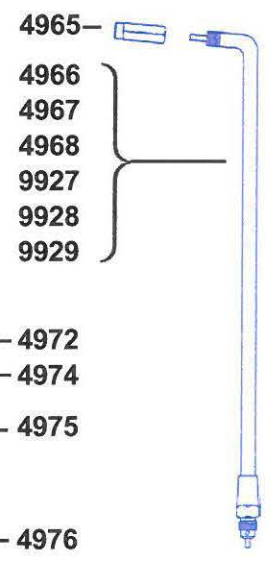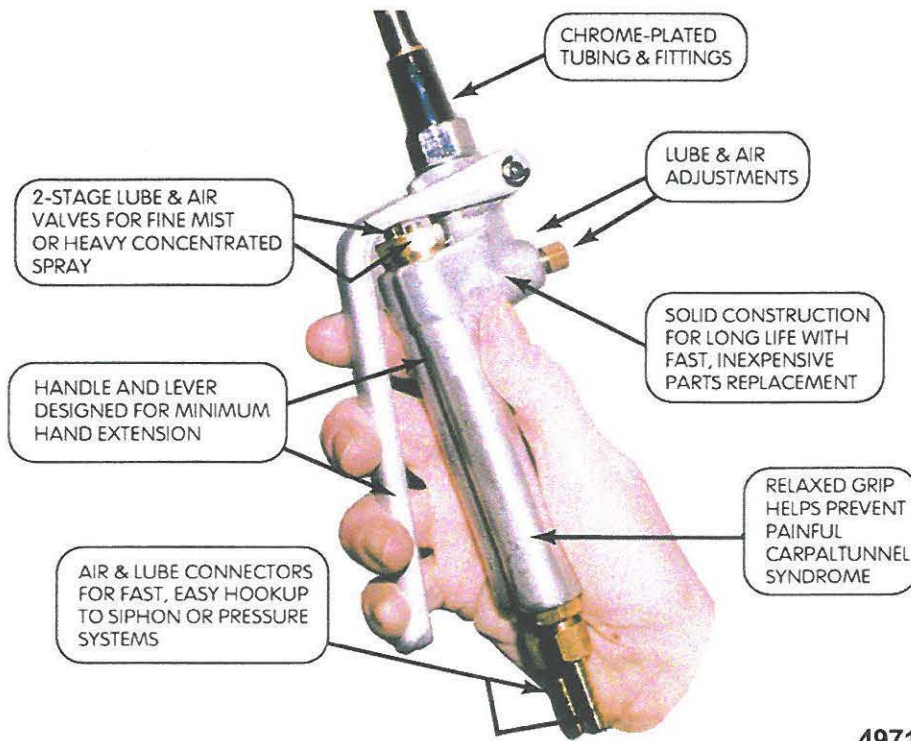

Spray Gun Part #	Description
HSG-14	14" Spray Tube (Chrome Plated)
HSG-20	20" Spray Tube (Chrome Plated)
HSG-25	25-1/2" Spray Tube (Chrome Plated)
Part #	Description
HSG-HANDLE	Spray gun handle, complete
4965	Nozzle
4966	14" Chrome Tubing Model HSG-14
4967	20" Chrome Tubing Model HSG-20
4968	25-1/2" Chrome Tubing Model HSG-25
4971	Lever
4972	Cotter Pin
4974	Lube Cap
4975	Lube Valve
4976	Air Cap Without Ring
4977	Lube Valve Spring
4978	Lube Regulating Screw
4979	Air Regulating Screw
4980	Air Valve
4981	Air Valve Spring
4982	Lube Hose Connector (1/8" barb I.D.)
4983	Air Hose Connector (1/4" barb I.D.)
4989	Air Nipple
4990	Lube Nipple

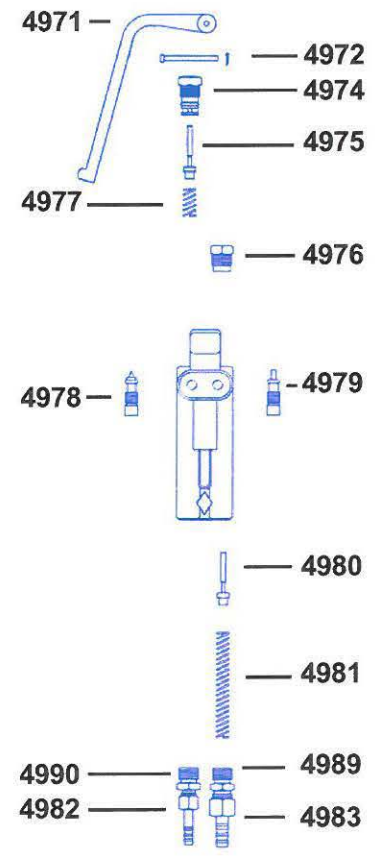

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
 Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
 Printed in U.S.A.
 APC-100-2002

Advance[®]

consumables

CLOSED SLOT DIE CLAMPS





- **Closed Slot Design -**
The clamp can't slip off bolt and forces the bolt to be in only one place closest to the Die for maximum holding power.
- **Straight-Line Parallel Clamping -**
Puts pressure where it is needed.
- **Accessory T-Bolts, Washers, Flanged Nuts -**
Are forged and machined from superior grade steel.
- **Easy Identification -**
Length and height rise are cast into back of clamp for easy reordering.

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

**INSTRUCTIONS
FOR PROPER USE OF
ADVANCE DIE CLAMPS**

1. Select clamp for proper die clamping slot rise.
2. Locate die clamp so that the maximum clamping surface is in the die clamping slot.
3. Locate the T-Bolt as close to the die as possible.
4. Torque the bolts tight. DO NOT over-tighten!

ADVANCE 6-inch, heat treated die clamps are rated at or above 135,000 psi tensile strength. Advance 4-inch die clamps are rated at or above 85,000 psi tensile strength.

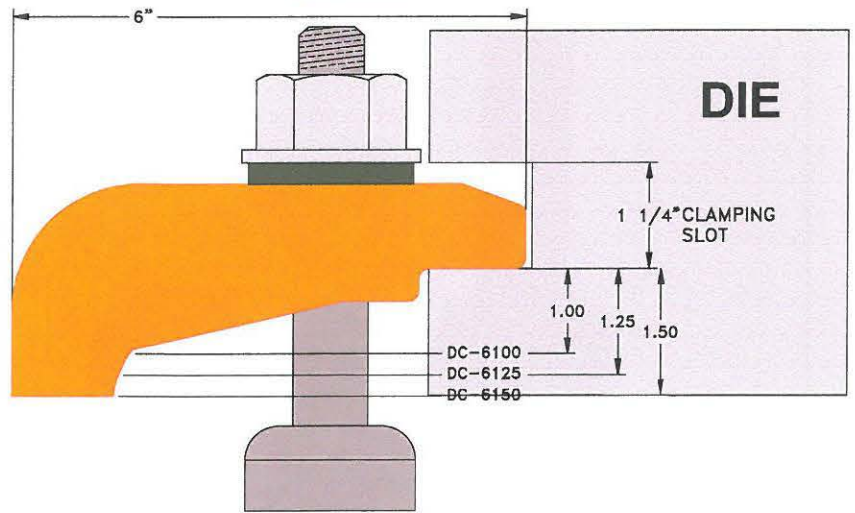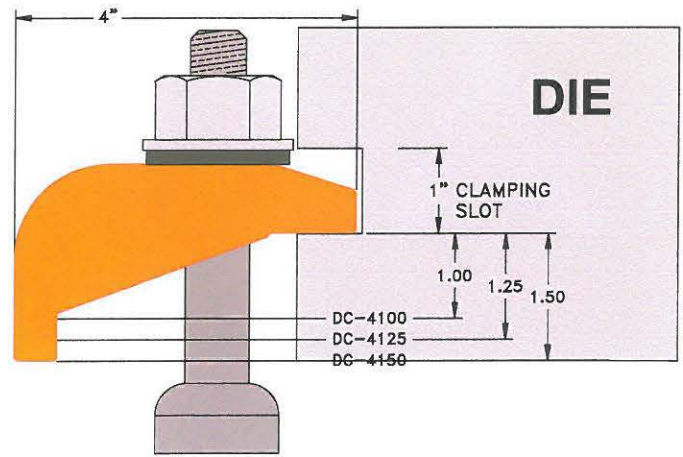


Select clamp desired (see above), then corresponding bolt and nut as indicated below:

DIE CLAMP

DC-4100
DC-4125
DC-4150

T-BOLT

4 1/2" x 3/4"
Order Part
1542

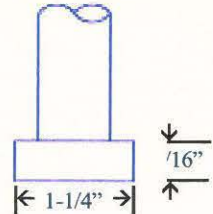

FLANGED NUT


3/4" - 10
Order Part
1544

**HARDENED
WASHER**

1/4"
Order Part
1546

DC-6100
DC-6125
DC-6150

5" x 7/8"
Order Part
1543

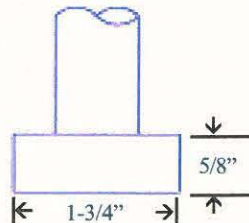

7/8" - 9
Order Part
1545

1/4"
Order Part
1547

Specifications are subject to change without notice.




Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
Printed in U.S.A.
APC-100-2002

Advance[®]

consumables

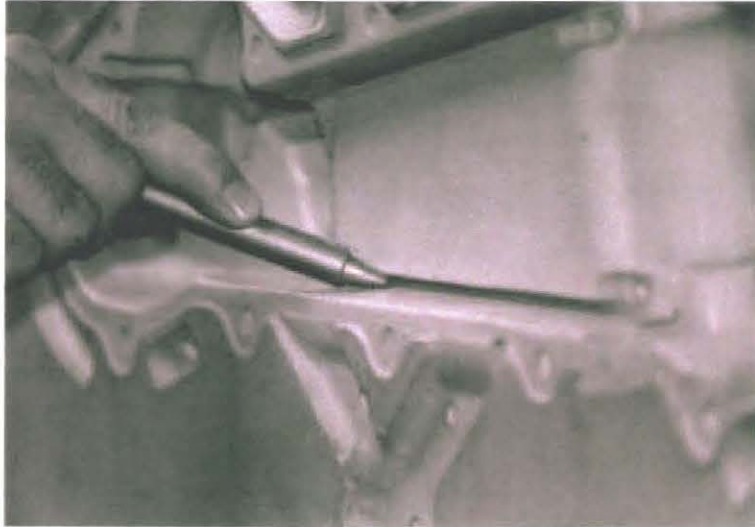

Slap Stick Lubricant

Slap Stick, a high temperature lubricant, can be applied directly to solder buildup and galling in permanent and die casting molds. It is designed to melt against the exact spot where lubrication is needed, for example:

- Solder buildup in gate areas and cavities-on cores and slides.
- Hot, galled metal-to-metal moving mold parts such as ejector pins or slides.

When applied to any hot area within the casting cavity, Slap Stick quickly melts, then dries to a lubricating film that will not stain, build up or otherwise harm the next casting.

When applied to hot ejector pins or other moveable parts, Slap Stick liquifies and penetrates close tolerances as a lubricating film.

Any Dripping or running into cavity areas will cause no casting problem.

Shaped like a large felt tip pen, Slap Stick is easily held while wearing heavy mill gloves. Slap Sticks are economical; they lock together end-to-end, allowing used end pieces to be firmly attached to a new Slap Stick.

Another great feature is that Slap Stick is clean enough to be carried in a shirt pocket when cool.

Slap Stick is conveniently packaged in boxes of 180 pieces. (Part #4670)

Samples are available at no charge upon request.

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products
Corporation
Printed in U.S.A.
APC-100-2002

Advance[®]

consumables

Thermocouples

APC Sentry II Thermocouples with Thermo-Guards have:

One coat of refractory saturated white glass and two coats of refractory saturated, tight-weave fiberglass over 11/16" tubing with silicon carbide tips.


Thermo-Guards protect the Thermocouples.

Advantages Include:

Longer Life - The refractory surface of the *Thermo-Guard* resists erosion by molten aluminum up to temperatures of 1400°F. No additional coatings are required to prolong useful life.

Savings On Man-Hours and Materials - Longer tube life means longer thermocouple life and less man-hours for maintenance.

Standard features include 3/4" NPT, 20 gauge Type K wire, and three foot leads.

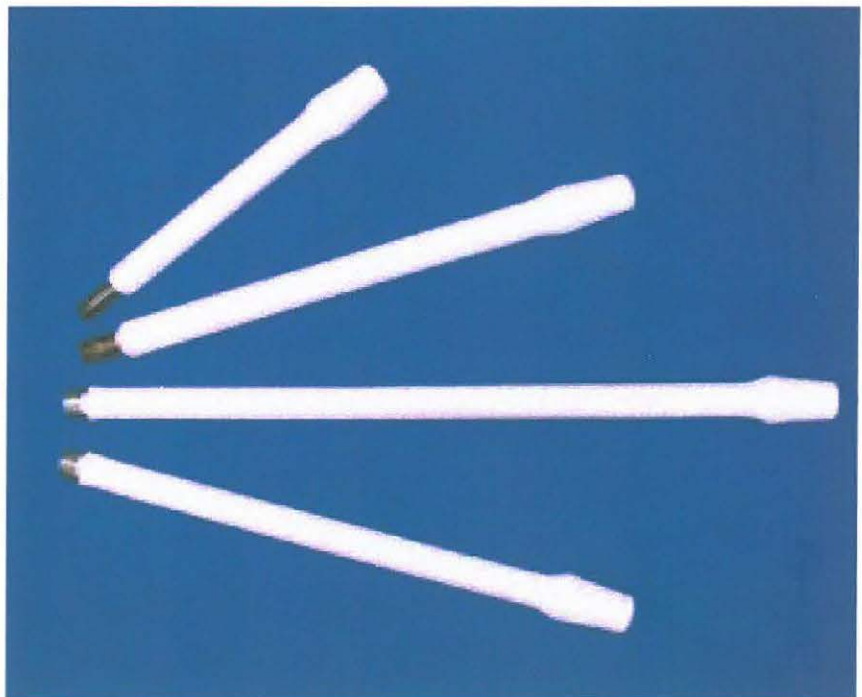

Length	12"	18"	24"	30"	36"	42"	48"
APC Sentry II w/Thermocouple	#8924-12	#8924-18	#8924-24	#8924-30	#8924-36	#8924-42	#8924-48

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
 Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
 Printed in U.S.A.
 APC-100-2002


Advance[®]

consumables


DIE COOLING FOUNTAIN WATER JUNCTIONS



1/8" INLET/
OUTLET
WITH 1/4"
MAIN PIPE

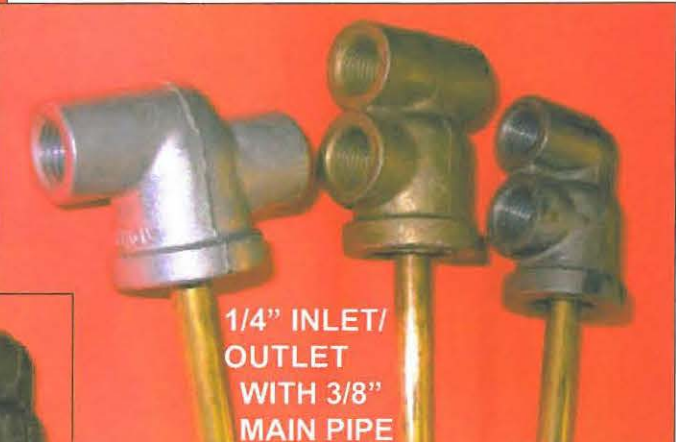

1/4" INLET/
OUTLET
WITH 3/8"
MAIN PIPE




1/4" INLET/
OUTLET
WITH 1/2"
MAIN PIPE

Parts 1702 thru 1706 are supplied with a
14" length of brass tubing. Parts 1707 thru
1709 are supplied with galvanized pipe.

- Standard, medium and high water flow die cooling water junctions
- Off the shelf delivery
- Zinc chromated die cast, complete with 14" brass or galvanized pipe
- The lowest cost in the industry

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

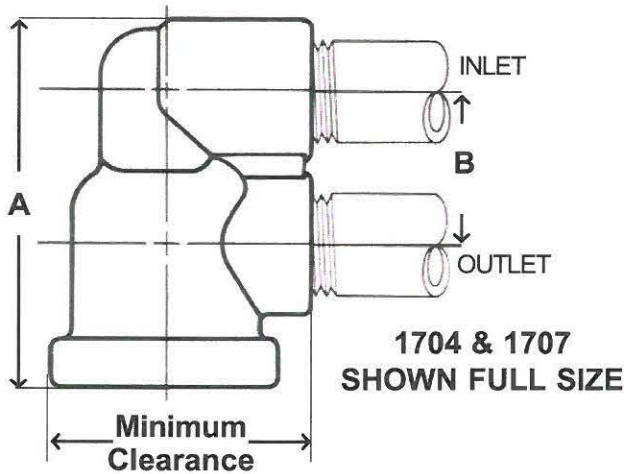

Junction Style





In & out, one side

Part #	Minimum Clearance	A	B	In Pipe Nipple	Out Pipe 14" Tubing
1704	1 3/4" dia.	2"	13/16"	1/2" dia.	1/8" dia.
1707	1 3/4" dia.	2"	13/16"	3/8" dia.	5/16" dia.

Junction Style

In & out, opposing

Part #	Minimum Clearance	A	B	In Pipe Nipple	Out Pipe 14" Tubing
1702	1 15/16" dia.	1 15/16"	5/16"	1/4" dia.	1/4" dia.
1705	2 3/16" dia.	1 1/2"	5/16"	1/2" dia.	1/8" dia.
1708	2 3/16" dia.	1 1/2"	5/16"	3/8" dia.	5/16" dia.

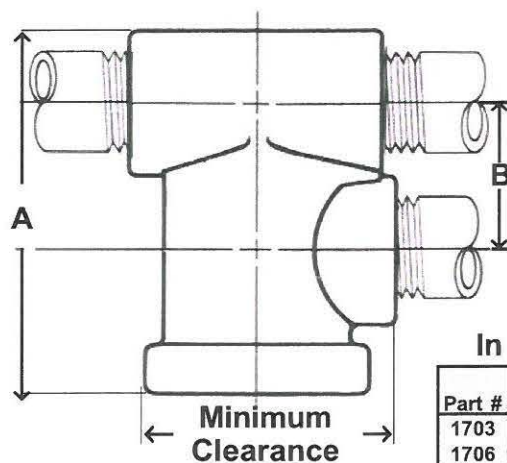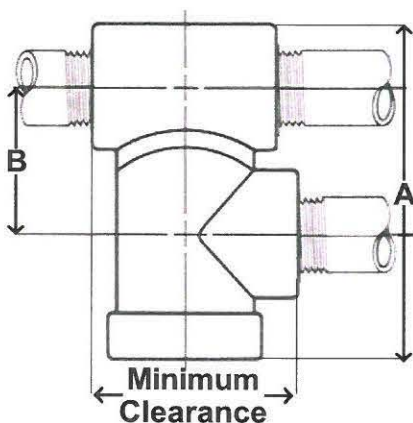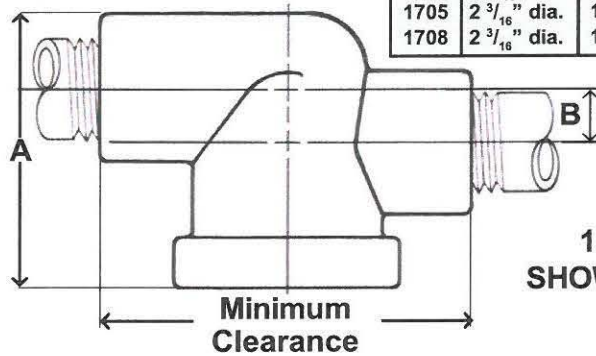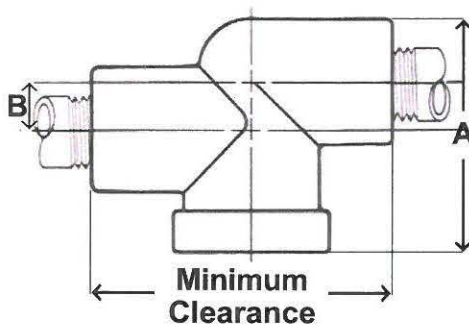

Junction Style

In & out, one side or opposing

Part #	Minimum Clearance	A	B	In Pipe Nipple	Out Pipe 14" Tubing
1703	1 1/2" dia.	1 7/8"	13/16"	1/4" dia.	1/4" dia.
1706	1 3/4" dia.	2"	13/16"	1/2" dia.	1/8" dia.
1709	1 3/4" dia.	2"	13/16"	3/8" dia.	5/16" dia.

Specifications are subject to change without notice.

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
Printed in U.S.A.
APC-100-2006

Advance[®]

consumables


QUICK CHANGE LADLE CUPS




- "Direct Mount" - Pin-mounting design means no tools or adapters needed for changing ADVANCE[®] Quick-Change Ladler Cups
- ADVANCE[®] Quick-Change Ladle Cups that are made in America means high-quality materials made to exact specifications
- Operator and helper-side ladle cups available for immediate delivery
- No adapters needed for ADVANCE servo ladlers. Adapters available for other ladler manufacturers
- Special heat-treated cast iron means extra long life

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

Specifications

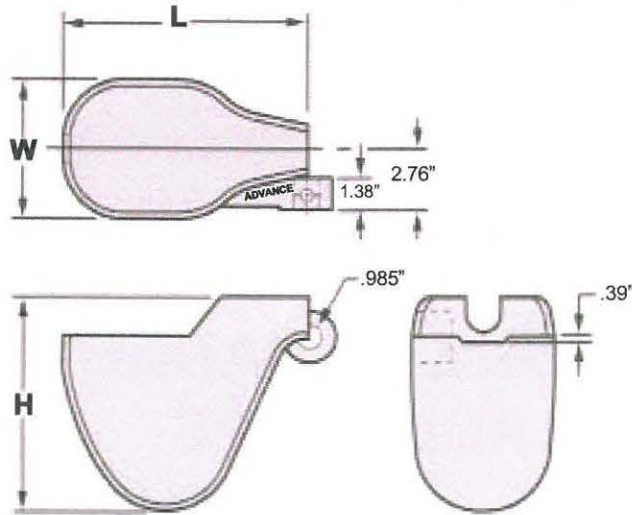

Sizes to fit any need
(operator-side shown)

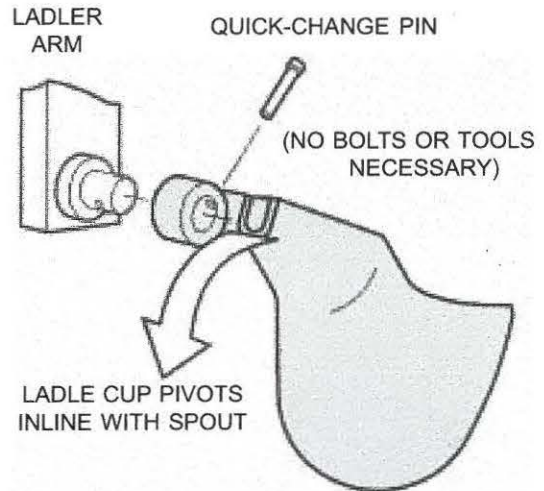

Designed for easy removal and installation
(mechanism and ladle cup shown from the operator-side)

LADLE CUP # (Operator)	LADLE CUP # (Helper)	Maximum Capacity		Minimum Furnace Size		Dimensions		
		in Kg	In Lbs.	(Round) 45° Angle of Entry	(Square) 45° Angle of Entry	L	W	H
0.5A	0.5B	0.5	1.1	17.25"	17.13 x 11.75	6.69	4.33	5.91
1.0A	1.0B	1.0	2.2	18.31"	18 x 12.13	6.87	4.69	5.75
1.5A	1.5B	1.5	3.3	18.75"	18.5 x 12.34	7.28	4.72	6.30
2.0A	2.0B	2.0	4.4	19.6"	19.25 x 13.25	7.87	5.50	6.25
2.5A	2.5B	2.5	5.5	19.75"	19.32 x 13.18	8.27	5.51	6.50
3.0A	3.0B	3.0	6.6	20"	19.69 x 14	8.66	5.51	7.48
3.5A	3.5B	3.5	7.7	20.45"	19.69 x 14.25	9.10	6.10	8.00
4.0A	4.0B	4.0	8.8	21.45"	20.84 x 16	10.24	6.30	9.45
6.0A	6.0B	6.0	13.2	22.5"	21.68 x 16.9	11.42	6.30	10.24
8.0A	8.0B	8.0	17.6	23.25"	22.28 x 18.13	12.20	7.87	11.42

- Above ladle cups are "Direct Mount" for use in all ADVANCE and Toshiba ladlers. No adapter needed.
- Ladle Cups adapters are available for other ladler manufacturers:
SPK-1210 Rimrock adapter kit
SPK-1218 Snair adapter kit

* Please specify operator-side or helper-side mounting when ordering. If you are using an operator-side ladler on the helper-side of the die casting machine, order "operator-side" ladle cups.

Consult ADVANCE Products Corporation for cup sizes and mounting information sizes to 100 lb.

Specifications are subject to change without notice.

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com


©Advance Products Corporation
Printed in U.S.A.
APC-100-2002

Automation Spraying

- SRL-250 Linear Spray Systems
- Reciprocating Spray Systems
- RSS-2500 Robotic Spray System
- Spraying Technology
- Spray Heads

Advance[®] automation

SRL-250 LINEAR SPRAY UNIT

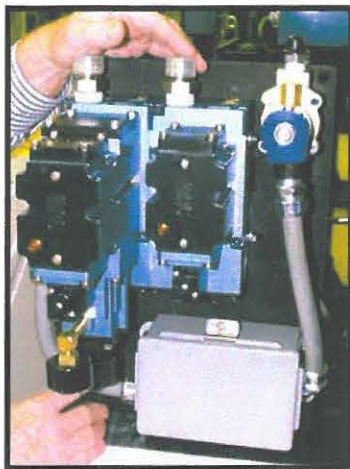

SRL-250 Valve Package



- DIE CASTER PROVEN FOR OVER 4 YEARS!
- ACCURATE - REPEATABLE TO .050"!
- SPEEDS TO 72" PER SECOND!
- RELIABLE - NOTHING TO GREASE OR LUBRICATE!
- FULL DIGITAL SERVO!
- BLOW-OFF IS STANDARD!

The SRL-250 is designed for 150 Ton to 600 Ton die casting machines. Completely digital servo controlled, travel speeds up to 72" per second. The user friendly MMI terminal stores 20 alphanumeric programs. *The SRL-250 complete with no hidden extras. The unit comes with blow off, 4 head spray manifold, digital control, premounted valve package, pedestal mount and 15' prewired cable set. The SRL-250 is built with a 110 volt electric servo system, *no transformers and no heat exchangers are needed!*

CALL 269-849-1000 NOW FOR MORE INFORMATION!

Your "Window to the World"[®] of Die Casting
Automation and Consumable Products

Technical Specifications

Rated Maximum Speed	72 inches per Second
Programmable Speed	0 to 72 inches per Second
Positioning Accuracy	.020"
Number of Stop Positions	20
Number of Direction Changes	20
Blow Off	Standard
Number of Alphanumeric Programs	20
Dwell Times	.1 Second to 99.9 Seconds

Installation Requirements

Voltage	110 V / 60 Hz Single Phase
Air Pressure	Filtered to 40-100 psi
Lube Pressure	Regulated 40-100 psi

Product Features



- Trombone air system - no hoses necessary for air or blow-off.
- Easy Programming MMI
- Complete mounting base system included.
- 5 Meter electrical cables included.
- Remote air/lube valve package.

Program Features

- Wait Function or Parts Present
- Independent spray and blow-off

NOTE: Unit is shown in the full up and full back position and can be moved up or down, and in or out, to suit specific applications.

30" STROKE: A=57 3/4"
 36" STROKE: A=63 3/16"
 48" STROKE: A=75 3/4"

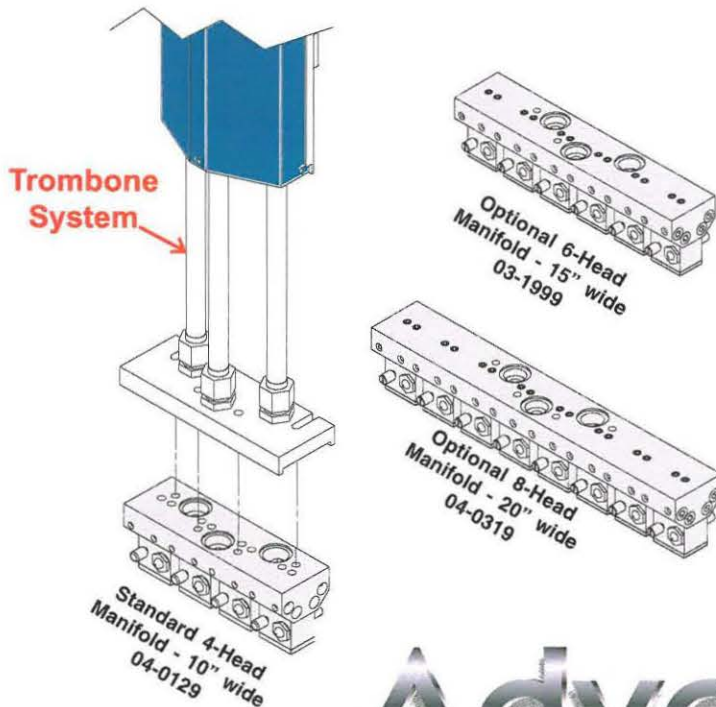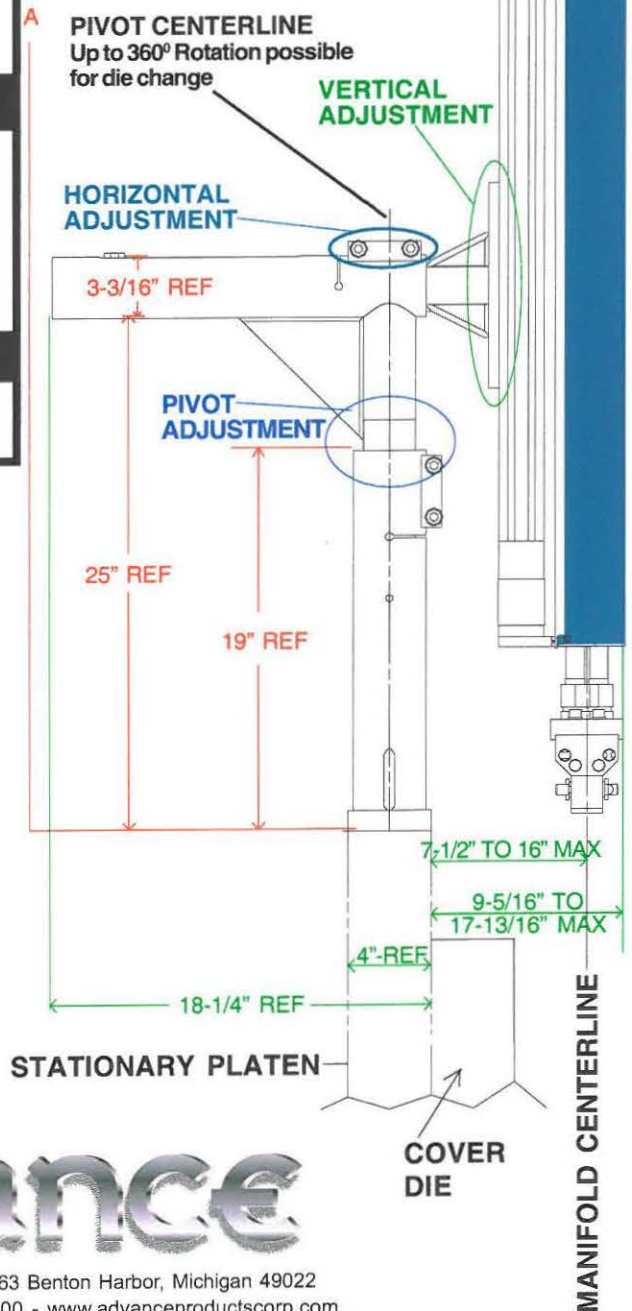

©Advance Products Corporation
 Printed in U.S.A.
 APC-100-2008

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
 Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

Consumables
ShotEnd

Consumables
Misc.

Automation
Spraying

Automation
Ladlers

Automation
Misc.

Advance[®] automation

Digital Servo Reciprocating Sprayers



Your "Window to the World"[®] of Die Casting Automation and Consumable Products

Introduction

Your "Window To The World[®]" Of Die Cast Automation


Advance Automation is your "Window to the World[®]" for robotic reciprocating die spray systems.

Advance has been the leader in spraying technology with many firsts in the industry. We developed the first reciprocating spray system in 1966; introduced the first hydraulically operated reciprocator in 1971; the first servo-controlled reciprocator in 1981; and the first digital reciprocators in 1994.

We are never satisfied with yesterday's accomplishments. We are innovators.

Utilizing SDRC Ideas 3-D solid modeling design software and cutting-edge manufacturing processes have set us apart.

We offer a complete line of reciprocating die spray systems to fit 300-1800 ton die casting machines.

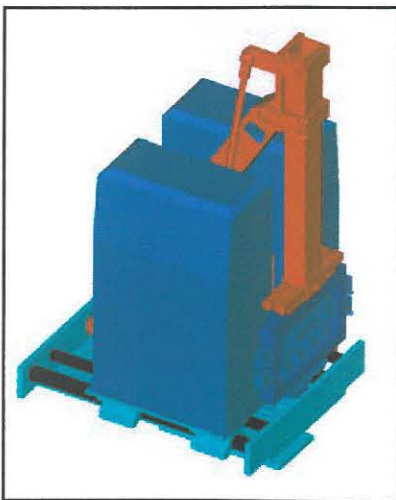

In-House Manufacturing Capability

Advance automation products are made in-house at our Benton Harbor, MI, facility. By taking charge of every step of the manufacturing process, we can assure process consistency.

Process consistency is the first step in achieving total quality. A reliable, consistent process begins with reliable equipment.

The new millenium brought a three phase plant renovation and modernization project to our facility. By improving our process and adding new equipment, we are better able to serve our customers with a more efficient manufacturing process.

Parts are made by skilled craftsmen on state-of-the-art CNC and other computer controlled milling equipment.

Engineering is another critical part in the manufacturing process. Advance engineers design equipment from measurements taken of your die casting cell to ensure that our equipment performs at the optimum in your unique casting environment.

Advance servo sprayers - made in America - are known for their durability, reliability, accuracy, ease of operation and low maintenance costs. This means a consistent, quality part at a world competitive price.

Sprayer Features

Motor And Feedback



The Advance reciprocating sprayer is controlled by a servo-motor drive system attached directly to the gear reducer for maximum torque and efficiency. Since there are no air cylinders, hydraulics, cams or motor brushes, reliability is greatly improved.

Continuous positioning accuracy is achieved by a closed-loop resolver feedback system. Positioning accuracy of .020 inches provides constant repeatability.



Air/Lubrication Valves

No external valve packages are needed. All air and spray lubrication valving is mounted directly on the sprayer. A filter on the lube input line prevents foreign material from entering the system.

One lube zone comes standard with additional lube zones and Super Air Blast optional. The Air Blast is standard. The sprayers can spray lube and blow off either simultaneously or sequentially.

Additionally, if Lube 2 and Air Blast options are selected, any combination of Lube 1, Lube 2, or Air blast can be selected and programmed to function independently at any time.




Main Controller & Remote

The main controller on the Advance sprayer is a color touch screen controlled HMI. It can store 500 parts programs alpha-numerically in FLASH memory, automatically recalling specific spray patterns for each part.

The easy-to-use controller has touch screen and backlit display to guide you step-by-step through programming options. No special computer training is needed.

The Hand Held Remote allows the operator to manually program the sprayer movement from a visually convenient location near the open die. Spray and Air Blast zones are monitored during programming for maximum spray efficiency.

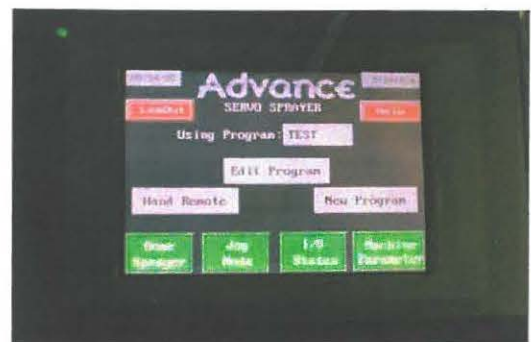

Features and Specifications

The Advance line of straight-line digital reciprocating sprayers includes the popular SR-1155 and its little brother the SR-1145, and its big brother, the SR-1165. They fit 300 to 1800 ton DCMs. See the sizing chart below.

These feature-laden work-horses have been designed to stand up to rigorous work schedules with minimum maintenance.

Manifold capacity is 75 pounds on the SR-1145 and SR-1155 and 125 pounds on the SR-1165.

DESIGN AND CONSTRUCTION

The Advance sprayer has two axis. One is fully programmable to position the spray manifold into the die area. The second axis has a 8-inch horizontal travel and can be operated from the control panel or a hand-held remote to adjust the reciprocator for different cover die thicknesses.

The horizontal slide base with a pedestal mount is useful for many applications. For some applications, the pedestal mount can be eliminated. Various risers are also available to avoid obstructions like water lines

A gear reducer is mounted on the top of the slide base. The main drive arm carries the vertical snout with manifold attached to the end into the die. The snout has a 12-inch adjustment to allow different spray manifolds to match the die being sprayed.

SPRAYER DIAGNOSTICS

Fault indicators are located as LEDs on the main controller and include:

Motor Faults

Input/Output Fault
Current Limit
Over Temperature
Resolver Fault and
Over Current

PC Faults

Die Open Fault
Emergency Retract and
Communication Error

SPRAYER SIZING MATRIX								
300T	400T	600T	800T	1000T	1200T	1400T	1600T	1800T
SR-1145								
		SR-1155						
			SR-1165					

From Concept to Completion



SDRC Ideas 3-D solid modeling program is used to design the sprayer.






Building the sprayer according to engineering designs.




Completed unit.

Features and Specifications

Straight Drop Sprayers

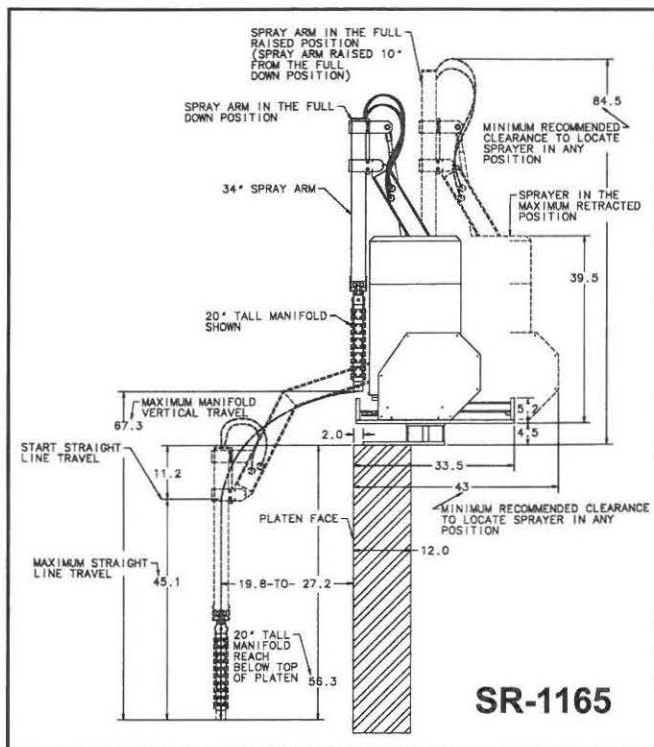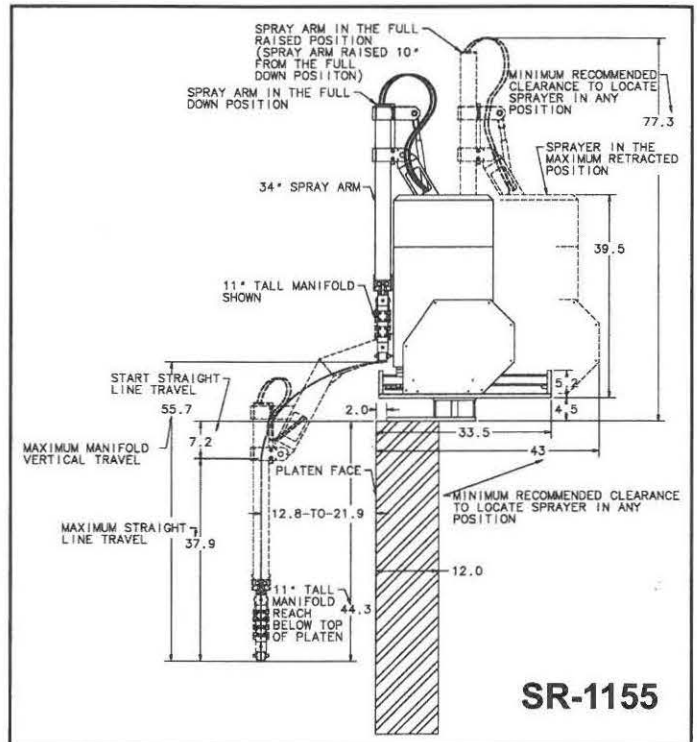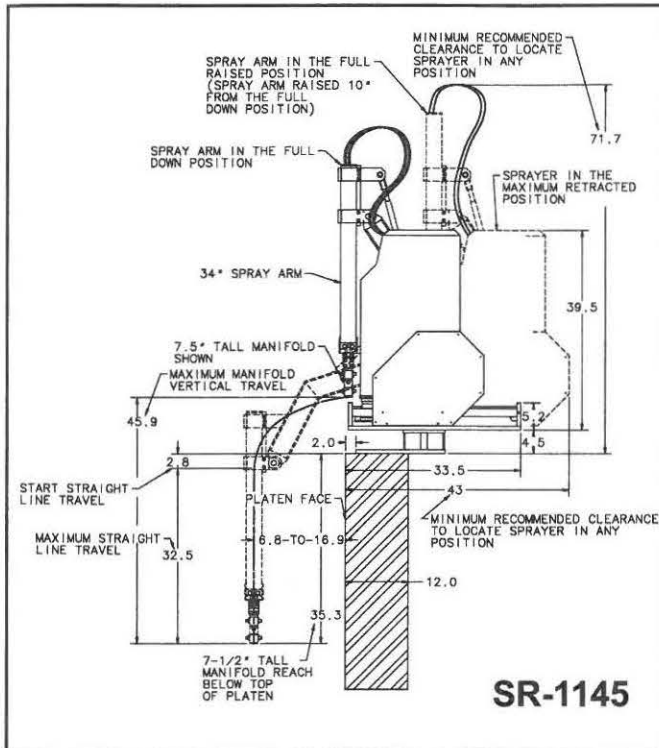

Arc Profile Sprayer

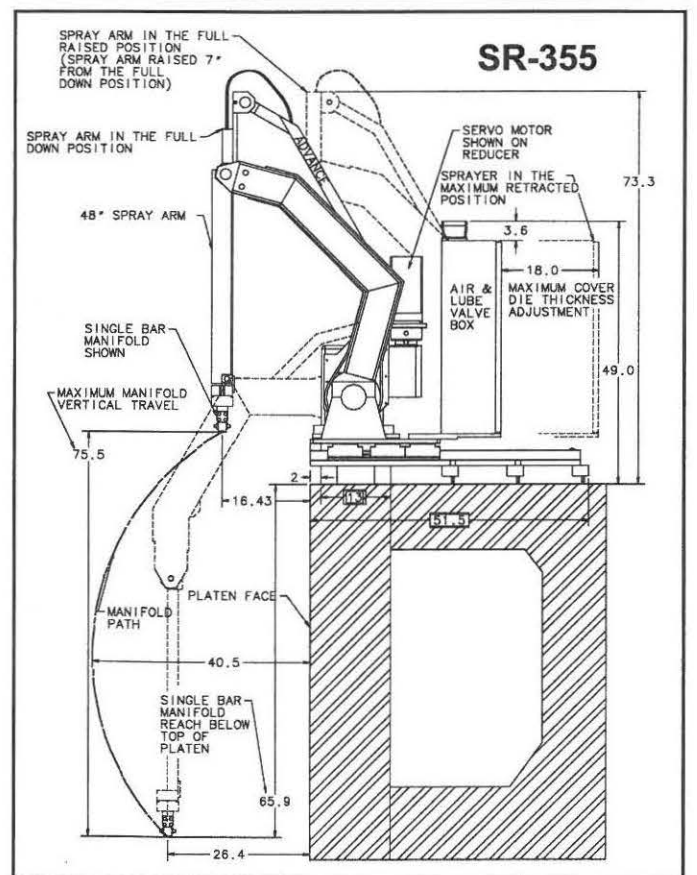

Manifolds

Advance Has Many Manifold Options


Advance makes a variety of bar and picture frame manifolds, as well as custom manifolds for special die applications.

Bar manifolds are typically 13 to 37 inches long and offer up to 9 spray heads.


Picture frame manifolds are our most popular manifold and come in a variety of sizes in dual and single zone.

Spray heads can be located in an unlimited number of patterns for even the most complex parts. They can also be fitted with standoffs and on and off plane-T's to give even more location options.


Advance also has conversion adapters so you can use Advance Spraying Technology on your present Reciprocating Spray System.

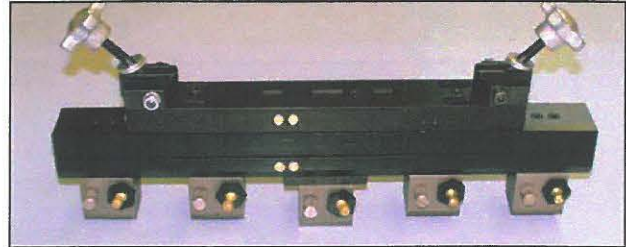


Bar Manifold

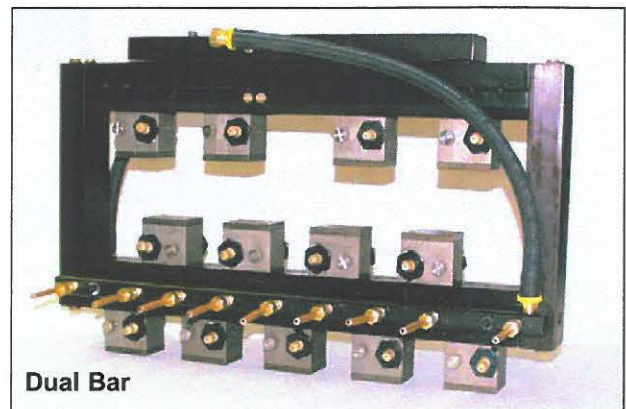

Dual Bar

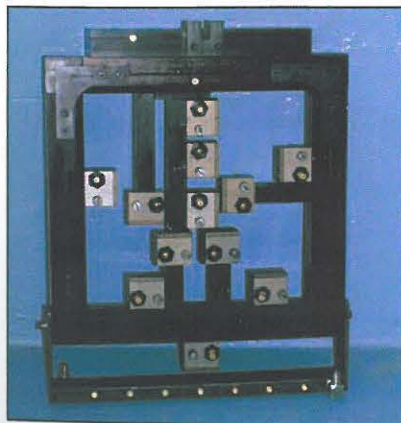

Picture Frame®
Manifolds

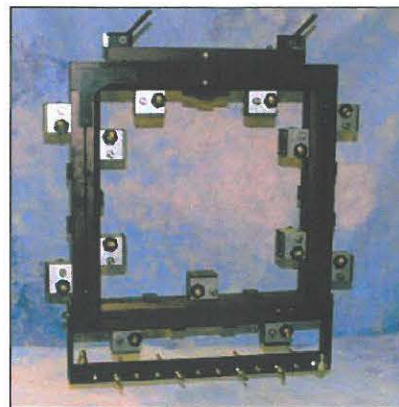

Manifold Sizing Chart

Advance has changed its standard sizes for picture frame® manifolds so that stock extrusions can be used for bar and picture frames® both as the following chart illustrates.

<u>BAR OR PF TOP</u>	<u>PF SIDE OR BOTTOM</u>
13"	13"
19"	19"
25"	25"
31"	31"

Made to order Sides:

7", 10", 16", 22", 28"

Spray Heads



SH-3000


After years of research and development, Advance, the industry leader in spraying technology, has developed the ultimate spray head for die spraying. It is the Advance Model SH-3000 spray head.

The Model SH-3000 has fewer parts and an improved design over previous Advance models. Adjustability is greatly improved with a full three-turn range compared to 1-1/2 on the Model 2000. There is also improved atomization consistency over a larger variation of air to lube pressure.


The Model SH-3000 offers a wide range of spray patterns with 9 interchangeable nozzles from ultra-fine mist to maximum output. Various extension tubes are also available. Air and lube pressures can be set independently and are adjustable from 40 to 110 psi.

The spray head is also retrofittable on any of our spraying reciprocators. Manifold conversions are available for any brand of sprayer.

All internal parts are warranted for 1,000,000 cycles. The spray head body has a 10 year warranty.

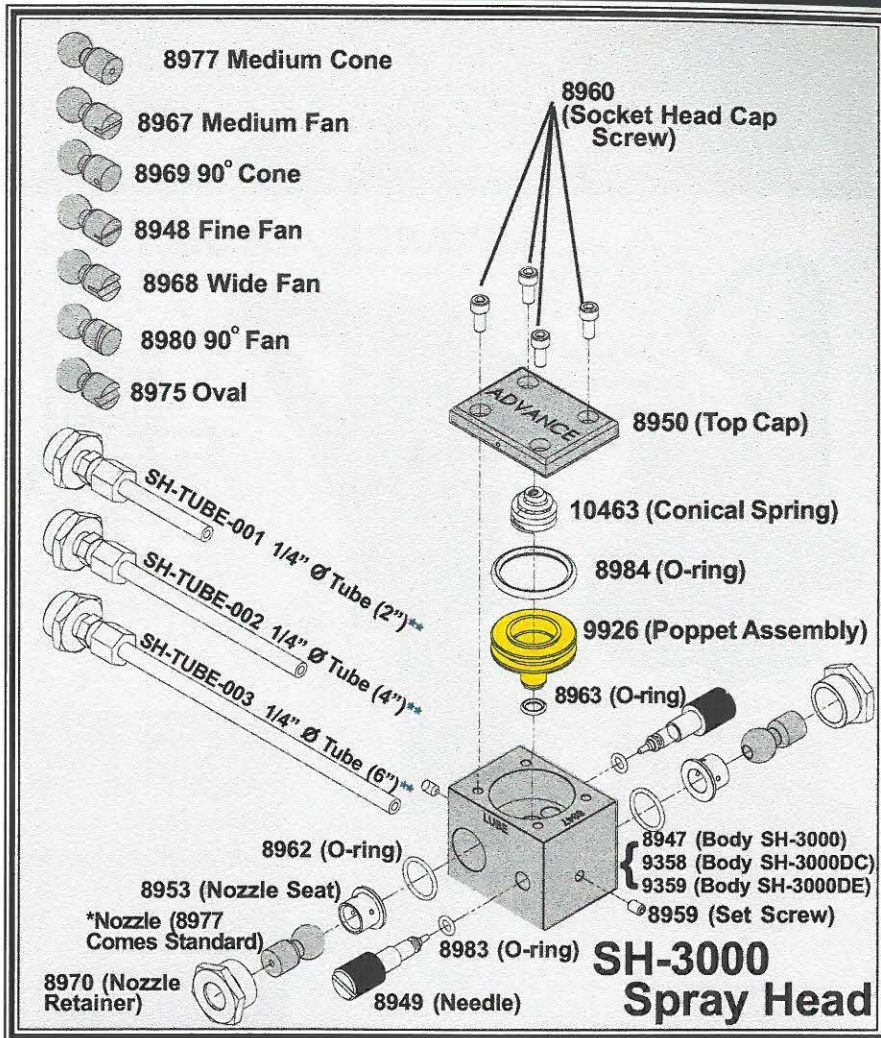

** Note: SH-TUBE-001, SH-TUBE-002, and SH-TUBE-003 consist of: 9649 (Adapter, nozzle to tube), 5998 (adapter, 1/8 mnpt to 1/4 tube), 9903-016 2" tube, 9903-032 4" tube, 9903-048 6" tube

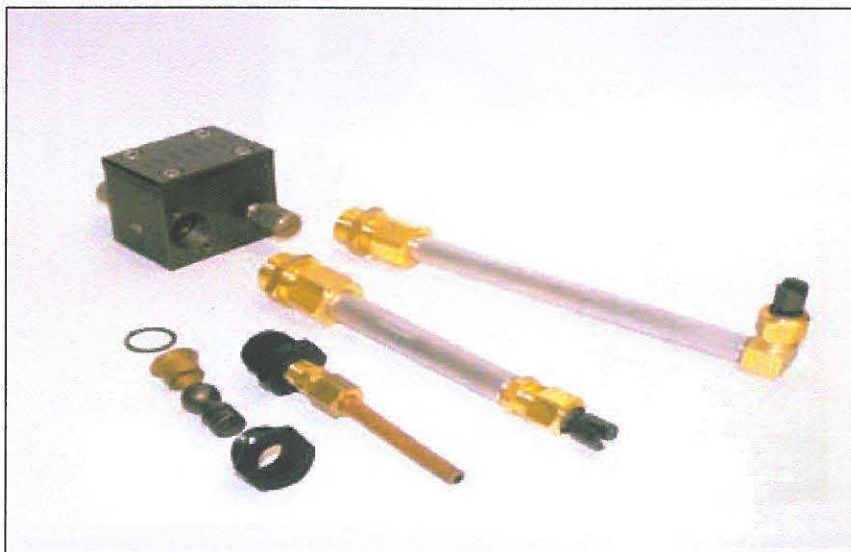

SH-3000 Extensions, Accessories

Advance®


ADVANCE AUTOMATION EQUIPMENT




Digital Servo
Reciprocating
Sprayers



Digital Servo
Ladlers

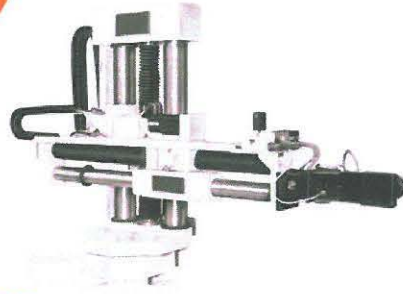

Die Casting Extractor

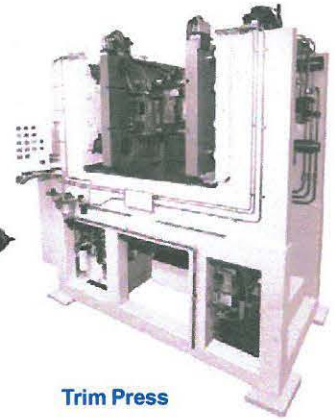


Trim Press



Mini-Max Die Lube
Reclaimer




Tool-Temp
Temperature
Control Unit

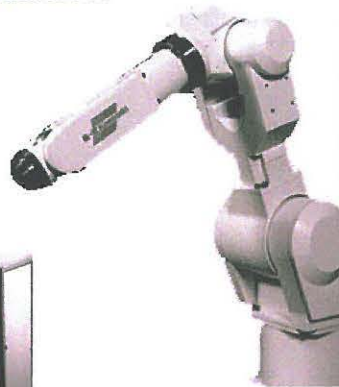

Kawasaki Robots



Central Lube
Systems

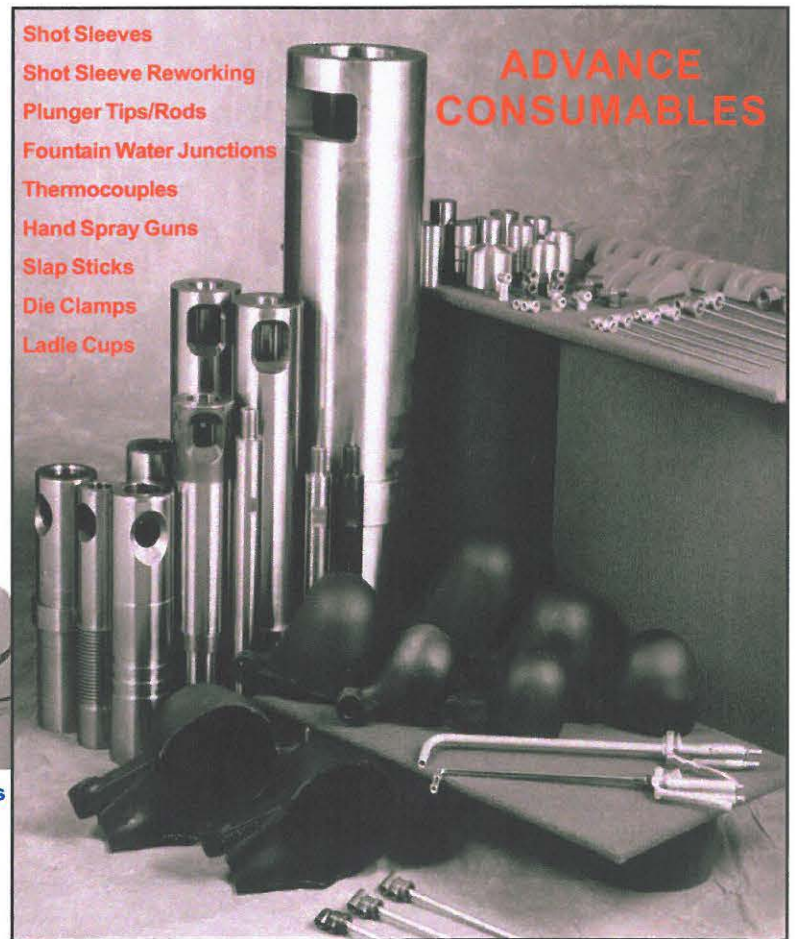

- Shot Sleeves
- Shot Sleeve Reworking
- Plunger Tips/Rods
- Fountain Water Junctions
- Thermocouples
- Hand Spray Guns
- Slap Sticks
- Die Clamps
- Ladle Cups

ADVANCE CONSUMABLES

Your "Window to the World"® of Die Casting Automation and Consumable Products

Phone: 269-849-1000


2527 HWY M-63, Benton Harbor, MI 49022

Fax: 269-849-2200

Advance[®] automation

Die Casting Robotic Spray System

The Advance Die Casting Robotic Spray System utilizes the Kawasaki ZT130/150/200 shelf mounted robot which is specifically designed to meet the challenging requirements of the die cast environment. The six-axis servo controlled robot carries a maximum static payload of over 300 lbs. The hand held LCD Multifunctional Touch Panel is the most user-friendly panel of its type in the die casting industry.

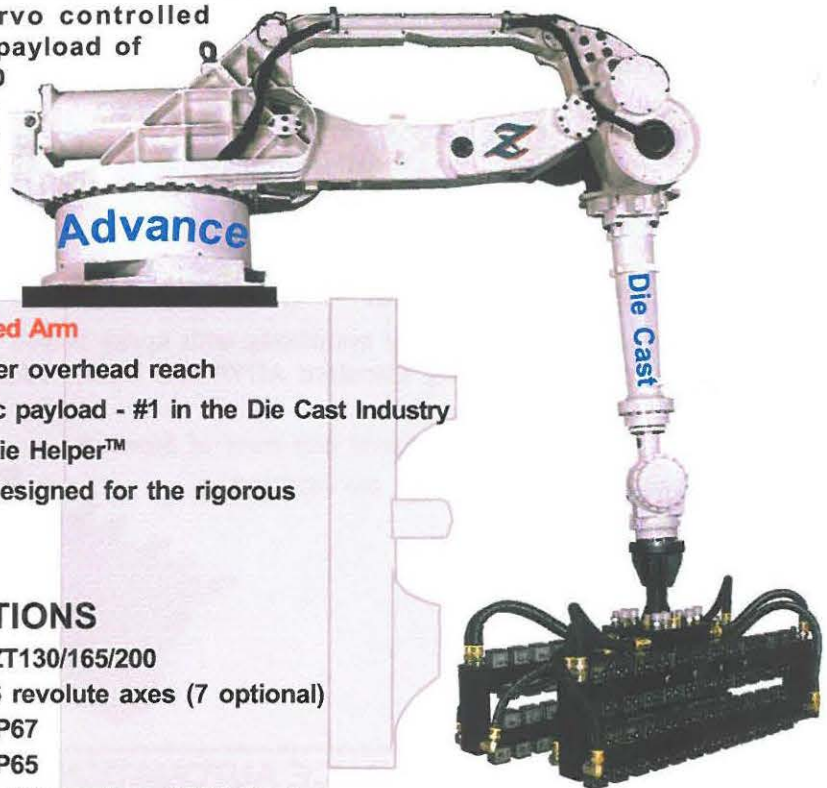

DIE CASTING FEATURES

- **IP-67 rated wrist and IP-65 rated Arm**
- Unique Hybrid Link for greater overhead reach
- 130-200 kg (286-440 lbs.) static payload - #1 in the Die Cast Industry
- Special Die Cast Software - Die Helper™
- Special seals and bearings designed for the rigorous Die Cast environment


MECHANICAL SPECIFICATIONS

- | | |
|----------------------------|------------------------------|
| • Model Type | ZT130/165/200 |
| • Servo Axis | 6 revolute axes (7 optional) |
| • Wrist Rating | IP67 |
| • Arm Rating | IP65 |
| • Maximum Rotary Velocity | 6,337 mm/sec (250 in/sec) |
| • Maximum Static Payload | 130-200 kg (286-440 lbs.) |
| • Maximum Vertical Reach | 5027 mm (198 in) |
| • Maximum Horizontal Reach | 3458 mm (136 in) |
| • Repeatability | +/- .30 mm (.012 in) |
| • Positioning Feedback | Absolute Encoder |
| • Drive Motors | Brushless AC Servo Motors |
| • Machine Weight | (3850-3960 lbs.) |

**Model
RSS-2500**


Your "Window to the World"[®] of Die Casting Automation and Consumable Products

Robotic 6 Axis Die Spraying

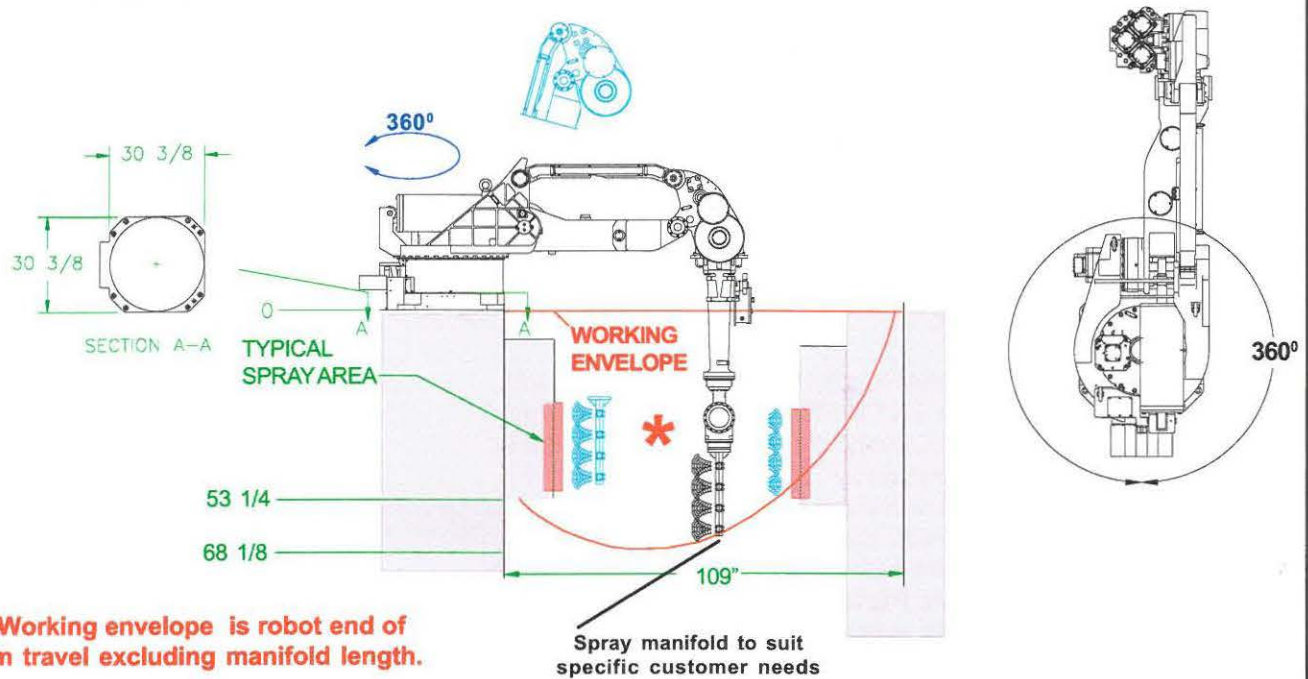

Spray Manifold, heads, etc.

- Standard and custom spray manifolds with spray heads mounted on 1, 2, 3, or 4 sides using standard ADVANCE Model 3000 spray heads.
- 2 zones of spray included and one zone of blow-off.
- Valve package, hoses, etc. are included.

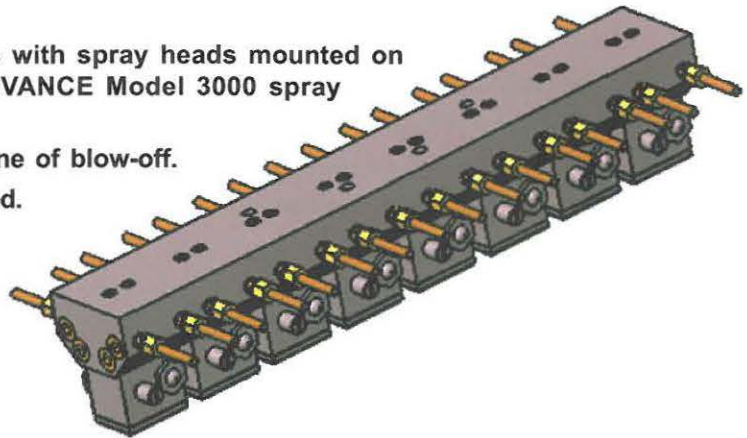

Extracting Robots



Specifications are subject to change without notice.

ADVANCE AUTOMATION EQUIPMENT

ADVANCE manufactures a broad assortment of die casting peripheral equipment including ladlers, extracting robots, sprayers, die temperature control units, central lube systems, trim presses, casting cooler systems and consumable products.

ADVANCE can satisfy all of your die casting automation needs.

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com




Digital Servo Ladlers

©Advance Products Corporation
Printed in U.S.A.

Advance[®] automation

Spraying Technology Manifolds, Spray Heads & Accessories

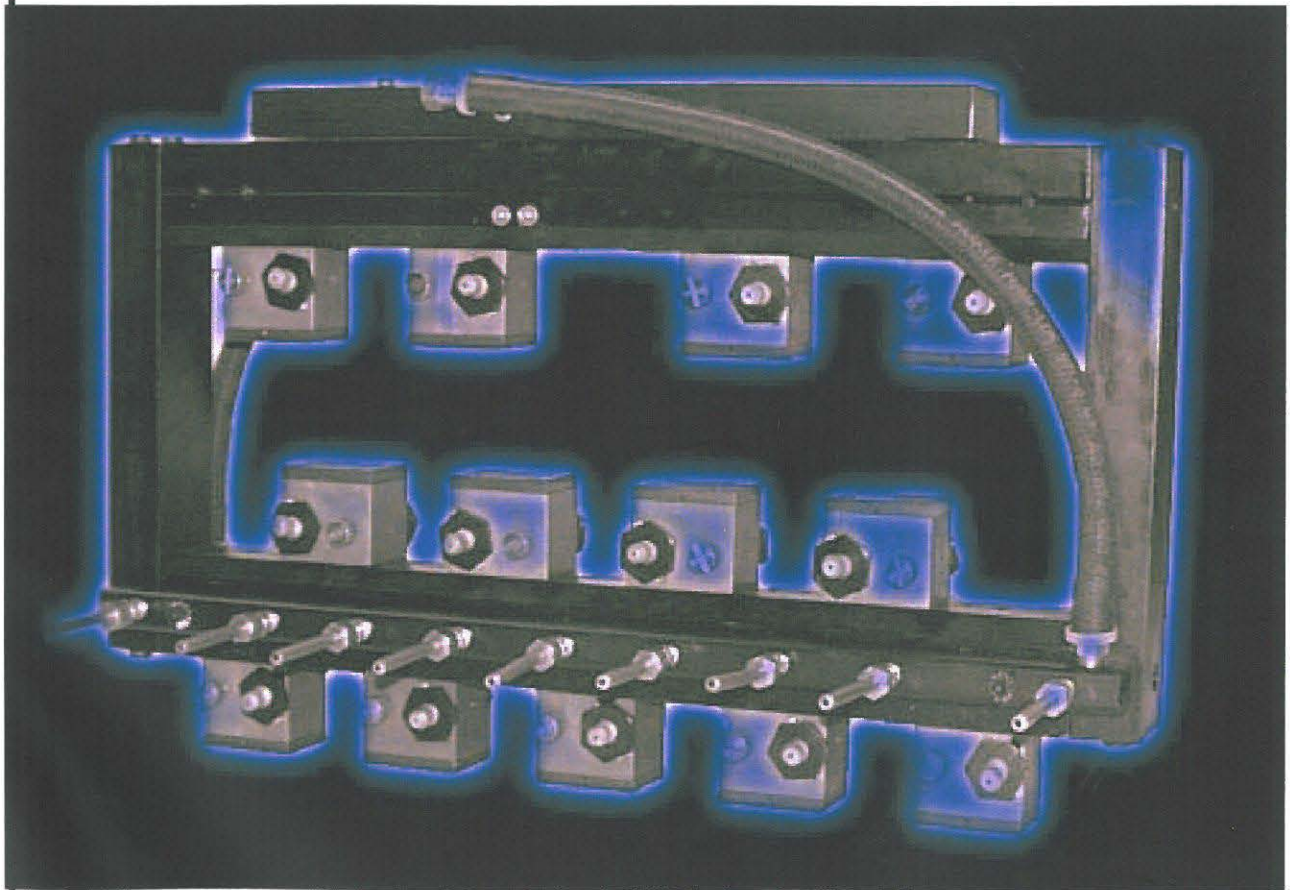


Advance Your Capabilities

Business Side

1 - Why Proper Manifolds and Accessories Are Important

Consistency, repeatability and efficiency - three things every die caster wants in their spraying system. To achieve all three, requires the proper spraying equipment. After selecting an automatic die spray system, the spraying package is the most important next step.

The **manifold** is the heart of the die casting spray system. Manifold selection, along with the choice of **spray heads** and **nozzles** are significant factors in achieving optimum die spraying.

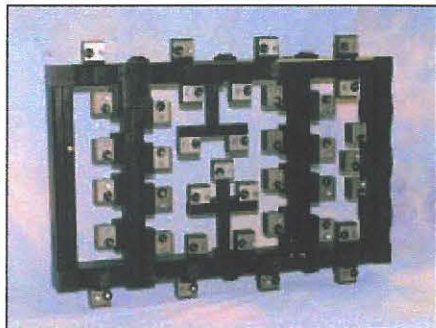

Too often, little consideration is given to manifold design and usage. When you consider that spraying is the most time consuming part of the **total casting cycle**, it is important to select a manifold that will:

- A) **reduce cycle time**
- B) **give you a consistent, quality part**
- C) **reduce labor**
- D) **easy to maintain**
- E) **will not leak**

2 - Production Improvements - Cycle Time

As a rule of thumb, spraying should be less than 20% of total cycle time. Many die casters are spraying for 30-40% of the cycle time. This is a huge waste of time and adds to total cycle time. Many years ago, Advance devised a formula that has worked well in determining proper spraying time. The formula states you should spray one second for every 100 ton of the size of the die cast machine. Add one second per slide and one second for a second spray zone. For example, for an 800-ton DCM with two zones and two slides, your spray time is:

1 sec. x 8 + 1 (additional zone) + 2 (slides) = 11 seconds.

3 - Positioning Accuracy

Digital servo-control gives Advance reciprocators positioning accuracy within .020" This repeatability is important for maintaining control of the process.



4 - Quality Issues

How you spray determines the quality of your part.

Proper spraying:

- Produces more consistent, shippable parts
- Produces more presentable, shiny parts
- Reduces scrap
- Increases die life
- Increases machine up-time

It is important to understand that quality drives production schedules, which translates into MONEY. If you have consistent, quality parts, it is easier to calculate the number of shippable parts made per hour. This translates into better prediction of shipping schedules, which in turn, controls production schedules.

5 - Environmental and Safety Issues

In addition to producing more shippable parts and reducing labor, automatic spraying is safer than hand sprayers. It takes the operator away from the fumes and the opening and closing of the die casting machine versus hand spraying. This can reduce Worker's Compensation premiums and make for a safer plant environment.

Summary:

Proper automatic spraying with the right manifold, spray heads and nozzles will reduce cycle time and labor and give you more consistent, usable parts. It is this consistency, repeatability and efficiency of automatic spraying that make it so vital to your production and your bottom line.


AUTOMATION MEANS

Consistency, Process Repeatability, Efficiency
More Safe Environment, More Shippable Parts
Better Scheduling, More Profits


Manifold Design / Selection

How To Design Your Manifold

(1) Determine the relative size of the manifold. Use either the die layout drawing, actual casting size, etc.

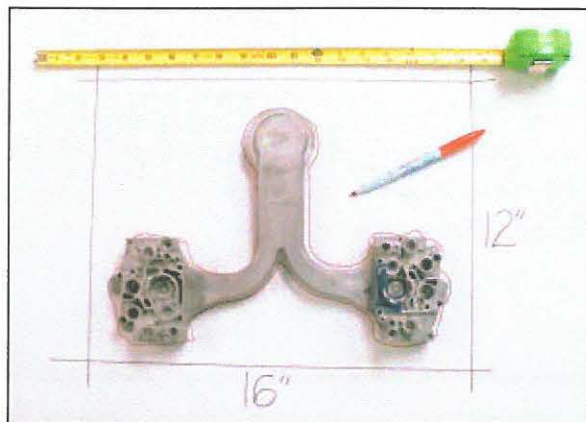


(2) Determine where you need to spray the die. Highlight the problem areas which may need more cooling.

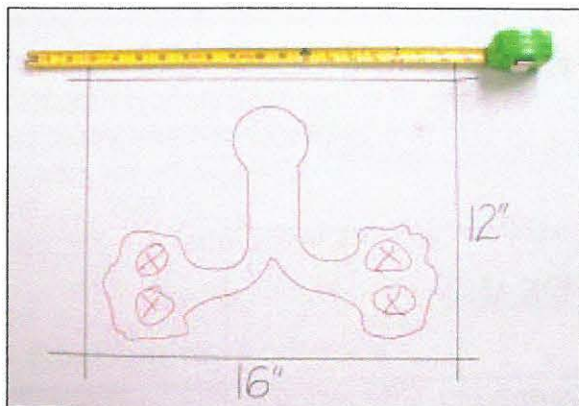


(3) Decide how you want to spray the die. For example, is a bar (sweep) manifold suitable or is a more complex Picture Frame® manifold needed? Do you want to spray with one or two zones of spray?

Single Bar,
Single
Spray Zone

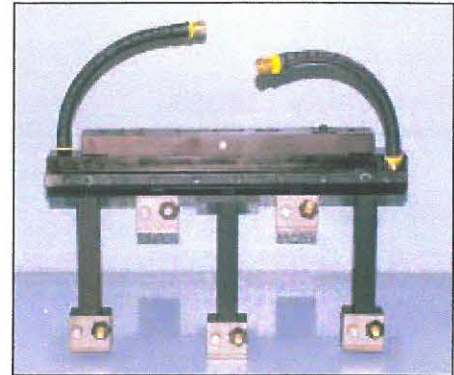


LGTH	PART#	LGTH	PART#
13"	9805	25"	9807
19"	9806	31"	9808

Single Bar,
Dual Spray
Zone

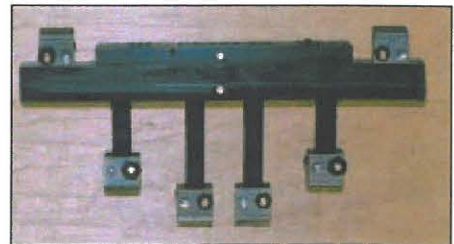


LGTH	PART#	LGTH	PART#
13"	not available	25"	9807
19"	9806	31"	9808

Dual Bar,
Dual Spray
Zone

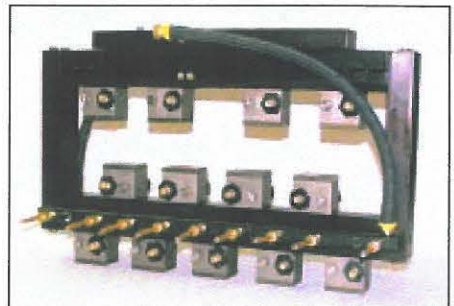

LGTH	TOP	BTM	LGTH	TOP	BTM
13"	9805	9812	25"	9807	9816
19"	9806	9814	31"	9808	9818

Picture Frame® Manifolds

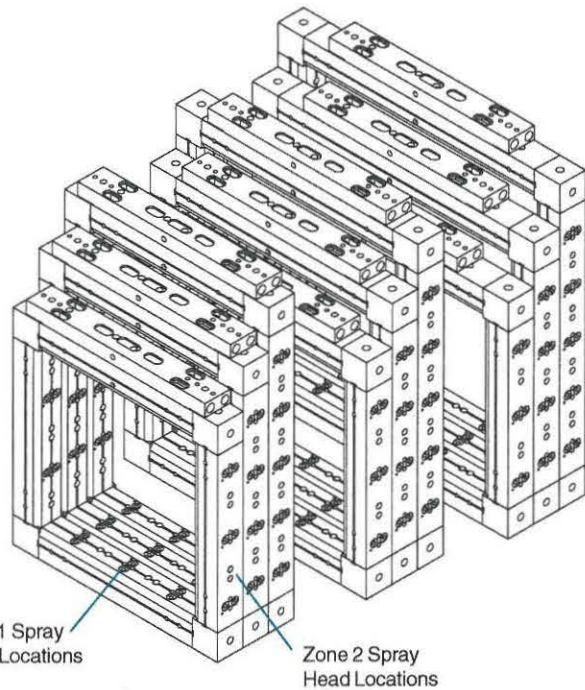

Picture Frame® Manifold Sizing Chart

If your die is more complex or you want to spray the die from one fixed point, a Picture Frame® Manifold may be suitable.

They are our most popular manifolds and come in a multitude of standard sizes to fit most any application. (See chart at right).


Picture Frame® Manifolds typically produce the shortest spray time. They are available in both single and dual zone capability.

Part #	Size Width x Height (Inches)	Components Required For Each Assembly			Available Spray Head Locations	
		Top Frame Part #	Bottom Frame Part #	Side Frame Part #	Zone 1	Zone 2
NPF-1711-D	17 x 11	9805	9812	9810	9	8
NPF-1714-D	17 x 14	9805	9812	9811	11	10
NPF-1717-D	17 x 17	9805	9812	9812	13	12
NPF-1720-D	17 x 20	9805	9812	9813	15	14
NPF-1723-D	17 x 23	9805	9812	9814	17	16
NPF-1726-D	17 x 26	9805	9812	9815	19	18
NPF-1729-D	17 x 29	9805	9812	9816	21	20
NPF-2311-D	23 x 11	9806	9814	9810	13	10
NPF-2314-D	23 x 14	9806	9814	9811	15	12
NPF-2317-D	23 x 17	9806	9814	9812	17	14
NPF-2320-D	23 x 20	9806	9814	9813	19	16
NPF-2323-D	23 x 23	9806	9814	9814	21	18
NPF-2326-D	23 x 26	9806	9814	9815	23	20
NPF-2329-D	23 x 29	9806	9814	9816	25	22
NPF-2332-D	23 x 32	9806	9814	9817	27	24
NPF-2911-D	29 x 11	9807	9816	9810	17	14
NPF-2914-D	29 x 14	9807	9816	9811	19	16
NPF-2917-D	29 x 17	9807	9816	9812	21	18
NPF-2920-D	29 x 20	9807	9816	9813	23	20
NPF-2923-D	29 x 23	9807	9816	9814	25	22
NPF-2926-D	29 x 26	9807	9816	9815	27	24
NPF-2929-D	29 x 29	9807	9816	9816	29	26
NPF-2932-D	29 x 32	9807	9816	9817	31	28
NPF-2935-D	29 x 35	9807	9816	9818	33	30
NPF-3511-D	35 x 11	9808	9818	9810	21	18
NPF-3514-D	35 x 14	9808	9818	9811	23	20
NPF-3517-D	35 x 17	9808	9818	9812	25	22
NPF-3520-D	35 x 20	9808	9818	9813	27	24
NPF-3523-D	35 x 23	9808	9818	9814	29	26
NPF-3526-D	35 x 26	9808	9818	9815	31	28
NPF-3529-D	35 x 29	9808	9818	9816	33	30
NPF-3532-D	35 x 32	9808	9818	9817	35	32
NPF-3535-D	35 x 35	9808	9818	9818	37	34

Manifold Parts

Let's look at some accessories that can help you in the placement of the spray heads. At Advance, we believe that permanent designed manifolds are better than extension tubes coming out of the head.

Hard manifolds do not go out of adjustment and make die change-over quick. Also, with Advance's straight-in-the-die travel, reciprocator die openings can be reduced. This produces greater die spraying efficiency and less over spray and run off. By reducing the die spray opening needed, faster cycle rates can be achieved.

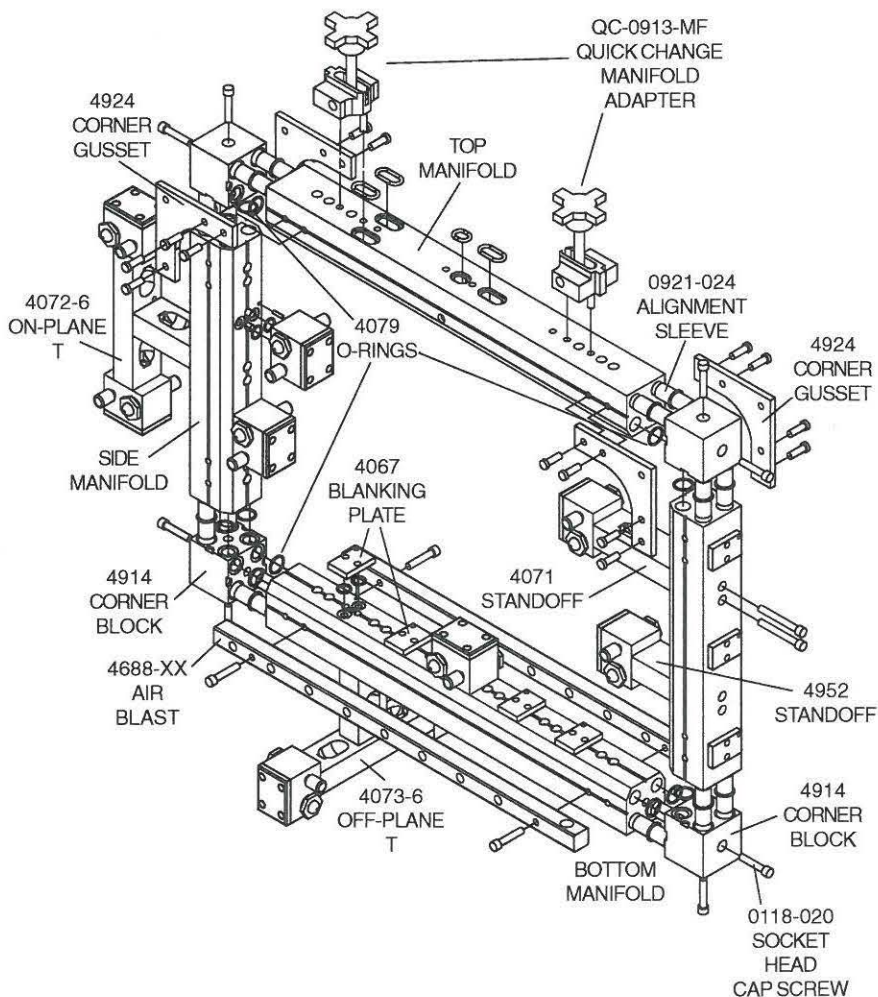

QUICK CHANGE MANIFOLD ADAPTERS allow for fast manifold exchange without tools for quick and easy die setup.

STANDOFFS are available in 1-inch increments. Supplied with O-rings and bolts.

STANDOFFS

LENGTH	PART #
1-inch	4952-008
2-inch	4952-016
3-inch	4952-024
4-inch	4071-032
5-inch	4071-040
6-inch	4071-048
7-inch	4071-056
8-inch	4071-064

ON-PLANE T's can be attached to the end of the extension providing the availability of two spray heads from one spray head location. Comes complete with O-rings and fasteners.

OFF-PLANE T's attach to the end of the extension and are used to project two spray heads towards the die cavity. Comes complete with O-rings and fasteners.

OFF-PLANE T'S

LENGTH	PART #
6-inch	4073-6

ON-PLANE T'S

LENGTH	PART #
6-inch	4072-6

Spray Heads



MODEL SH-3000 SPRAY HEAD

After years of research and development, Advance, the industry leader in spraying technology, has developed the ultimate spray head for die spraying. It is the Advance Model SH-3000 spray head.

The Model SH-3000 has fewer parts and an improved design over previous Advance models. Adjustability is greatly improved with a full three-turn range compared to 1-1/2 on the Model 2000. There is also improved atomization consistency over a larger variation of air to lube pressure.

The Model SH-3000 offers a wide range of spray patterns with 9 interchangeable nozzles from ultra-fine mist to maximum output. Special nozzles are available that offer consistent flow/lube rates at a given pressure regardless of air pressure.

All internal parts are warranted for 1,000,000 cycles. The spray head body has a 10 year warranty.

FEATURES

- Wide range of spray volumes from ultra-fine mist to heavy dosing.
- Not dependent on the same air and lube pressures. In fact, the independent air and lube pressures can vary from 40 psi to 110 psi without affecting each other.
- .5 GPM per each nozzle outlet.
- No leak construction **GUARANTEED**. Advance's new positive shutoff doesn't permit leaking.
- Either internal or external mix nozzle outlets can be used on the same head. **An APC exclusive!**
- All internal parts are warranted for 1,000,000 cycles against leakage. Body warranted for 10 years.

To order SH-3000 Spray Head with:	
Nozzle #	Order APC Part #
8977	SH-3000-8977
8974	SH-3000-8974
8969	SH-3000-8969
8948	SH-3000-8978
8968	SH-3000-8968
8980	SH-3000-8980
8975	SH-3000-8975
SH-TUBE-001	SH-3000-T-001
SH-TUBE-002	SH-3000-T-002
SH-TUBE-003	SH-3000-T-003

8977 Narrow Cone
8974 Wide Fan
8969 90° Cone
8948 Fine Fan
8968 Thick Fan
8980 90° Fan
8975 Oval


SH-TUBE-001 1/4" O Tube (2")**
SH-TUBE-002 1/4" O Tube (4")**
SH-TUBE-003 1/4" O Tube (6")**

0114-006 (Socket Head Cap Screw)
8950 (Top Cap)
10463 (Conical Spring)
8984 (O-ring)
9926 (Poppet Assembly)
8963 (O-ring)
8962 (O-ring)
8953 (Nozzle Seat)
8947 (Body)
8959 (Set Screw)
8983 (O-ring)
8949 (Needle)
8970 (Nozzle Retainer)
8979 (Nozzle)

**** Note: SH-TUBE-001, SH-TUBE-002, and SH-TUBE-003 consist of:**
 9649 (Adapter, nozzle to tube)
 5998 (adapter, 1/8 mnpt to 1/4 tube)
 9903-016 2" tube, 9903-032 4" tube
 9903-048 6" tube

***Nozzle (8977 Comes Standard)**

SH-3000 Spray Head

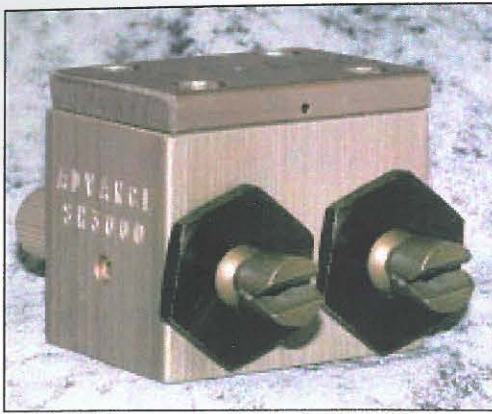

DUAL NOZZLE SPRAY HEAD

Need more lube in a concentrated area. Try the new Advance Dual Nozzle spray head, ideal for ejector side.

The head features two nozzles on one side of the head. Comes with two nozzles of your choice.

AVAILABLE NOZZLES

SERIES	TUBE STYLE / LENGTH	NOZZLE
SH-3000 (Dual Outlet Opposed Side)	None* (SH-TUBE-000)	
	1/4" copper/2" (SH-TUBE-001)	
SH-3000DC (Dual Outlet Cover Side)	1/4" copper/4" (SH-TUBE-002)	
	1/4" copper/6" (SH-TUBE-003)	
SH-3000DE (Dual Outlet Ejector Side)	1/2" alum. straight/2" (SH-TUBE-004)	
	1/2" alum. straight/4" (SH-TUBE-005)	
	1/2" alum. straight/6" (SH-TUBE-006)	
	1/2" alum. 90°/2" (SH-TUBE-007)	
	1/2" alum. 90°/4" (SH-TUBE-008)	
	1/2" alum. 90°/6" (SH-TUBE-009)	

* No nozzle required with 1/4" copper tube



ADVANCE PRODUCTS CORP.


2527 M-63 North / Benton Harbor, MI 49022

PH: 269-849-1000 FAX: 269-849-2200

email: sales@advanceproductscorp.com

internet: www.advanceproductscorp.com

Advance[®] automation

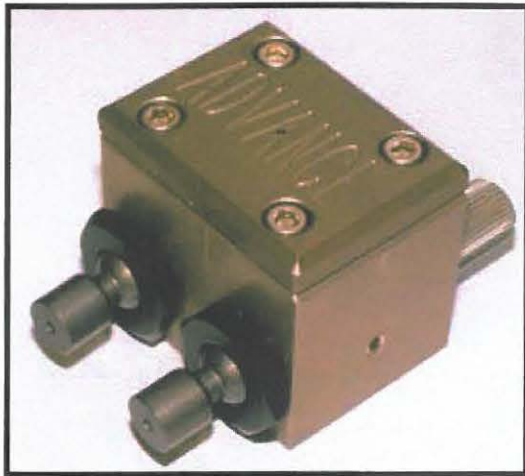

DUAL OUTLET:
Ejector Side (SH-3000DE)
Cover Side (SH-3000DC)

MODEL 3000 SPRAY HEAD




STANDARD:
Double, Opposed


After years of research and development, Advance Products Corporation, the industry leader in spraying technology, has developed the ultimate spray head for die spraying.

- All components are **guaranteed** for no leak performance for **1 million cycles**. The spray head body is **guaranteed** for **10 years**.
- The head operates at a wide range of 40 to 100 PSI air and lube pressure.
- A wide range of output volumes for ultra fine mist to maximum flow.
- Lots of nozzle combinations. Also see Advance Technology Brochure for more information about spray manifolds and other accessories.


Your "Window to the World"[®] of Die Casting Automation and Consumable Products




8977 Medium Cone




8967 Medium Fan



8969 90° Cone




8948 Fine Fan




8968 Wide Fan



8980 90° Fan



8975 Oval

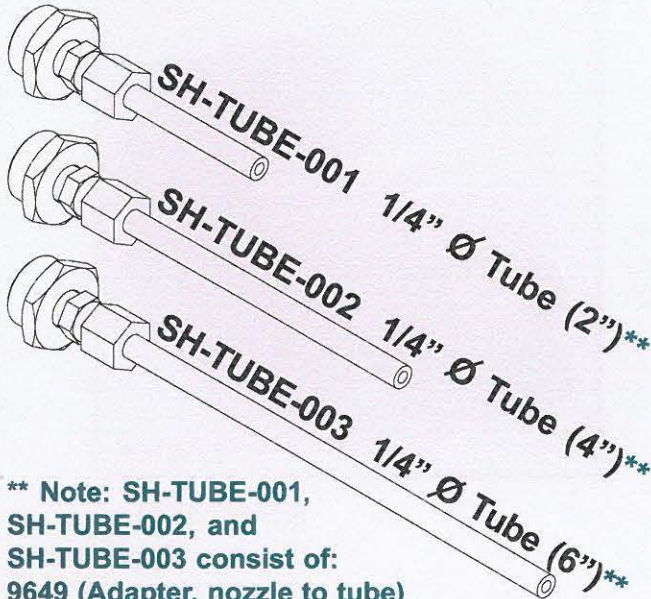

** Note: SH-TUBE-001, SH-TUBE-002, and SH-TUBE-003 consist of:
 9649 (Adapter, nozzle to tube)
 5998 (adapter, 1/8 mnpt to 1/4 tube)
 9903-016 2" tube, 9903-032 4" tube
 9903-048 6" tube

*Nozzle (8977 Comes Standard)

8970 (Nozzle Retainer)

8953 (Nozzle Seat)

8962 (O-ring)

8983 (O-ring)

8949 (Needle)

8960 (Socket Head Cap Screw)

8950 (Top Cap)

10463 (Conical Spring)

8984 (O-ring)

9926 (Poppet Assembly)

8963 (O-ring)

8947 (Body SH-3000)
 9358 (Body SH-3000DC)
 9359 (Body SH-3000DE)

8959 (Set Screw)

SH-3000 Spray Head

To order SH-3000 Spray Head with specific nozzles, cross-reference to your desired spray head with the desired nozzle:

Nozzle design	SH-3000 Double Opposed Outlet (SH-3000)	SH-3000 Dual Outlet Ejector Side (SH-3000DE)	SH-3000 Dual Outlet Cover Side (SH-3000DC)
8977	SH-3000-8977	SH-3000DE-8977	SH-3000DC-8977
8967	SH-3000-8967	SH-3000DE-8967	SH-3000DC-8967
8969	SH-3000-8969	SH-3000DE-8969	SH-3000DC-8969
8948	SH-3000-8948	SH-3000DE-8948	SH-3000DC-8948
8968	SH-3000-8968	SH-3000DE-8968	SH-3000DC-8968
8980	SH-3000-8980	SH-3000DE-8980	SH-3000DC-8980
8975	SH-3000-8975	SH-3000DE-8975	SH-3000DC-8975
SH-TUBE-001	SH-3000-T-001	SH-3000DE-T-001	SH-3000DC-T-001
SH-TUBE-002	SH-3000-T-002	SH-3000DE-T-002	SH-3000DC-T-002
SH-TUBE-003	SH-3000-T-003	SH-3000DE-T-003	SH-3000DC-T-003

Specifications are subject to change without notice.

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
Printed in U.S.A.
APC-100-2002

Automation Ladlers

- Ladlers
- Ladle Cups

Advance automation

Digital Servo Metal Ladling Systems



Your "Window to the World"® of Die Casting Automation and Consumable Products

Introduction

Welcome to Advance's World of Ladler Automation

Advance is your "Window to the World®" for digital automatic metal ladlers which are renowned worldwide for their ruggedness and reliability. Our ladlers have been proven to require less than \$300 per year in maintenance costs.

In-House Manufacturing Capability

Advance automation products are made in-house at our Benton Harbor, MI, facility. By taking charge of every step of the manufacturing process, we can assure process consistency.

Process consistency is the first step in achieving total quality. A reliable, consistent process begins with reliable equipment. Parts are made by skilled craftsmen on state-of-the-art CNC machines.

Engineering is another critical part in the manufacturing process. Advance engineers design equipment with the latest 3-D solid modeling computer systems and can provide you with a detailed drawing showing how a specific product would work with your die casting machine.

Advance ladlers - proudly **MADE IN AMERICA**

by experienced craftsmen - are known for their durability, reliability, accuracy, ease of operation and low maintenance costs. This means a consistent, quality part at a world competitive price.




Let's Discuss How Shot Size Repeatability Saves You \$MONEY\$.

Independent customer testing has found that **ADVANCE** ladlers have a repeatable accuracy higher than our advertised 99+%. This is achieved by our superior manufacturing process described in the following pages.

ADVANCE designs its ladlers for the **highest repeatability** which means lower cost of operation. For example, let's compare a 60 second cycle operation for 5 days, 20 hours per day, using a 10 pound nominal pour. Now let's compare a competitor's ladler of 10% pouring repeatability against ADVANCE's 1% repeatability guarantee.

Competitor's ladler 10% repeatability for a 10 pound casting:
60 second shot X 20 hours X 5 days = 6000 shots per week or 60,000 pounds of aluminum. The shot weight variation would be from 60,000 pounds to 66,000 pounds (10 % maximum variation) or 6000 pounds too much. Let's say, however, the excess average is half of that or 3000 pounds of aluminum per week.

Now, compare to **ADVANCE**'s 1% repeatability:
The average shot weight variance is 300 pounds per week.

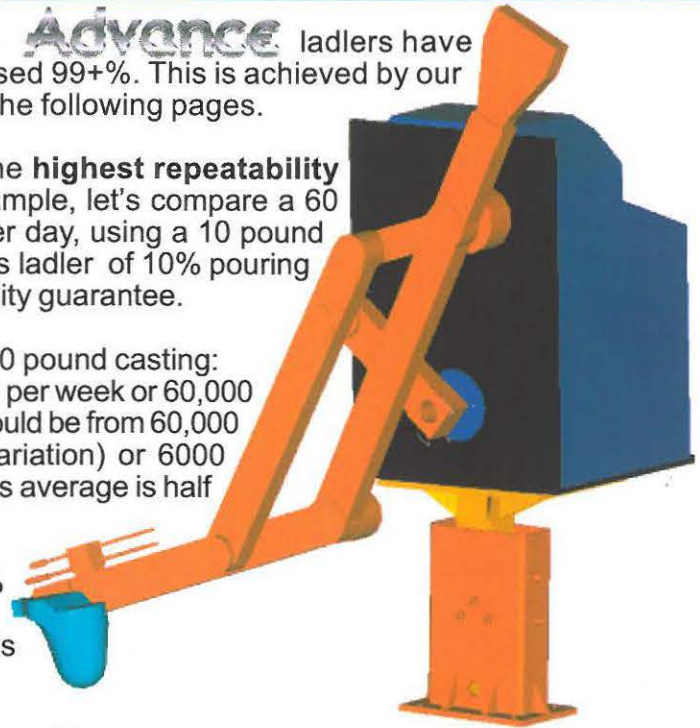

The metal saving difference is **2700 pounds per week!**

At 50 weeks per year, that's equal to **135,000 pounds** of metal you've purchased, inventoried, and melted unnecessarily! **And these figures are only for a 10 pound casting!**


What is this costing your company!?!

One die caster has stated that *"a biscuit 1" longer than needed (on a 2 1/2" diameter sleeve) costs about \$50,000 a year (per machine) in remelt costs"*. You can't afford not to have the most accurate ladler in the industry!

How Does ADVANCE Achieve 99+% Pouring Accuracy in Its Ladlers?

The 99+% is achieved because the ladle cup "spill off angle" is controlled by the servo motor and servo drive. One revolution of the ladle cup is divided into almost 2 million parts (1,966,000 to be exact). What this means is that the cup "spill off angle" can be controlled to 2 millionth of its rotation and it's this repeatability of the "spill off angle" that achieves the ladlers' shot size repeatability.

Unlike other ladles, the **ADVANCE** ladler achieves the same repeatability regardless of metal level draw down.

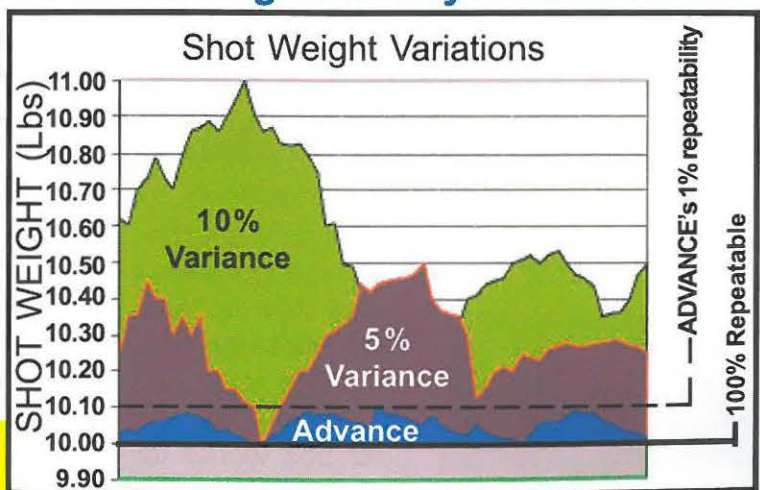

Ladler Features


Advance's Design Capabilities Gives You Quality, Low Replacement Costs & Higher Up-Time

The average cost that companies spend with **Advance** per year on ladlers after the warranty period is under \$300 per year. Why is this so?

Well, **Advance** designs its products starting with 3-D solid modeling software. The design criteria set by our president is to "design the product so it never breaks down"! That's a tough goal, but the minimal amount of money that companies spend with us on replacement parts proves the ladlers are very well designed.

An example of this quality is **Advance's Direct-Drive System.**

Provides 9 times the tooth contact of normal gear boxes

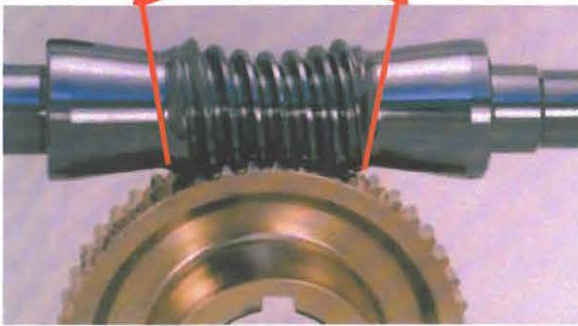

The gear box in **Advance** ladlers is either a ground helical gear set or a Cone Drive double-enveloping gear set where the worm is manufactured in an hour-glass configuration and wraps around the worm wheel. Either provides low backlash and extremely long-life.

The brushless servo motors are directly coupled to the gearset reducing service drive train problems and improving mechanical response to the servo motors.

The output shaft of the ladler linkage arms is a large, one-piece shaft, which goes completely through the gear box. The positioning encoder, motor and gearbox are giving direct drive without use of pulleys, belts or cams.


Heavy-Duty Arm Support

On SL-2000 and larger models (more than 50 pounds of metal) the entire arm assembly is supported by a large housing with double opposed Timken tapered roller bearings.



This housing assembly supports the total weight of the arm so there is no load applied to the gear box assembly, allowing very smooth arm travel without torque interruptions.

Without the weight of the arm being supported by the gearbox, the gear box works for many years of service.

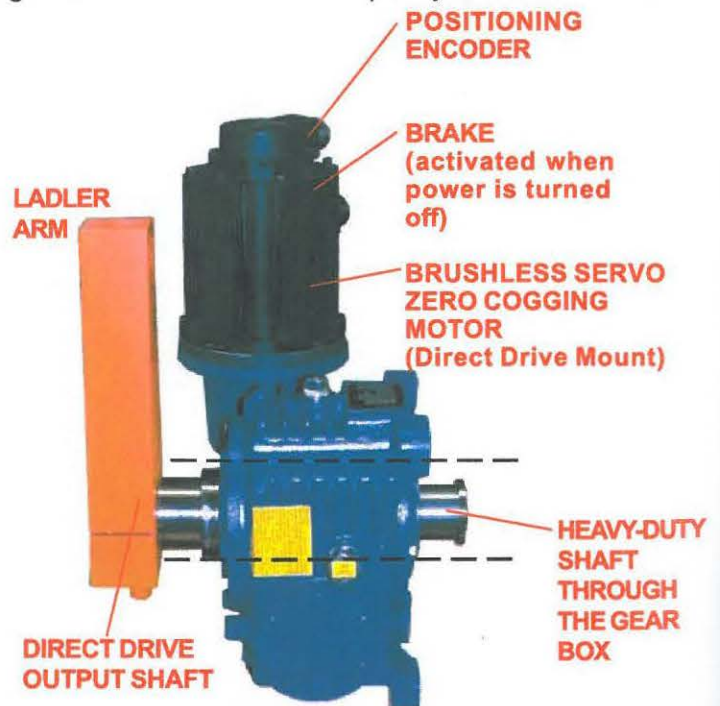

“NO DUNKING” Smart Probe™ System

Advance has developed proprietary circuitry which prevents dunking. The smart probe remembers the furnace metal position from its last pour pickup. A back-up probe is activated if the primary probe fails. If both probes fail, the ladler is programmed to go no more than 1” lower than the previous metal pickup point. If it doesn’t sense the metal, it goes to its home position and turns itself off. The ladler doesn’t dunk, even if all the probe wires are broken.

The Advance Smart Probe™ System consists of three probes - standard, backup and smart. Should the standard probe fail, a backup probe takes over to prevent dunking of the arm into metal. Warning Lights flash on the Operator Interface Station signaling a probe failure.

Additionally, a smart probe remembers the last metal level detected and allows the probes to advance only 1” below the last metal level sensed. If the smart probe doesn’t sense metal within 1”, the ladler will dump all the metal in the cup back into the dipwell and return to the Home position before shutting itself off automatically!



DOUBLE INSULATED WIRES FOR EACH PROBE

THE PROBE ASSEMBLY CAN BE MOUNTED ON EITHER SIDE OF THE ARM.

“SUPER” HIGH TEMPERATURE BEARINGS REQUIRE NO LUBRICATION OR GRAPHITE POWDER.

PROBE TIPS ARE EASILY REPLACEABLE AND TREATED WITH ADVANCE’S EXCLUSIVE “ADWEAR” TREATMENT WHICH RESISTS ALUMINUM FOR MONTHS AND SOMETIMES YEARS. THE PROBES DO NOT REQUIRE A COATING.

50 POUND AND LARGER LADLER SIZES USE INTERCHANGEABLE LADLE CUP ADAPTERS

ADVANCE LADLERS ARE DESIGNED TO USE ADVANCE QUICK-CHANGE LADLE CUPS

Ladler Features


Electronic Platform, Construction and Features

Advance uses standard Mitsubishi components. The human-machine interface, amplifier, and motor are all standard "off the shelf" Mitsubishi components. No special proprietary electronics with **Advance**. Mitsubishi is #1 worldwide in servo system reliability and **Advance** is proud to partner with them.

Computer Front End

The Advance Servo Ladler operator station uses an easy-to-read color 5.75" LCD.

Each program is easy to set up and is menu prompted so even operators with little or no previous programming experience can program the ladle. The unit stores up to 500 parts programs in NV RAM.

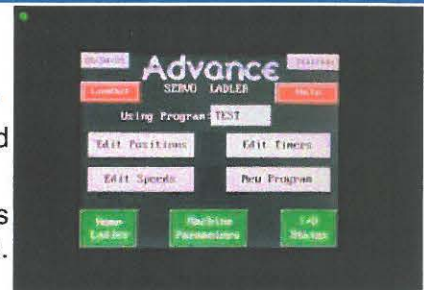


Operator Interface Station

The Operator Interface Station allows the operator to monitor the status of the ladler, the metal level in the furnace, and, also, control all basic ladler functions. Warning lights signal probe failures, low metal levels, and aborted cycles. Indicators signal the mechanism position and ladle cup status. The Operator Interface Station size is: 9"H x 13"W x 4.38"D.


Controls can be set to Manual or Auto by turning a selector switch. A selector switch increases or decreases the shot size.

Main Control Box

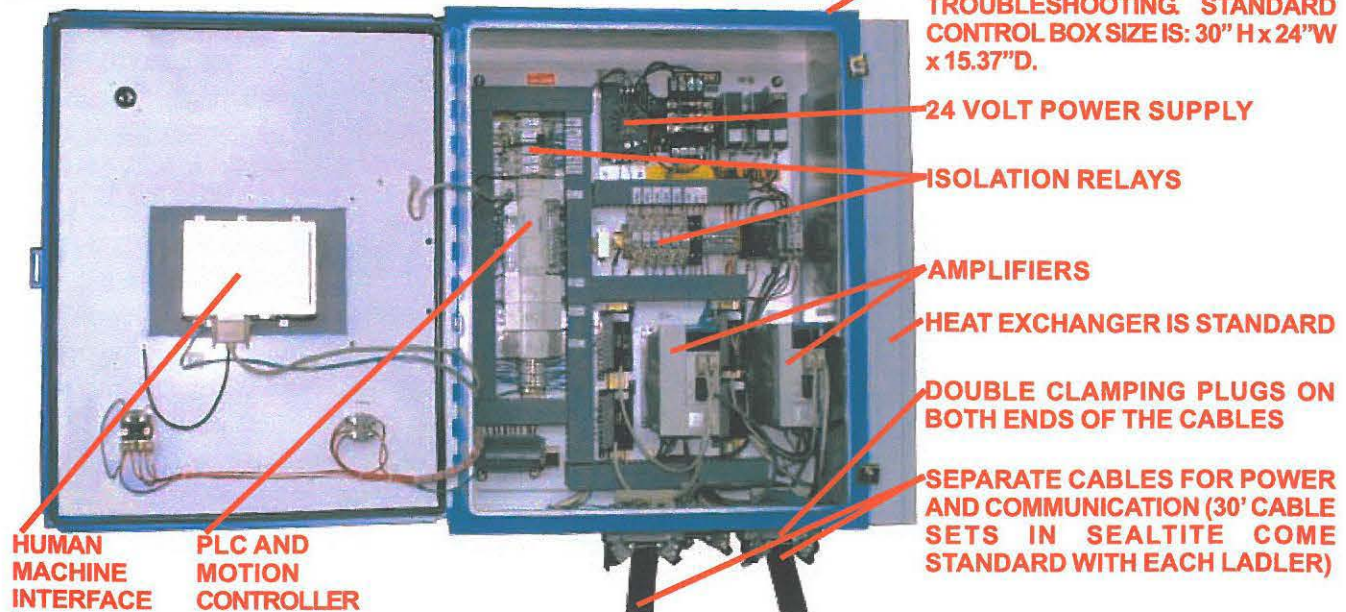


Mechanical Photos

LADLER MAJOR PARTS
SL-650 / SL-1200 / SL-1500

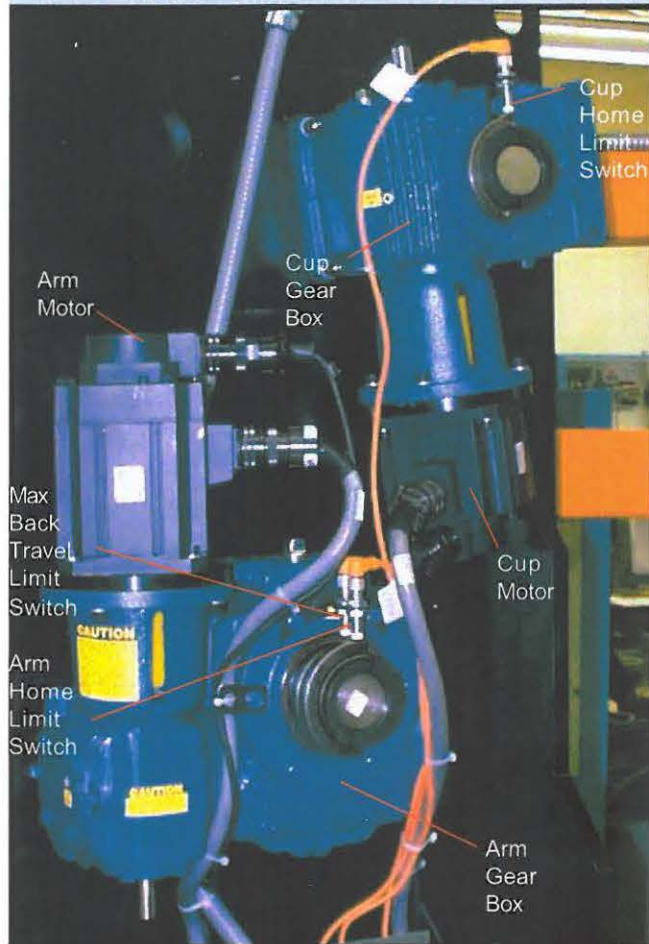

Direct Drive Systems with Servo Motor and Encoder Mounted Directly to the Gear Box

Massive Arm Links with Timken Tapered Roller Bearings at Each Joint

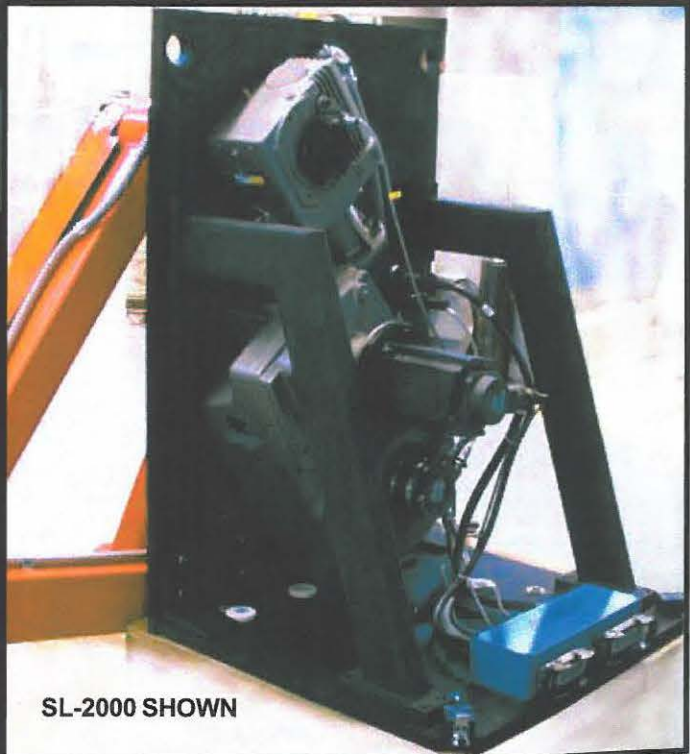

Features And Specifications

Sizing Your Ladler Needs

QUICK REFERENCE LADLER SIZING MATRIX										
400T	600T	800T	1000T	1200T	1400T	1600T	2000T	2500T	3000T	3500T
SL-650										
	SL-1200									
	SL-1500									
				SL-2000						
						SL-3000				
									SL-4000	

Advance makes an SL-1400 for 800-1400T DCM with launder systems.

How do I know what ladler size is the correct one for my application? The Quick Reference Ladler Sizing Matrix chart will get you to the general area.

Now determine what your maximum shot size is.


15# _____
 25# _____
 50# _____
 100# _____
 175# _____

ADVANCE ladlers come in several live metal capacities, so check the one that matches your requirements. Now,

determine the stroke you need. The drawings on the next 2 pages give you the stroke. Here's where our planning sheet comes in handy. Just fill out a few dimensions, and we'll submit a 3-D drawing for your review.

Pouring height from the furnace makes a difference. ADVANCE has both standard (level pour) and low pour ladlers where the metal pour position is lower than the metal level. In extreme cases, for those customers who want to pour from a ladler system to larger size die casting machines, say 1200 ton, ADVANCE offers the SL-1400 ladler which has a metal height range of almost 5 feet!

ADVANCE offers several choices of tilting bases as part of the ADVANCE ladler system. The tilt bases allow for easy pouring position adjustment. See the section on pedestals and tilts for more information.



Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
 Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

LADLER - PLANT SURVEY

Return to Sales Department: _____
 Date: _____

Company Name: _____

Contact Person: _____

Address: _____ City: _____

State/Zip: _____

Phone: _____ Fax: _____

E-mail Address: _____

DCM Manufacturer: _____

DCM Model: _____ DCM Tonnage: _____

Approx. max. shot size (weight): _____

Plant Voltage(circle one): 208 230 380 440 460 480 575 other: _____

DCM I/O signal voltage: 24vdc 120Vac

Cable Length: (Power & Control) 30' Standard. Cable Length (Power & Control) Nonstandard length: _____ Note: (Additional cable length may incur extra charge.)

Remote Operator Cable Length is Standard at 30'. Consult sales department if you need a special cable length.

Which side of DCM is the dip well on: Operator Helper

Are there any obstructions between the dip well and DCM? _____

Please add additional pertinent information below and fill in the dimensions highlighted with red arrows on the back side of this form. Thanks!






Your "Window to the World"® of Die Casting Automation and Consumable Products

5-11-04

Layout And Specifications


3-D Views of Typical Ladler Layouts We Do For You!

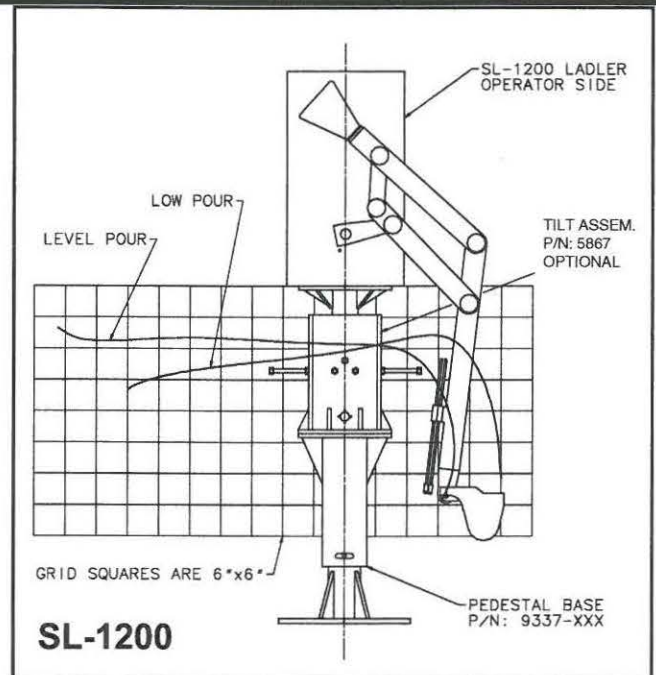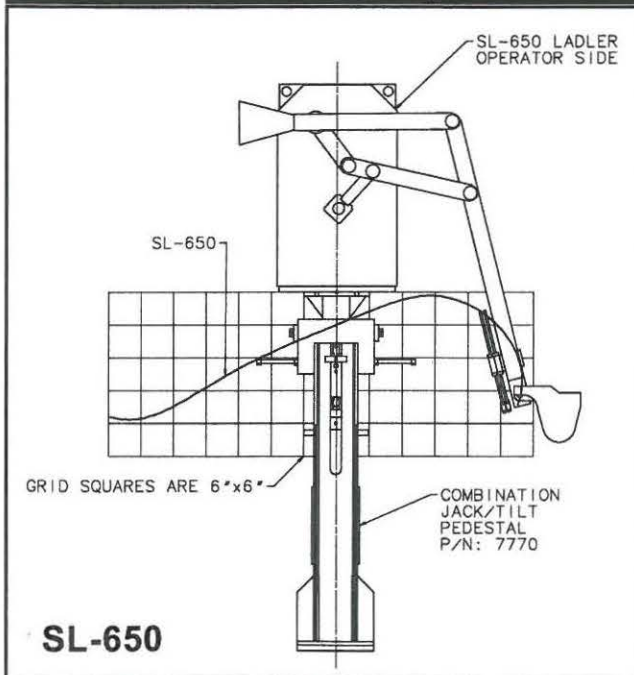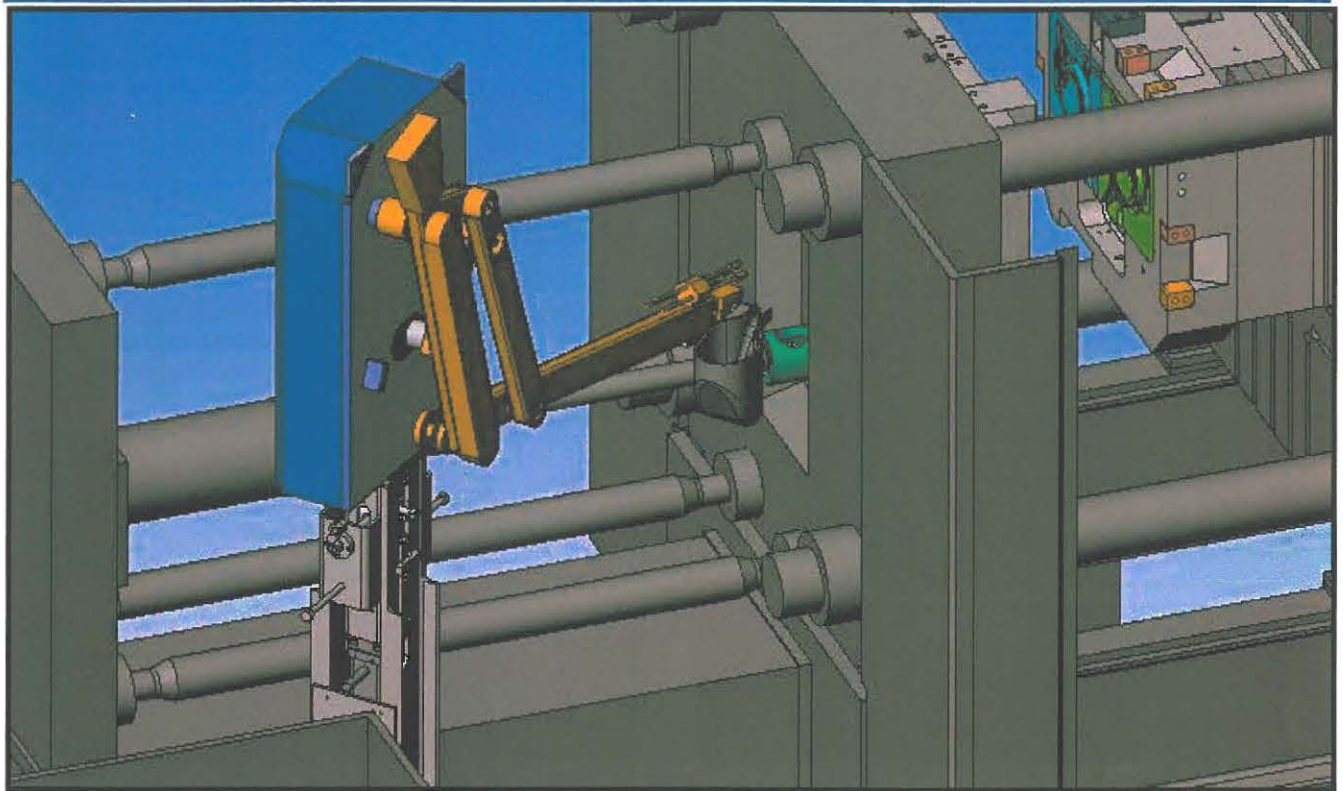

Total Stroke - Max.	69.2 in. (176 cm)
Forward Stroke - Max.	35.5 in. (90 cm)
Live Weight Metal	15 lb. (6.8 Kg)
Reach Back (Furnace)	33.7 in. (86 cm)


	LEVEL POUR	LOW POUR
Total Stroke - Max.	71 in. (180 cm)	72 in. (183 cm)
Forward Stroke - Max.	50 in. (127 cm)	42 in. (107 cm)
Live Weight Metal	25 lb. (10 Kg)	25 lb. (10 Kg)
Reach Back (Furnace)	21 in. (53 cm)	30 in. (76 cm)

Specifications

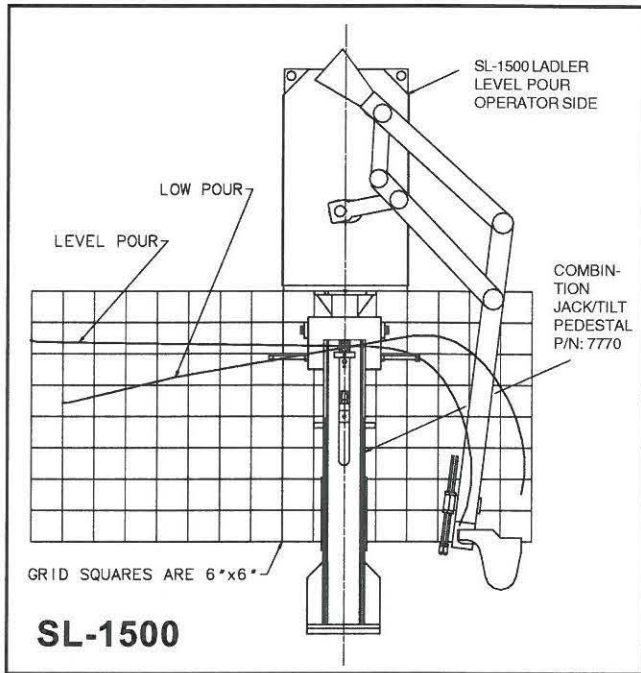


SL-1500

	LEVEL POUR	LOW POUR
Total Stroke - Max.	88.5 in. (225 cm)	92 in. (234 cm)
Forward Stroke - Max.	63 in. (160 cm)	56 in. (142 cm)
Live Weight Metal	25 lb. (10 Kg)	25 lb. (10 Kg)
Reach Back (Furnace)	25.5 in. (65 cm)	36 in. (91 cm)

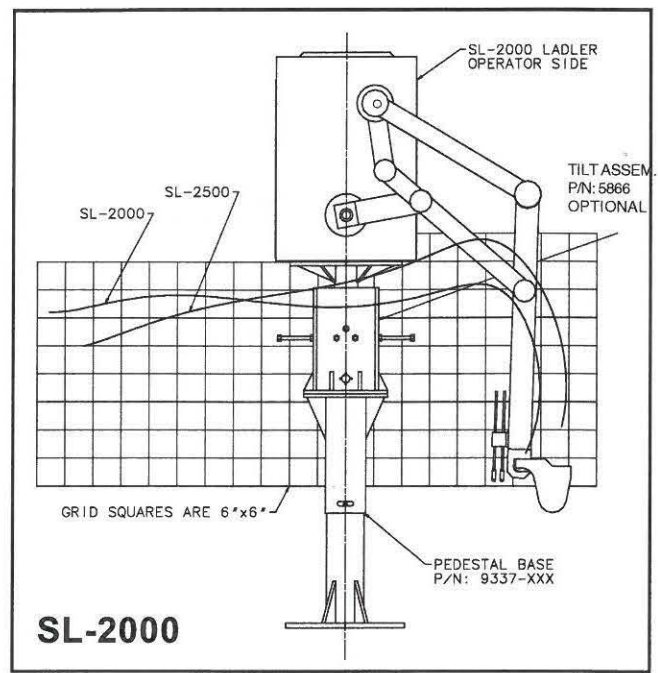


SL-2000

MODEL NUMBER	SL-2000 (Lev)
Total Stroke - Max.	104.8 in. (266 cm)
Forward Stroke - Max.	63 in. (160 cm)
Live Weight Metal	50 lbs. (23 Kg)
Reach Back (Furnace)	41.8 in. (106 cm)

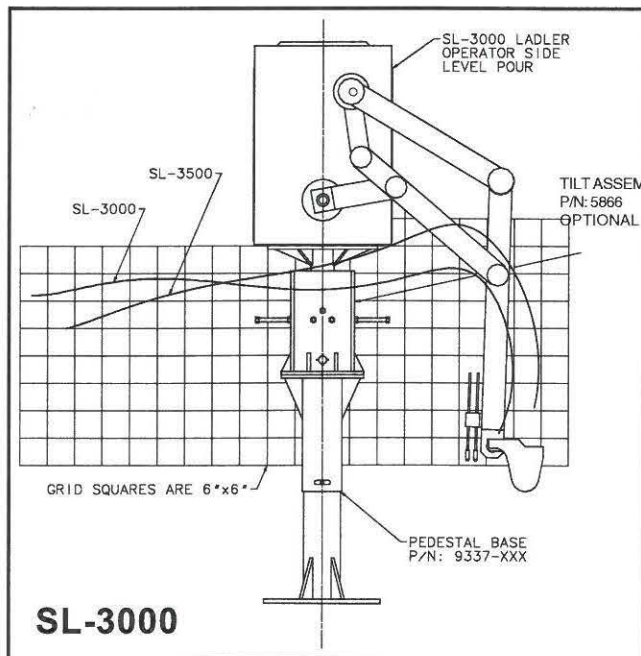


SL-3000

MODEL NUMBER	SL-3000 (Lev)	SL-3500 (Low)
Total Stroke - Max.	104.8 in. (266 cm)	102.5 in. (260 cm)
Forward Stroke - Max.	63 in. (160 cm)	55.5 in. (141 cm)
Live metal weight	100 lbs. (45 Kg)	100 lbs. (45 Kg)
Reach back into furnace	41.8 in. (106 cm)	47 in. (119 cm)

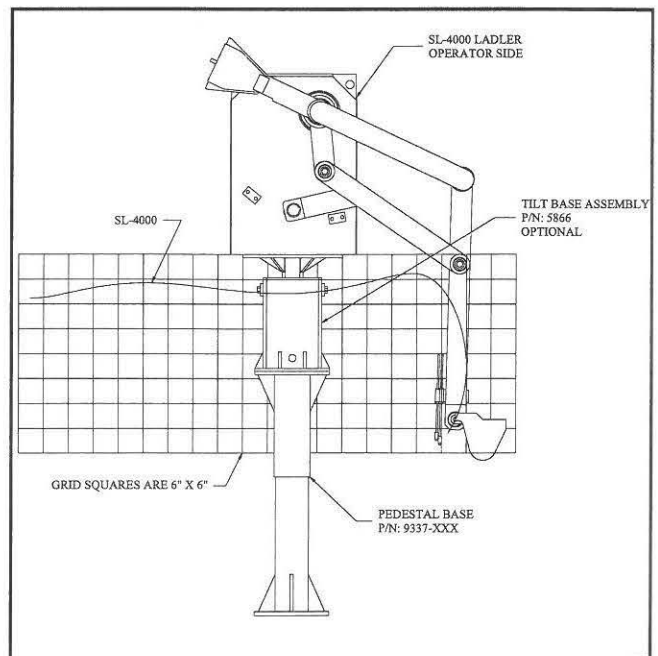

MODEL NUMBER	SL-4000 (Lev)
Total Stroke - Max.	104.8 in. (266 cm)
Forward Stroke - Max.	63 in. (160 cm)
Live Weight Metal	175 lbs. (80 Kg)
Reach Back (Furnace)	41.8 in. (106 cm)

Pedestals

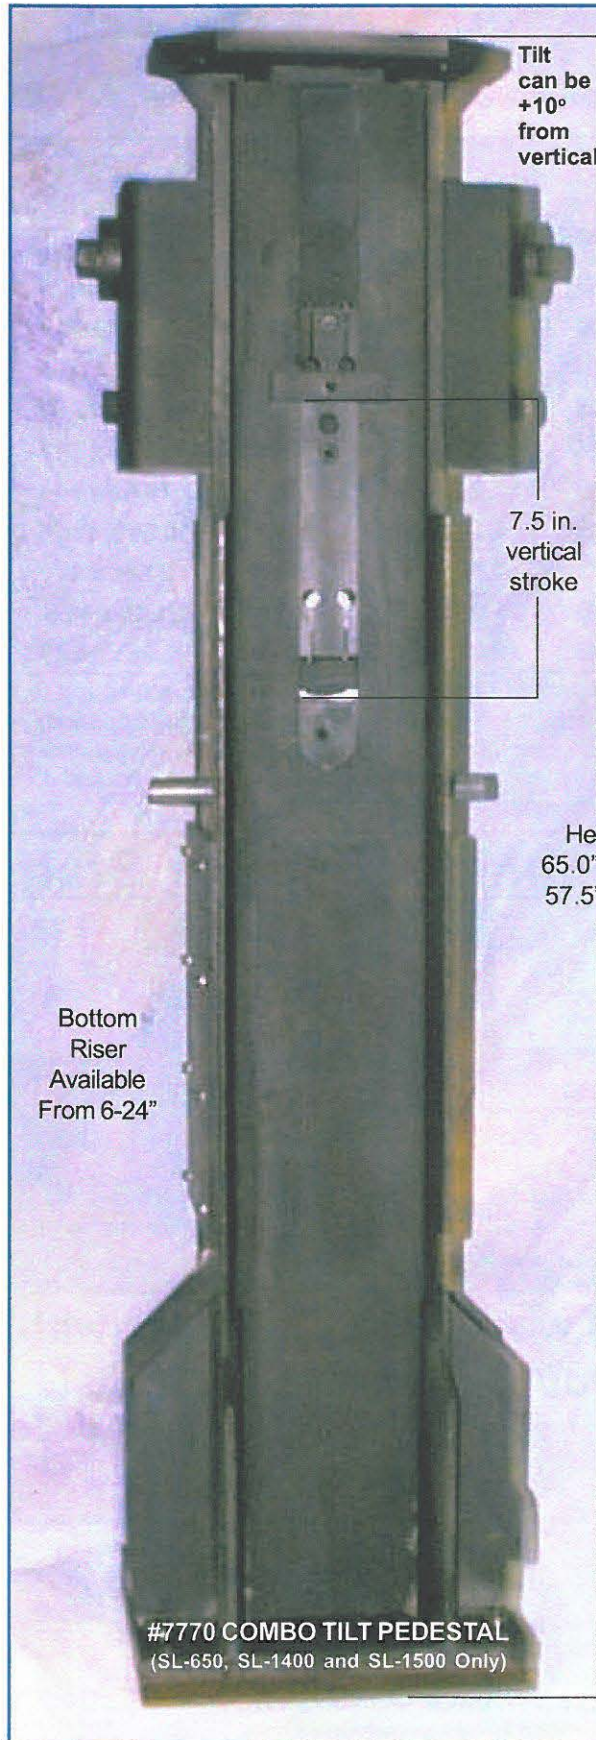


Tilt can be +10° from vertical

7.5 in. vertical stroke

Height 65.0" max. 57.5" min.

Bottom Riser Available From 6-24"

#7770 COMBO TILT PEDESTAL
(SL-650, SL-1400 and SL-1500 Only)

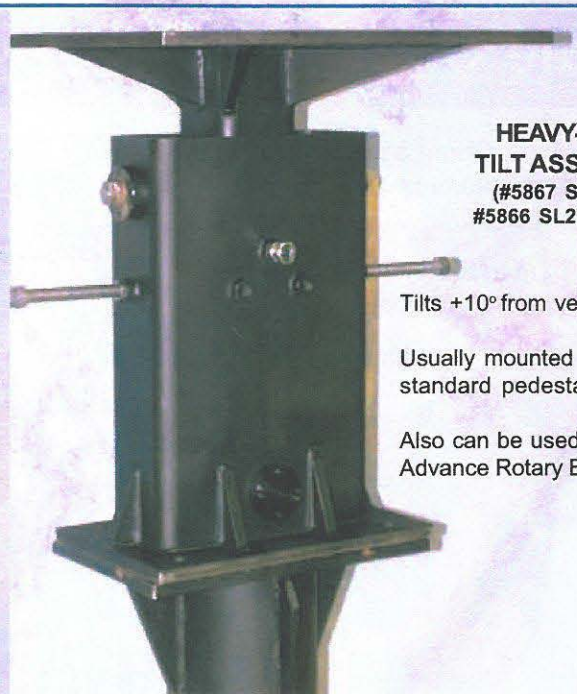


HEAVY-DUTY TILT ASSEMBLY
(#5867 SL-1200, #5866 SL2000/3000)

Tilts +10° from vertical.

Usually mounted on a standard pedestal.

Also can be used with an Advance Rotary Base.

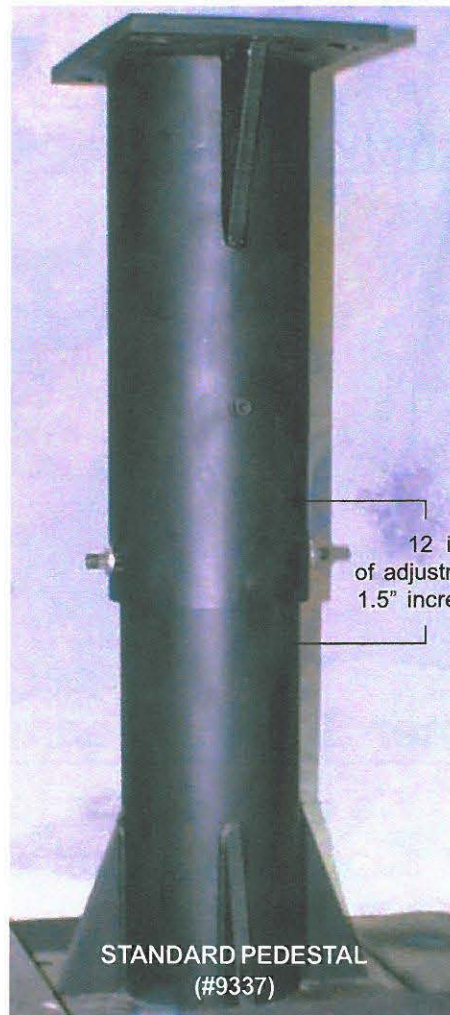

7 sizes

- Collapsed Ht
- 36-1/2"
 - 42-1/2"
 - 48-1/2"
 - 54-1/2"
 - 60-1/2"
 - 66-1/2"
 - 72-1/2"

12 in. of adjustment in 1.5" increments

STANDARD PEDESTAL
(#9337)

Technical Support

Ladle Cups

Advance Quick-Change Ladle Cups' pin-mount design means no tools are needed for changing cups.

Ladles are 1/4 to 5/16-inch thick, heat-treated cast iron for long life.



Made in the USA.


Sizes are available in both operator or helper side.

LADLE CUP # (Operator)	LADLE CUP # (Helper)	Rated Capacity		Minimum Furnace Size	
		in Kg	In Lbs.	(Round) 45° Angle of Entry	(Square) 45° Angle of Entry
0.5A	0.5B	0.5	1.1	17.25"	17.13 x 11.75
1.0A	1.0B	1.0	2.2	18.31"	18 x 12.13
1.5A	1.5B	1.5	3.3	18.75"	18.5 x 12.34
2.0A	2.0B	2.0	4.4	19.6"	19.25 x 13.25
2.5A	2.5B	2.5	5.5	19.75"	19.32 x 13.18
3.0A	3.0B	3.0	6.6	20"	19.69 x 14
3.5A	3.5B	3.5	7.7	20.45"	19.69 x 14.25
4.0A	4.0B	4.0	8.8	21.45"	20.84 x 16
6.0A	6.0B	6.0	13.2	22.5"	21.68 x 16.9
8.0A	8.0B	8.0	17.6	23.25"	22.28 x 18.13

Call us for additional information for new laminate ladle cups to 100# metal capacity. (New large cups are made with a steel fabric body that has a long life in molten aluminum. The cups have non-wetting surfaces that are resistant to thermal shock and breakage. The cups also insulate metal from heat loss during the delivery cycle for uniform product.)

Extensive Manuals

Technical Service Staff

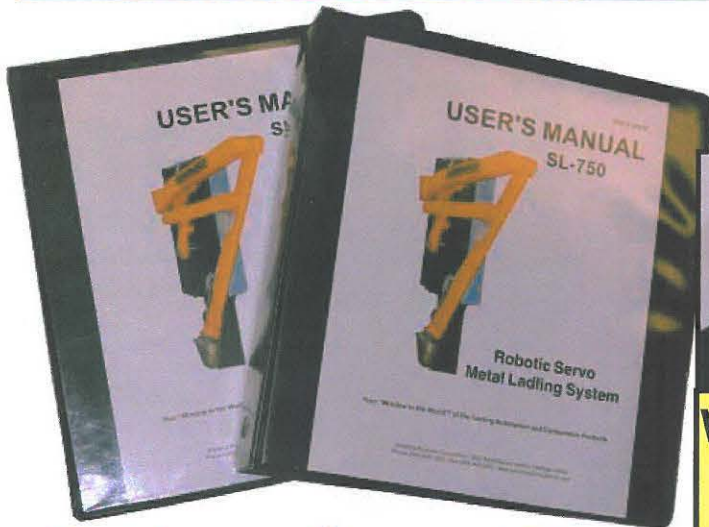

Customer Support Team

We would like to partner with you on your ladler needs!
Give us a call!
1-269-849-1000

It's free! - We don't charge for phone support. Call us!
1-269-849-1000

Advance

Specifications are subject to change without notice.

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
 Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
 Printed in U.S.A.
 APC-100-2006

Automation Misc.

- Kawasaki Robots
- Kawasaki "D" Controller
- Robot Grippers
- Mini-Max Reclaimers
- Central Lube Systems
- Tool Temp Oil Temperature Control Units
- Electronic Bacteria Killers
- Stationary Casting Coolers
- Vertical C-Frame Trim Press
- Safety Signage

Advance[®] automation

Die Cast Extractor - Kawasaki ZX165 Industrial Robot



The Kawasaki Die Cast Extractor™ Model ZX165 was specifically designed to meet the challenging requirements of the die cast environment. The six-axis servo controlled robot carries a maximum static payload of over 300 lbs. The industry proven C Series controller is flanked by a hand held LCD Multifunctional Touch Panel that is the most user-friendly panel of its type in the die casting industry.

DIE CASTING FEATURES

- **IP-67 rated wrist and IP-65 rated Arm**
- Unique Hybrid Link for greater overhead reach
- 165 kg (363 lbs.) static payload - #1 in the Die Cast Industry
- Special Die Cast Software - Die Helper™
- Special seals and bearings designed for the rigorous Die Cast environment

MECHANICAL SPECIFICATIONS


- | | |
|---------------------------|---------------------------|
| • Model Type | ZX165 |
| • Servo Axis | 6 revolute axes |
| • Wrist Rating | IP67 |
| • Arm Rating | IP65 |
| • Maximum Rotary Velocity | 5000 mm/sec (210 in/sec) |
| • Maximum Static Payload | 165 kg (363 lbs.) |
| • Maximum Reach | 2879 mm (113 in) |
| • Repeatability | +/- .30 mm (.012 in) |
| • Positioning Feedback | Absolute Encoder |
| • Drive Motors | Brushless AC Servo Motors |
| • Machine Weight | 1500 kg (3300 lbs.) |

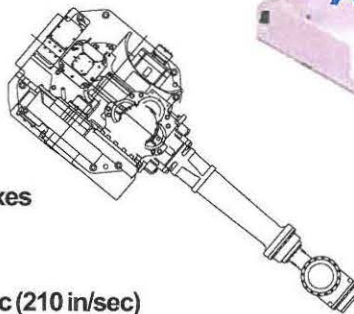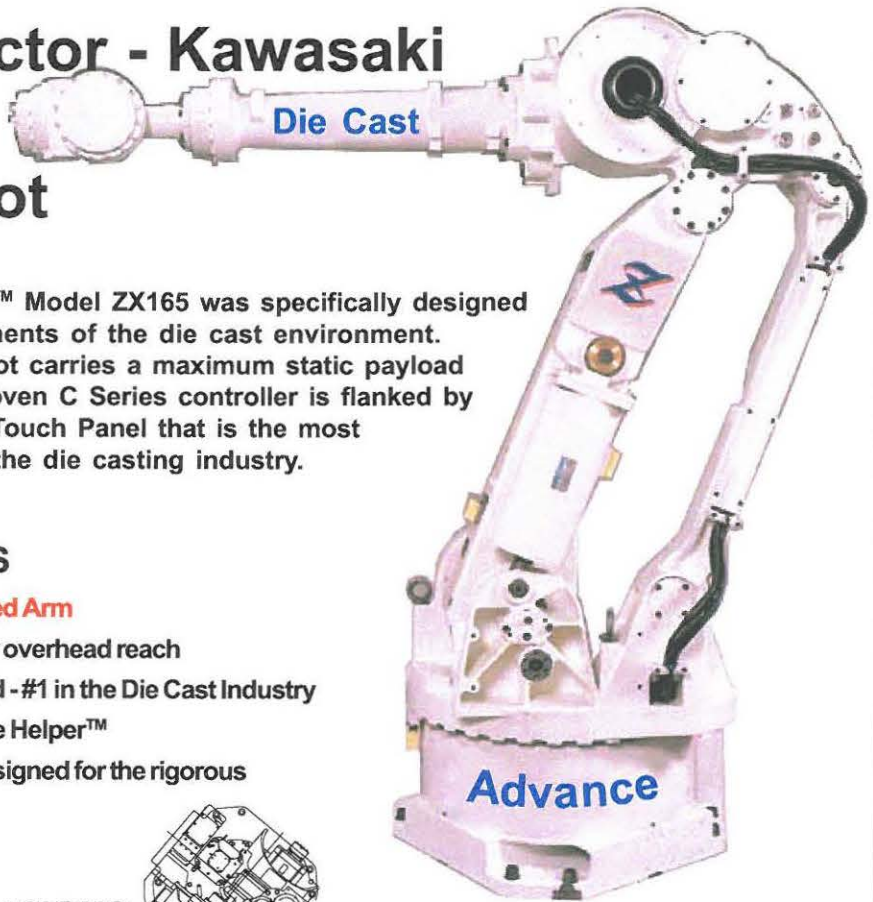

**DIE CAST
EXTRACTOR**

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

Automated Die Cast Workcells

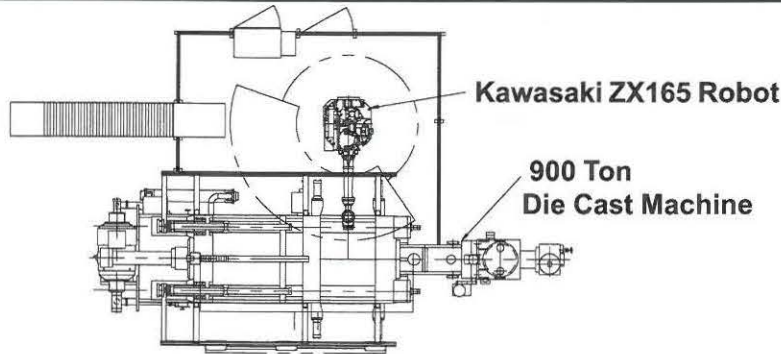


Simple Extraction


- ZX165 Robot
- Safety Equipment
- Output Conveyor
- Integration

Extraction With Cooling

- ZX165 Robot
- Safety Equipment
- Output Conveyor
- Air Casting Cooler
- Integration

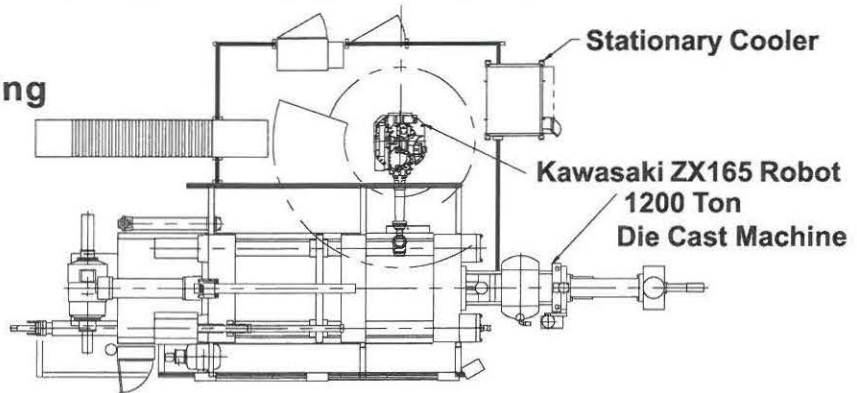

Trim Press

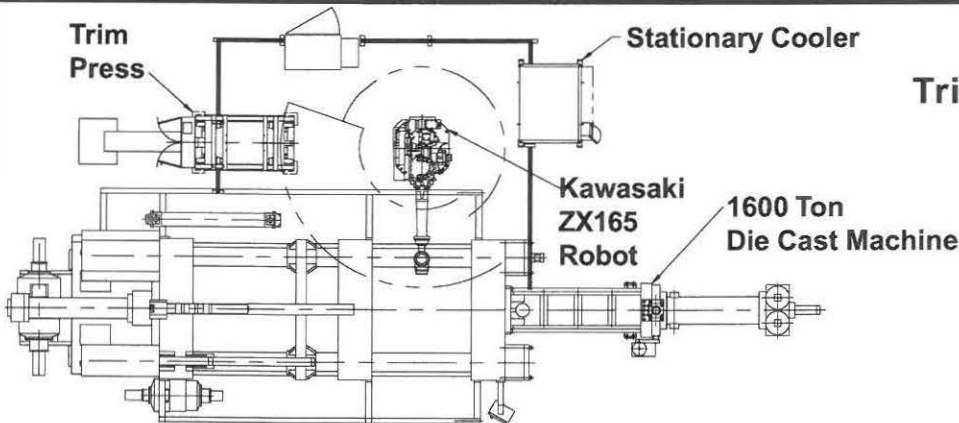

Trim Cell

- ZX165 Robot
- Safety Equipment
- Output Conveyor
- Air Casting Cooler
- Programmable Trim Press
- Integration

Digital Servo
Reciprocating
Sprayers



Specifications are subject to change without notice.

ADVANCE AUTOMATION EQUIPMENT

ADVANCE manufactures a broad assortment of die casting peripheral equipment including ladlers, sprayers, die temperature control units, central lube systems, trim presses, casting cooler systems and consumable products.

ADVANCE can satisfy all of your die casting automation needs.

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com



Digital Servo
Ladlers

©Advance Products Corporation
Printed in U.S.A.

Advance[®]

consumables

ROBOTIC PNEUMATIC GRIPPER





APC # 100-0288

- **Universal -**
 - Applies to ALL Major Robots
 - Right or Left Hand Extraction
 - Heavy Duty Welded Construction
 - Equipped with Feedback Controls:
 - Jaw Open
 - Jaw Close
- **Powerful -**
 - Total Clamping Pressure Exceeds 300 #.
 - Biscuit Size: 2.88" to 4.62" Diameter with over 50 # Capacity (Total Shot Weight).
- **Rugged -**
 - Designed for a Harsh Die Cast Environment - All Internal utilities (electric and pneumatic are physically contained.)
- **Lightweight -**
 - Aluminum and Steel Construction
- **Epitome of Simplicity -**
 - Bolts Quickly and Easily to Robot Wrist

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

Features

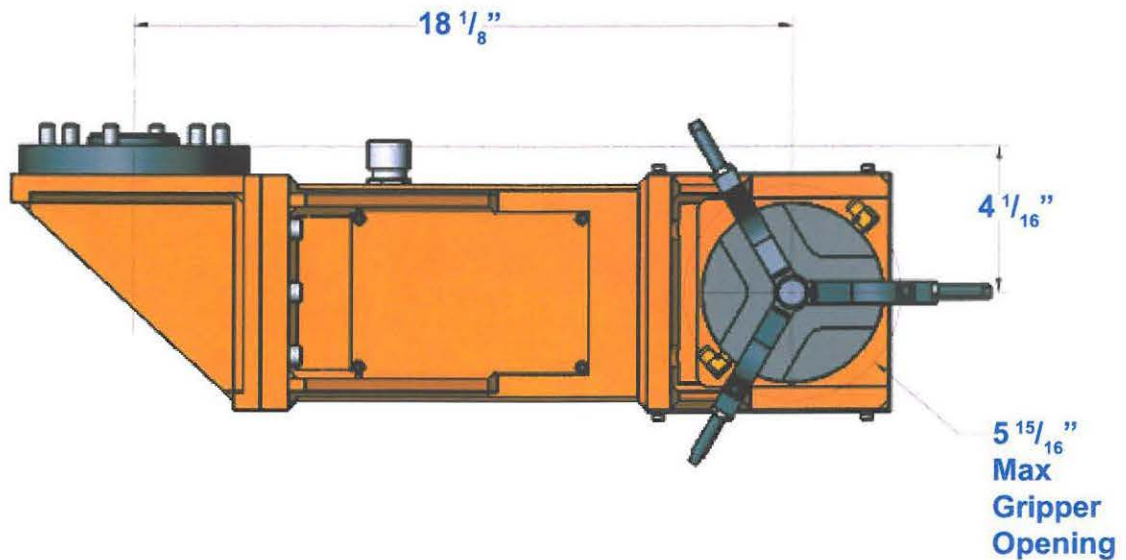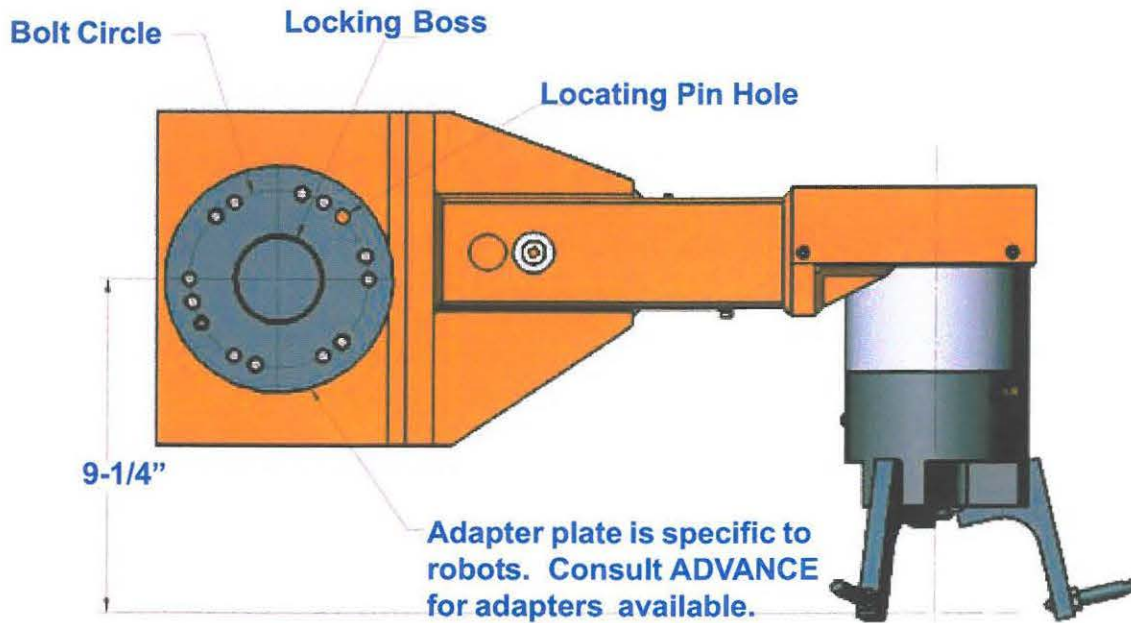

Advance

Specifications are subject to change without notice.

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
Printed in U.S.A.
APC-100-2002

Advance[®] automation

ON-LINE DIE LUBE RECLAIMING SYSTEM



MINIMIZE

- OPERATING COSTS
- DIE LUBE OVERHEAD
- DIE LUBE DISPOSAL COSTS
- SHOP HAZARDS

MAXIMIZE

- PRODUCTION TIME
- EQUIPMENT LIFE
- DIE LUBE LIFE
- SAFETY

Your "Window to the World"[®] of Die Casting Automation and Consumable Products


Tests have shown that only half of the spray die lube ever reaches the die itself. This wasted die lube, instead of doing its intended job, settles onto the base of the die-casting machine, where it mixes with the accumulated grease, spit metal, flash, and other contaminants.

The reclaimer catches the used die lube as it drains from the die-casting machine. Before the die lube drains into the holding tank, it passes through a metal catch-pan that keeps larger spit metal from entering the tank. A fine-mesh filter screen at the inlet to the diaphragm pump prevents sludge, and other debris that has settled in the bottom of the holding tank, from entering the pump.

The circulating die lube flows through two spin-on-type filters that remove suspended particles from the liquid. This filtering action is continuous, even while the sprayers are turned off.

"The Mini-Max Reclaimer is the most useful piece of equipment to come along in years" say many of our customers. If you want to increase die lube life, save up to 40% of your die lube costs, reduce disposal costs, reduce frustrating down time due to clogged spray heads and premature equipment wear, it makes sense to purchase the Advance "Mini-Max Reclaiming System"

The Advance Products "Mini-Max Reclaiming System" is an efficient and unique recycling unit that collects virtually all of the sprayed die lube, filters out the impurities, and pumps it back into the lube system for use. It consists of a 15-gallon stainless steel tank that acts as a reservoir to hold the collected die lube, a specially-designed diaphragm pump that pressurizes and circulates the die lube, and a 3-stage filtration system that continually cleans the circulating liquid. The system operates from a standard 110 VAC, 60 Hz line, and is space-efficient, measuring only 30"LX16"W x 21"H. The diaphragm pump is driven by a shop air compressor.

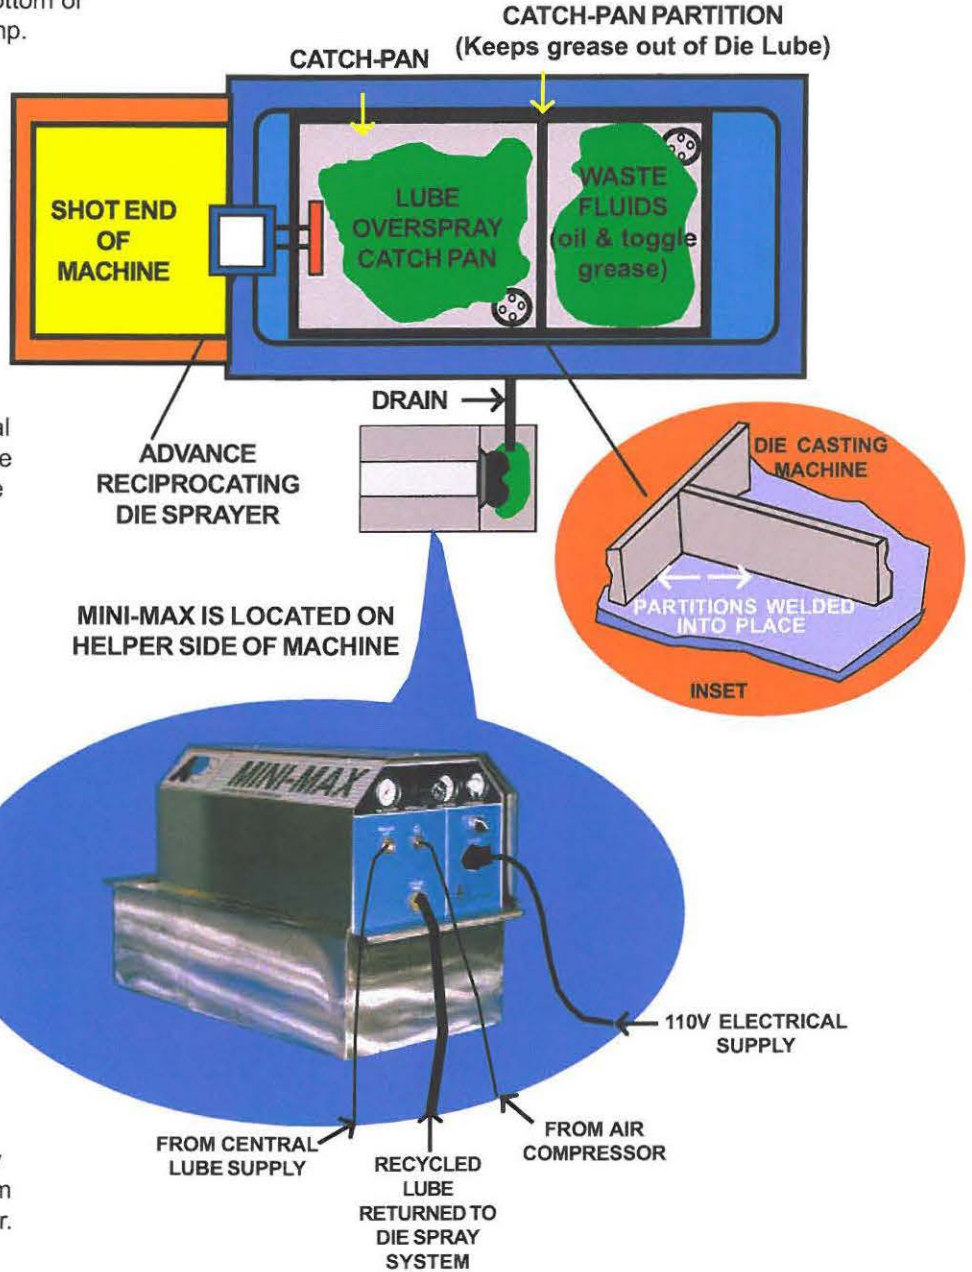

Typical Shop Setup Using A Die Casting Machine Catch-Pan

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
 Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
 Printed in U.S.A.
 APC-100-2002

Advance[®] automation



CENTRAL LUBE SYSTEMS

- A closed loop delivery system with batch blending.
- 500 gallons per hour mixing capacity and flow rates of 25 gpm to 115 gpm.
- Automatic pumping from tote or drum with digital display of the inventory.
- Two diaphragm pumps as standard with automatic switching valves.
- Backlit display indicates mixing ratio, inventory, flow rates and error messages.
- Stainless steel construction with PVC and brass components.

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

Features



Float Switches

Stainless Steel floats control the blending process and verifies proper tank levels.

Bacteria Killer

Optional Electronic Bacteria Killer.



Dual Air Diaphragm Pumps

Closed loop circuit provides continuous circulation to the network of machines. Dual pumps allow pump maintenance during system operation.




Metering Pump

Stainless Steel metering pump dispenses desired ratio of lube concentrate to the required amount of water with digital accuracy.

Sample Plant Layout

NOTE: For a closed loop delivery system, we suggest the use of PVC, Copper or Stainless Steel for the lines. The minimum size is 1-1/2" NPT for the delivery line and 3/4" NPT for the return line.

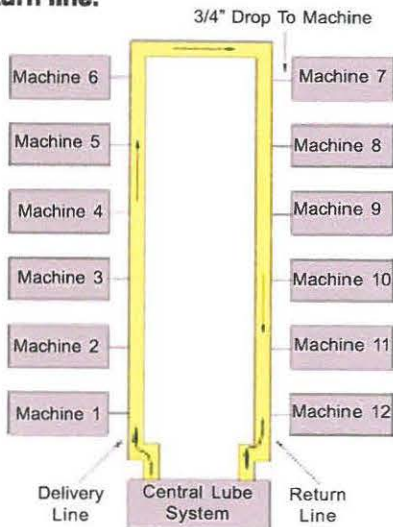

Technical Specifications

Model:	45PE	90PE	150PE	300PE
Tank Capacity	45 gal.	90 gal.	150 gal.	300 gal.
Diaphragm Pumps	1" ARO	1-1/2" ARO	1-1/2" ARO	2" ARO
Max Pump Pressure	110 psi	110 psi	110 psi	110 psi
Max Flow Rate	25 gpm	90 gpm	90 gpm	115 gpm
Max Blending Rate	500 gph	500 gph	500 gph	500 gph
Mixing Ratio (Std)	20-100:1	20-100:1	20-100:1	20-100:1
(Opt)	5-20:1			
(Opt)	100-300:1			

System Dimensions

Length	43"	43"	64"	72"
Depth	24"	24"	34"	44"
Height	53"	53"	61"	73"

Advance

Specifications are subject to change without notice.

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
Printed in U.S.A.
APC-100-2002

Advance[®] automation

ELECTRONIC BACTERIA KILLER



REDUCE

- Clogged sprayheads due to bacteria growth
- Chemical additives that produce health and safety hazards
- Odors from untreated water and die lube
- Maintenance costs due to premature machine deterioration

PRODUCE

- *BACTERIA-FREE DIE LUBE*
- *A CHEMICAL-FREE ENVIRONMENT*
- *LOWER OPERATING COSTS*
- *GREATER SAVINGS*

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

The Main Problem


Most die-casting companies know that biodegradable lubricants are a fine substitute for the older, chemical types, which caused both environmental and health safety problems. But, while the switch to biodegradable die lubes has helped solve these types of problems for the die-casting industry, it has also presented another problem: the growth of bacteria. All biodegradable die lubes are a good medium for supporting bacteria growth. As experience has shown us, when bacteria grows unchecked, sprayheads become clogged, filters become plugged, lube valves become sluggish, and unpleasant odors build. As these problems increase, so do the costs for downtime maintenance to flush out central lube systems and for adding new die lube. And the cycle only starts all over again. Up to now, there was not much that could be done to solve the problem. Not until Advance Products Corporation developed the "Electronic Bacteria Killer."

Space-Age Technology

The Advance Electronic Bacteria Killer is a state-of-the-art system that is designed to eliminate bacteria from its liquid environment and keep it from reforming. Originally developed for the entire water system in NASA's space shuttle program, (including the Astronaut's drinking water), the system also eliminates and prevents the further growth of bacteria in die lube.

How it Works

The heart of the Electronic Bacteria Killer consists of a high-quality electrode assembly that mounts to a galvanized steel, of PVC T-fitting. When the assembly is inserted into the return-flow line of your lube system (must be a closed-loop recirculating system) and electrical current is supplied to the electrodes, the die lube flowing over them becomes charged ("ionized"). This destroys the existing bacteria and prevents new growth from forming. The Electronic Bacteria Killer is the ideal product to use in quench-tanks and central coolant systems for secondary machining where bacteria, and its ever-present odors, are always a problem.

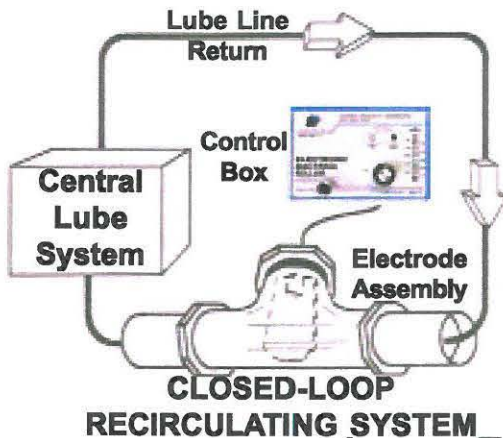

It's So Easy To Install And Use

The Electronic Bacteria Killer's control box easily mounts on any wall. It houses an 8-position electrical switch that you can use to regulate the amount of current flowing through the electrodes for just the right degree of control. An LCD (liquid-crystal display) shows you the amount of ionization that is occurring in the lube. You can translate the ion reading into a high, medium, or low bacteria level, using a chart that is provided in the User's Manual.

The control box measures 7-1/4"W x 4-5/8"H x 2-3/8"D, and operates from a standard 110/220 VAC, 50/60 Hz power source. The electrode assembly fits into a 2-3/8" T-fitting. A threaded PVC T-fitting and two 1-7/8" to 2-3/8" PVC reducers are provided with the unit.

The Ideal Product

The Electronic Bacteria Killer is an ideal product for any shop that uses die lube. It will pay for itself in a very short time by eliminating bacteria and preventing its return. Thus, you save money because machinery runs more efficiently, and shop personnel remain safer. You will find that not only will die lube last longer, but the spray manifold nozzles, lube valves, and filters will remain cleaner. Isn't it time you installed one in your lube supply system?

Here are some customer comments we've received about our Electronic Bacteria Killer.

"The terrible smell from bacteria growth is finally gone."

"We have 3000 gallon water pits under our die casting machines. After one day we could already see that bacteria growth was being reduced."

"We've finally eliminated the bacteria problem that was clogging sprayheads in our reciprocator spray system. The Bacteria Killer has also reduced problems with plugged filters and lube valves."

"Our company is becoming more environment-conscious. The Bacteria Killer has helped us eliminate health and safety problems associated with chemicals in our shop."

"Our Advance Bacteria Killer has been in operation for two weeks and we've already eliminated the slime build-up and terrible odors that were so common in our shop's central lube system."

"We use the Electronic Bacteria Killer with our Advance Reclaimer and cycle the recharged die lube through it, thereby eliminating any smell in the Reclaimer system itself."

Note: This product is not suitable for conditions of very hard water. The Bacteria Killer will perform well if the lube system has a filter which will remove the dead bacteria growth and keep the die lube fresh. The Electronic Bacteria Killer is also a nice option on our Central Lube Systems. If you are considering upgrading your Central Lube Systems, you should also consider incorporating the Advance Electronic Bacteria Killer into the system.

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
Printed in U.S.A.
APC-100-2002

Advance[®] automation



TT-380 Single Zone

TOOL TEMP DIE TEMPERATURE CONTROL




TT-380/2 Dual Zone

- **Swiss Quality - The largest European manufacturer of temperature control units**
- **Single and dual zone units**
- **High temperature pump designed for 400°C (752°F)**
- **High temperature design, working oil temperatures to 360°C (680°F)**
- **Microprocessor control standard**


Your "Window to the World"[®] of Die Casting Automation and Consumable Products



**Expansion tank,
Heat exchanger,
and four
heating elements**

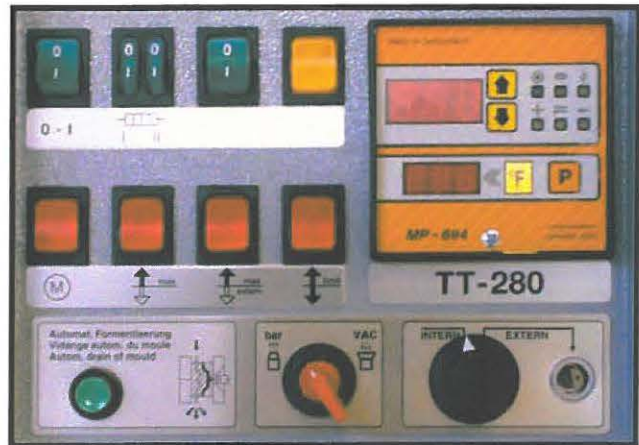

**Easy programmer.
It almost programs itself!**

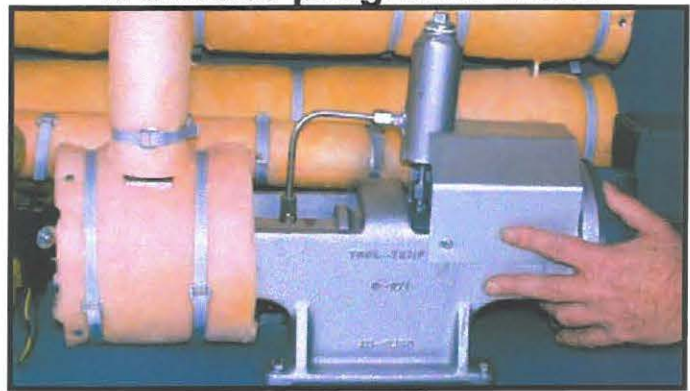

**Unique high temperature no leak pump
system - NO flow monitor needed!**

TECHNICAL DATA	TT-280	TT-280/2	TT-380	TT-380/2
Operating Temperature	250°C 485°F	250°C 485°F	360°C 680°F	360°C 680°F
Heating Capacity Per Zone	8 kw	8 kw	16,24, 32 kw	16, 24 kw
Cooling Capacity Per Zone	47 kw 160,000 BTU at 392°F 40,000 KCal/hr. at 200°C	47 kw 160,000 BTU at 392°F 40,000 KCal/hr. at 200°C	47 kw 160,000 BTU at 392°F 40,000 KCal/hr. at 200°C	47 kw 160,000 BTU at 392°F 40,000 KCal/hr. at 200°C
Pump Capacity Per Circuit	72 psi 18.5 gal/min	72 psi 18.5 gal/min	72 psi 18.5 gal/min	72 psi 18.5 gal/min
Expansion Tank	3.2 gal 12 liters	5.55 gal 21 liters	5.5 gal 20 liters	9.5 gal 35 liters
Oil Line Sizes	3/4" female thread	3/4" female thread	3/4" female thread	3/4" female thread
Waterline Sizes	1" male thread	1" male thread	1" male thread	1" male thread
Dimensions	38"L, 15.5"W, 43"H	46"L, 26"W, 51"H	44"L, 17"W, 59"H	45"L, 26"W, 51"H
Weight	285#	573#	435#	728#
Voltage Requirements Examples:	8kw @ 480VAC 13 Amps 8kw @ 600 VAC = 16 Amps.	16kw @ 600 VAC = 35 Amps.	32kw @ 480VAC 41 Amps 32kw @ 600 VAC = 33 Amps.	24kw @ 600 VAC = 51 Amps.

Specifications are subject
to change without notice.

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products
Corporation
Printed in U.S.A.
APC-100-2002


Advance[®] automation

STATIONARY CASTING COOLER



Your "Window to the World"[®] of Die Casting Automation and Consumable Products

Specifications and Additional Information

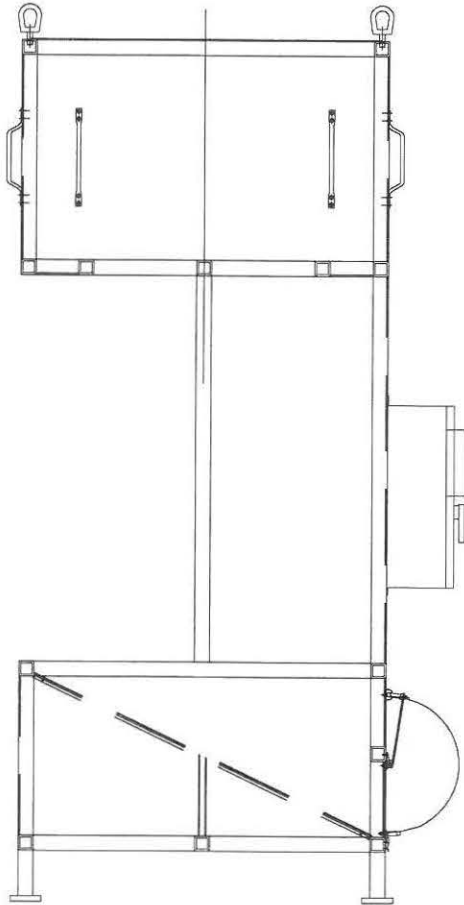

	English Units
Overall Size	69.00" x 59.00" x 118.50"
Weight	2450 lbs.
Part Cooling Area	61.00" x 40.00" x 51.00"
Drive System	(2) 1.5 HP, 1750 RPM Motors
Blower System	(6) 2650 CFM Delivery Each
Exhaust / Intake Panels	Included
Scrap Cleanout Access Gate	Included
Motor Starter and Disconnect	Included

Standard Available Options:

- Preengineering Services (Cooling Study & Demonstration)
- Part Hangers
- Part Present Sensors
- Pneumatic Grippers w/ Valving and Open/Close Sensors



Digital Servo Ladlers



Casting Cooler Control Panel



Digital Servo Reciprocating Sprayers

Advance

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
 Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

Specifications are subject to change without notice.

©Advance Products Corporation
 Printed in U.S.A.
 APC-100-2002

Advance[®] automation


40 TON VERTICAL C-FRAME TRIM PRESS



Trim Press
Operator Interface

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

Specifications and Additional Information

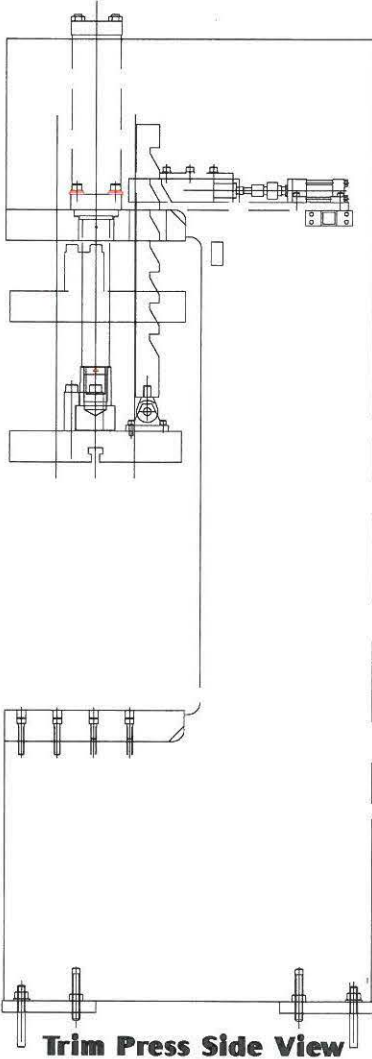


	English Units
Trimming Capacity	40 Ton
Overall Size	55" x 61" x 146"
Spacing Between Tie Bars	N/A
Tie Bar Diameter	3.75"
Stationary Platen Size	3-3/4" x 30" x 48"
Movable Platen Size	3-3/4" x 30" x 48"
Work Surface Height	39"
Die Stroke	24.00"
Die Opened Height	56.00"
Die Closed Height	32.00"
Die Approach Speed(High)	12"/Second
Die Trimming Speed(Low)	1"/Second
Die Retract Speed	12"/Second
Machine Weight	21,500 lbs.
Hydraulic System	30.6 Gallon/Minute, 2000 PSI
Motor Output	30 HP @ 1200 RPM

Standard Available Options:

- Automatic Bearing Lubrication
- Blowoff Utilities
- Core Cylinder Valving
- Interlocked Guarding
- Scrap Chutes
- Linear Transducer and Proportional Valve Control
- Touch Screen Programming



Digital Servo Ladlers

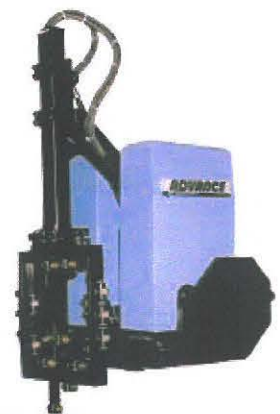

Digital Servo Reciprocating Sprayers

Advance

Specifications are subject to change without notice.

Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
 Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

©Advance Products Corporation
 Printed in U.S.A.
 APC-100-2002

Advance[®]

consumables


SAFETY SIGNAGE

Holes for assembly



Coated for Durability

Metal Backed

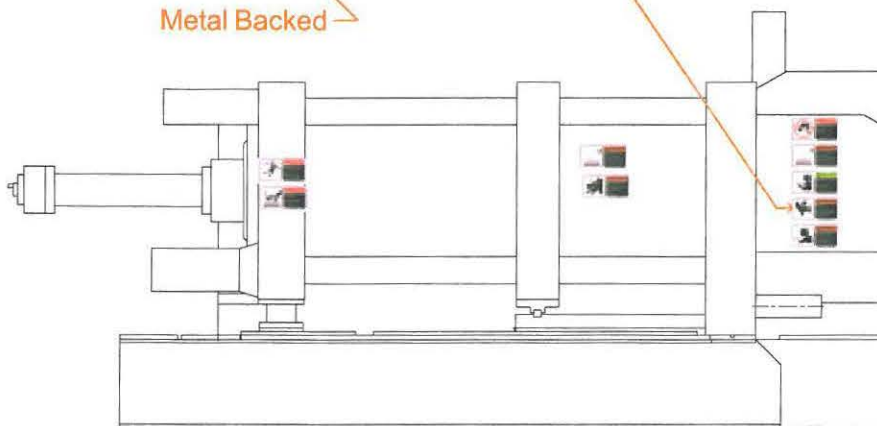

Die casting machine **SAFETY SIGNS** with metal backing meets **2004 safety requirements.*** Comes complete with all 16 required label and suggested mounting areas.

*OSHA safety requirements as defined by NADCA.

Your "Window to the World"[®] of Die Casting Automation and Consumable Products

Standard Package of 16 SAFETY SIGNS

SAFETY SIGN	SUGGESTED LOCATION
Danger - High Voltage	Electrical Cabinet and Door
Danger - High Speed Moving Parts	Gate, Guard or Machine Frame
Danger - High Voltage	Near Hot surface
Warning - High Temperature	Near Hot Surface
Caution - High Speed Moving Parts	DCM and Ancillary Equipment
Caution - Complex Machine w/ Hazards	DCM and Ancillary Equipment
Warning - Crushing Injury	DCM and Ancillary Equipment
Warning - Crushing Injury	Shot End
Warning - High Speed Moving Parts	Die Area and Die Space
Warning - High Pressure Accumulator	Shot End
Warning - High Speed Moving Machine(s)	Robot Operating Space
Warning - High Speed Moving Part In Molten Material	Shot End
Warning - High Speed Moving Robot	Robot Operating Space
Warning - Robot May Drop Load	Overhead Automation - All
Warning - High Speed Moving Robot	Safeguarded Space
Caution - Vapors and Fumes	Die Casting Workcell



Signs shown smaller than actual size of 3 3/4" x 7"
ADVANCE Part #10331 for a complete set of 16 SAFETY SIGNS

Advance

©Advance Products Corporation
 Printed in U.S.A.
 APC-100-2003

Specifications are subject to change without notice.


Advance Products Corporation - 2527 M-63 Benton Harbor, Michigan 49022
 Phone (269) 849-1000 - Fax (269) 849-2200 - www.advanceproductscorp.com

Automation

- Digital Servo Sprayers
- Digital Servo Ladlers
- Central Lube Systems
- Tool Temp Oil Temperature Units
- Die Lube Reclaimers
- Kawasaki Robots
- Bacteria Killers

Consumables

- Shot Sleeves
- Plunger Rods, tips
- Die Clamps
- Ladle Cups
- Hand Spray Guns
- Fountain Water Junctions

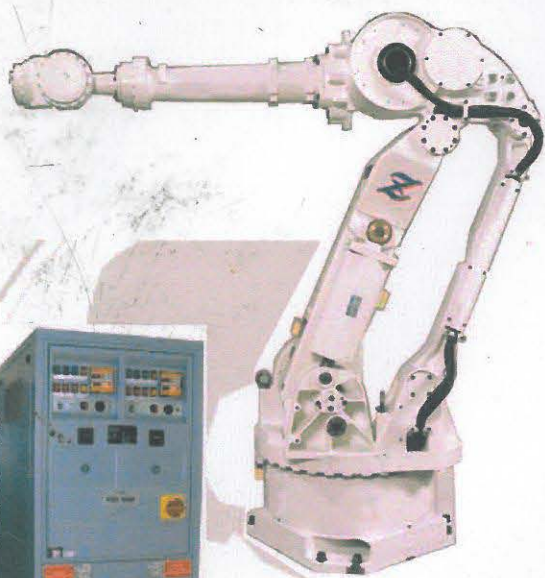

Kawasaki Robots



Digital Servo Ladlers



Tool-Temp Temperature Control Unit



Mini-Max Die Lube Reclaimer



Digital Servo Reciprocating Sprayers

